


SCROLLSAW PATTERNS:

 
Following are the full-size scrollsaw patterns for creating beautiful projects from our CD Scrollsaw Pattern Book.

Each pattern is shaded to make it easier to see where to cut and where not to cut.

To navigate from page to page, simply use the vertical scrollbar on the right hand side of the screen, or the “Go To” buttons |◀◀ ▶▶| located at the top and bottom of the screen.

To print, simply click on the “Printer Icon”  at the top of the screen, or choose “Print” from the “File” pull-down menu. Be sure to specify which page numbers you want to print, and the number of copies. You can determine the page number from the “Page #” box | **4 of 107** | at the bottom of the screen.

When finished, click the “First Page” button |◀ to go back to the beginning to choose another section to view.

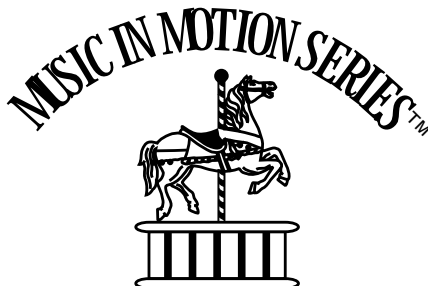

Simply click on the button of your choice.

INTRO

PHOTOS

HOW-TO

PATTERNS

 
MORE CD'S AVAILABLE

BACK TO START



Project #1





Arch
Stock: 1/4"

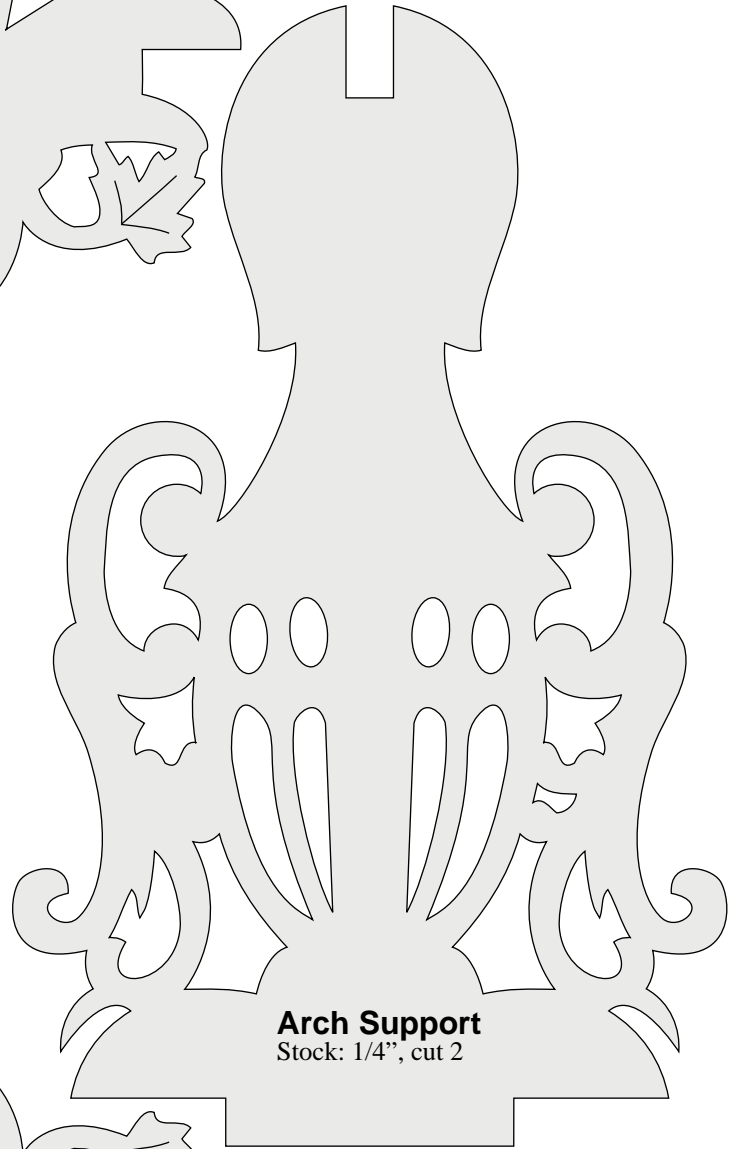


Arch Support
Stock: 1/4", cut 2

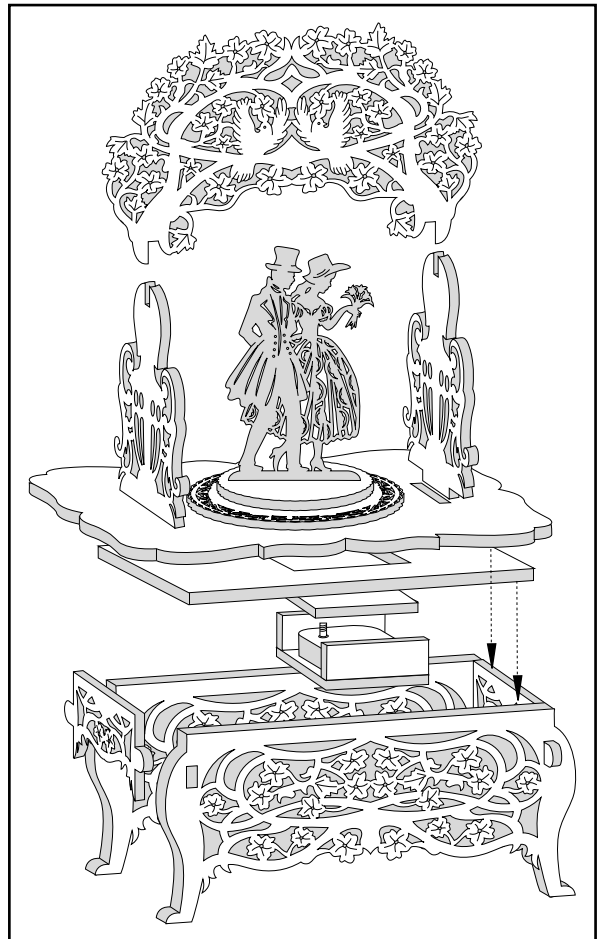  


Base Support
Stock: 1/4"

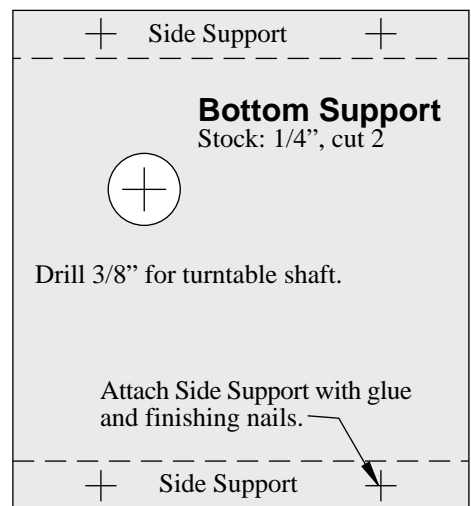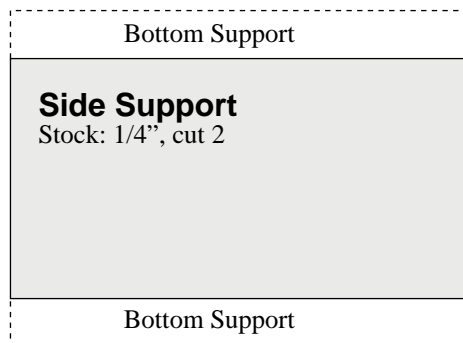  

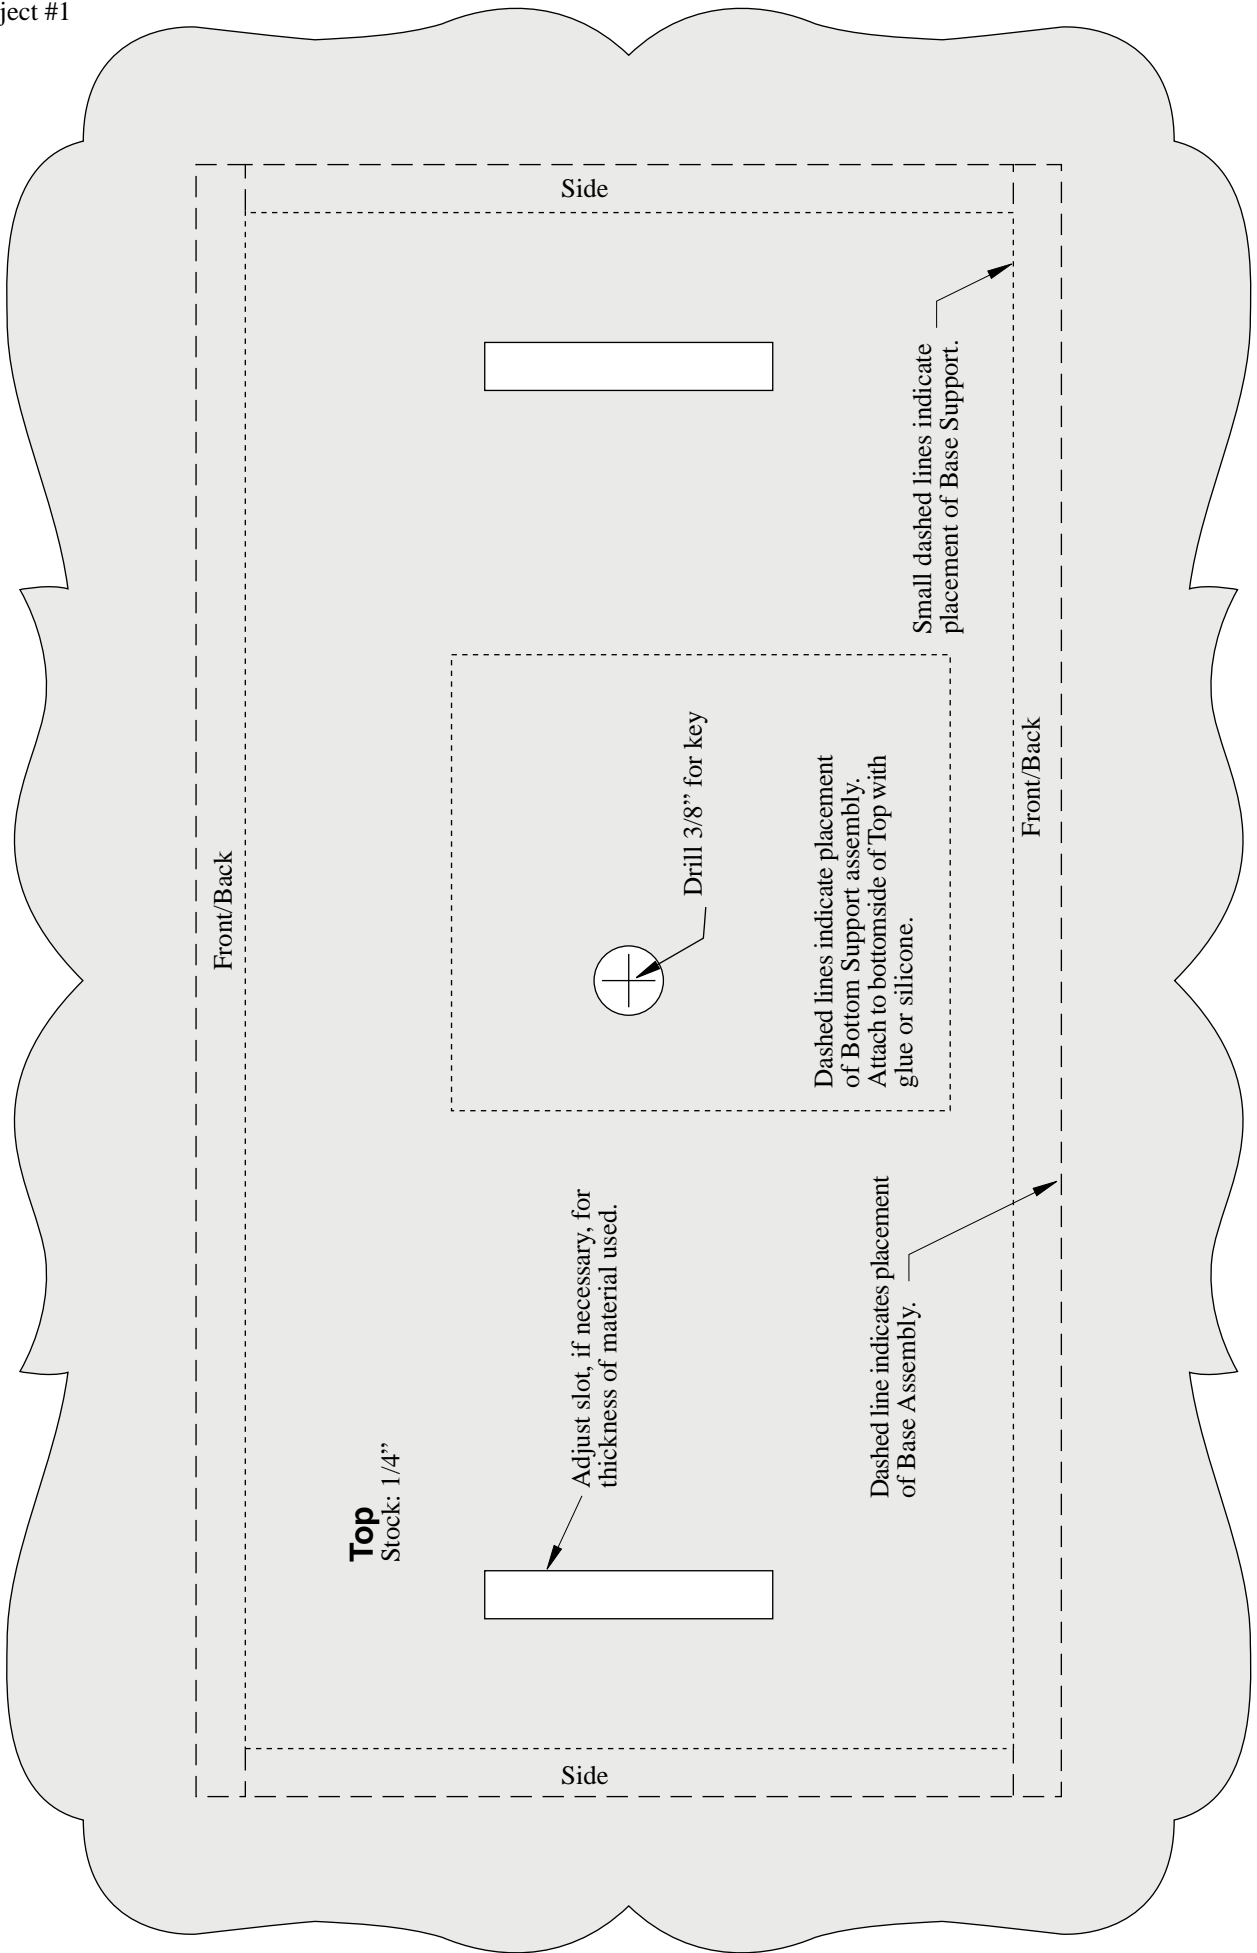 

Turntable

 Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

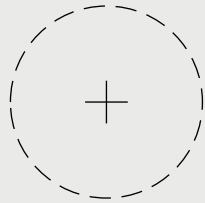

Dashed line indicates placement of Turntable Overlay.

Turntable Overlay

 
Stock: 1/4", Secure to the Turntable with glue or silicone.

Adjust slot if necessary for thickness of material used.




Side

Stock: 1/4", cut 2

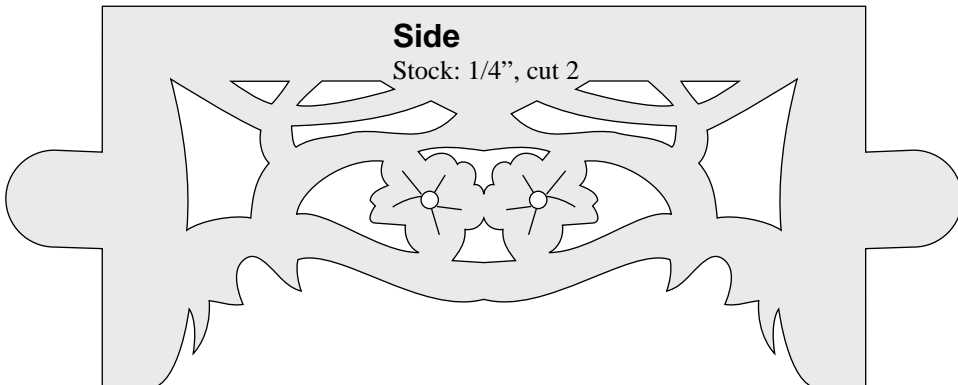

Project #1



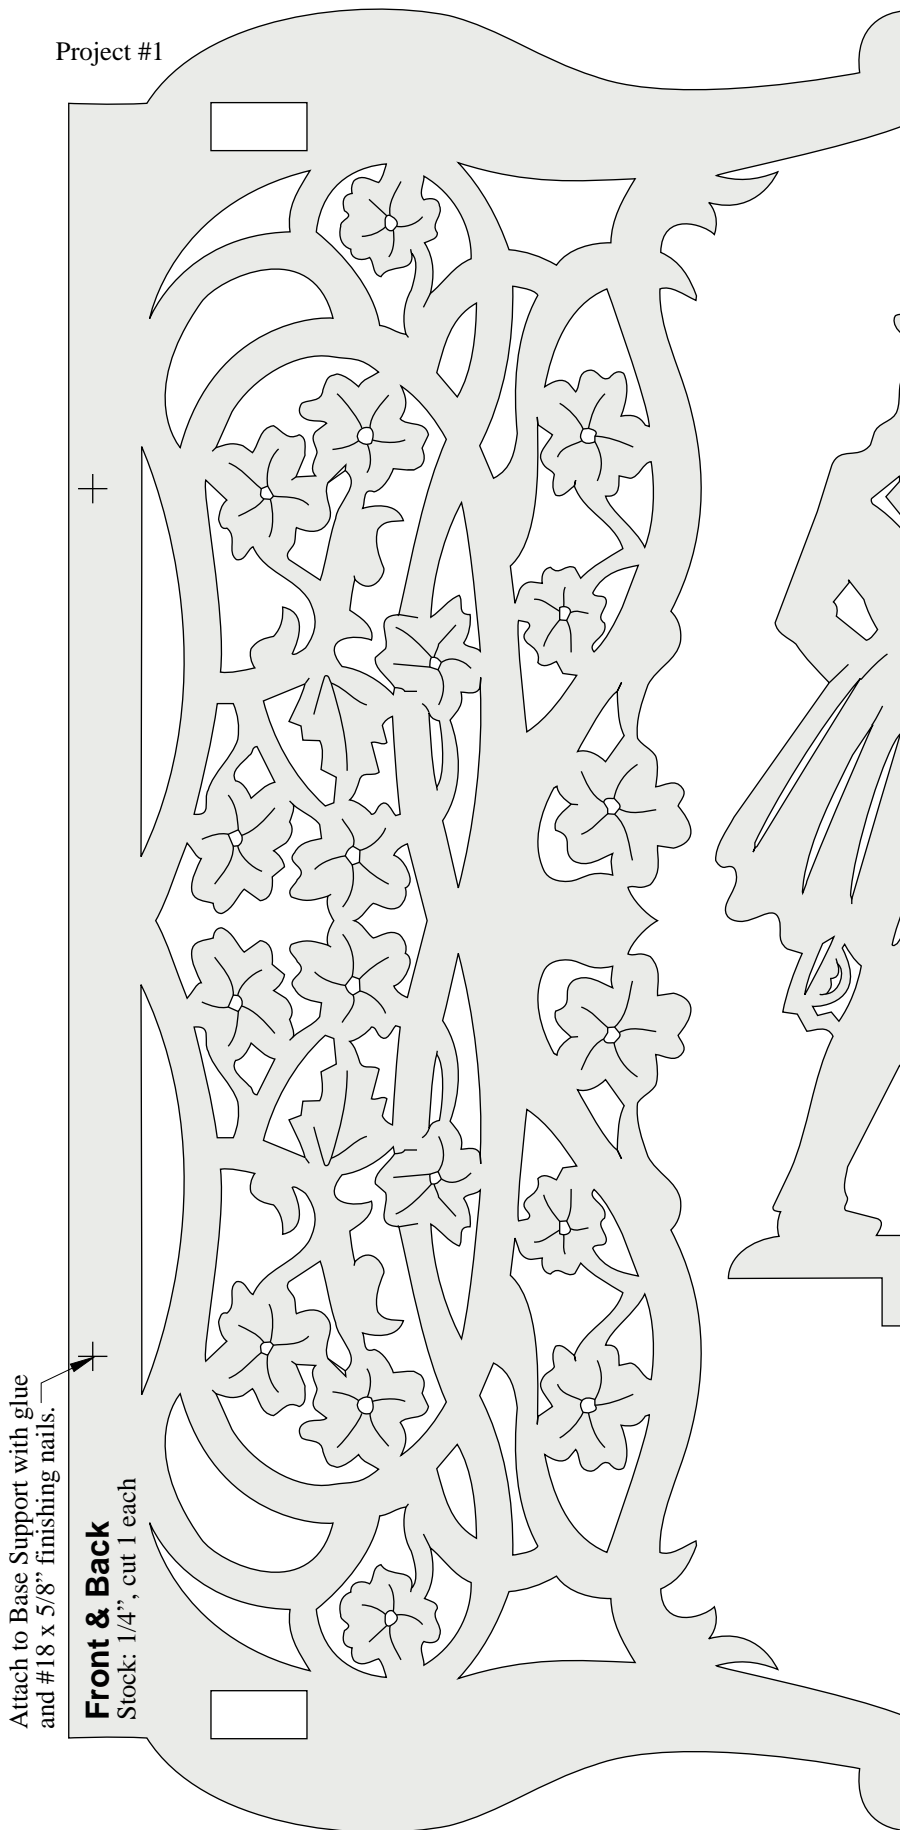 


Attach to Base Support with glue and #18 x 5/8" finishing nails.

Front & Back
Stock: 1/4", cut 1 each



   Figures
Stock: 1/4"

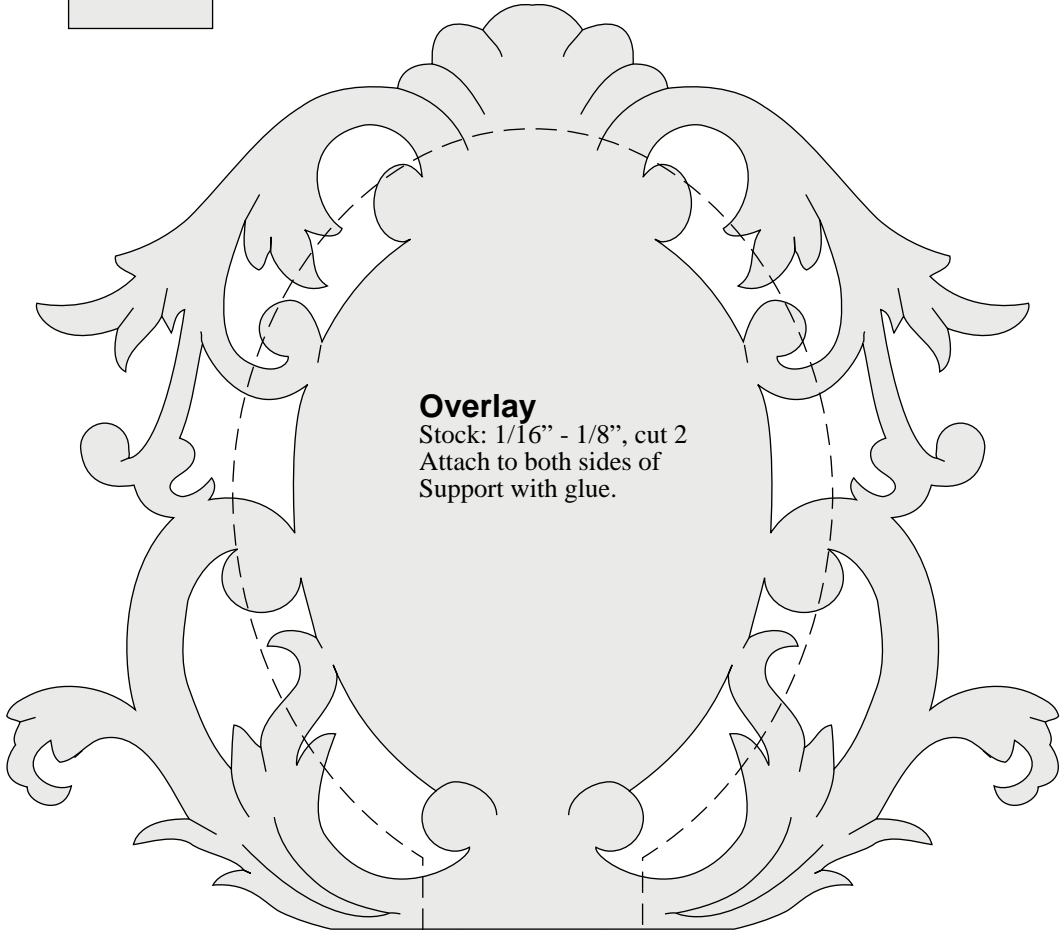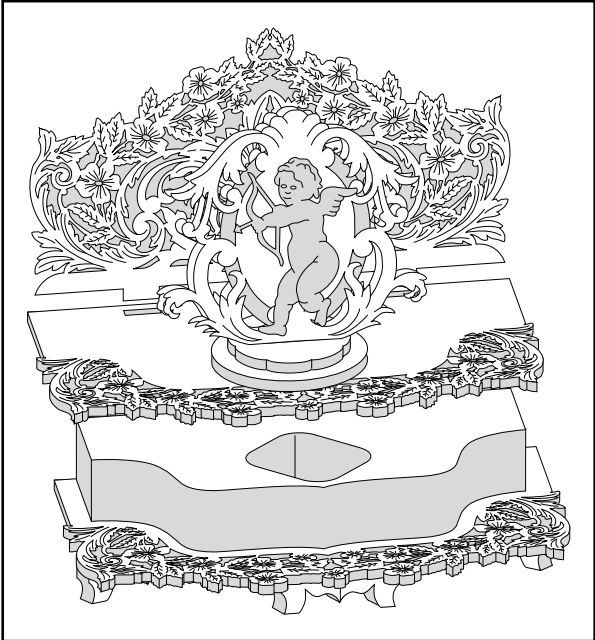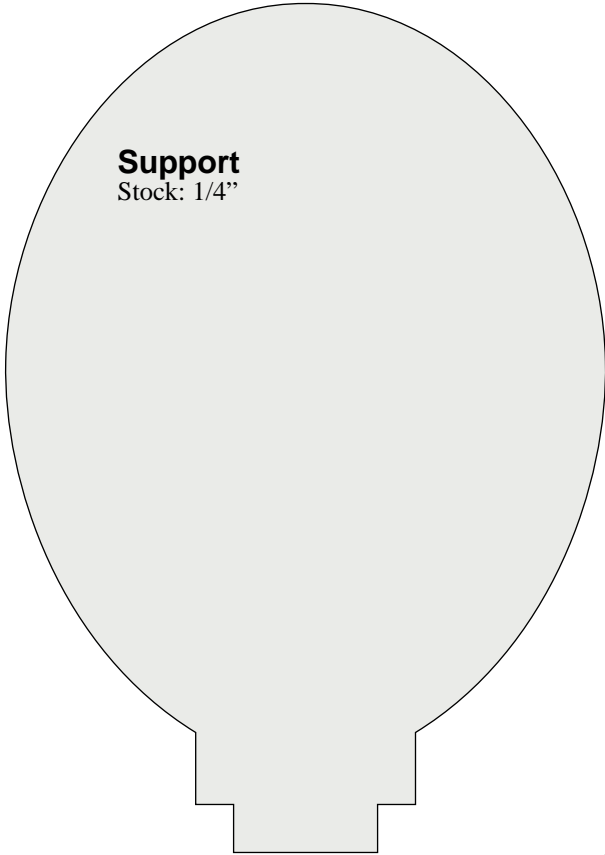 


Dashed line indicates
Placement of Support.



 
Project #2



 Figure
Stock: 1/16" - 1/8", cut 2

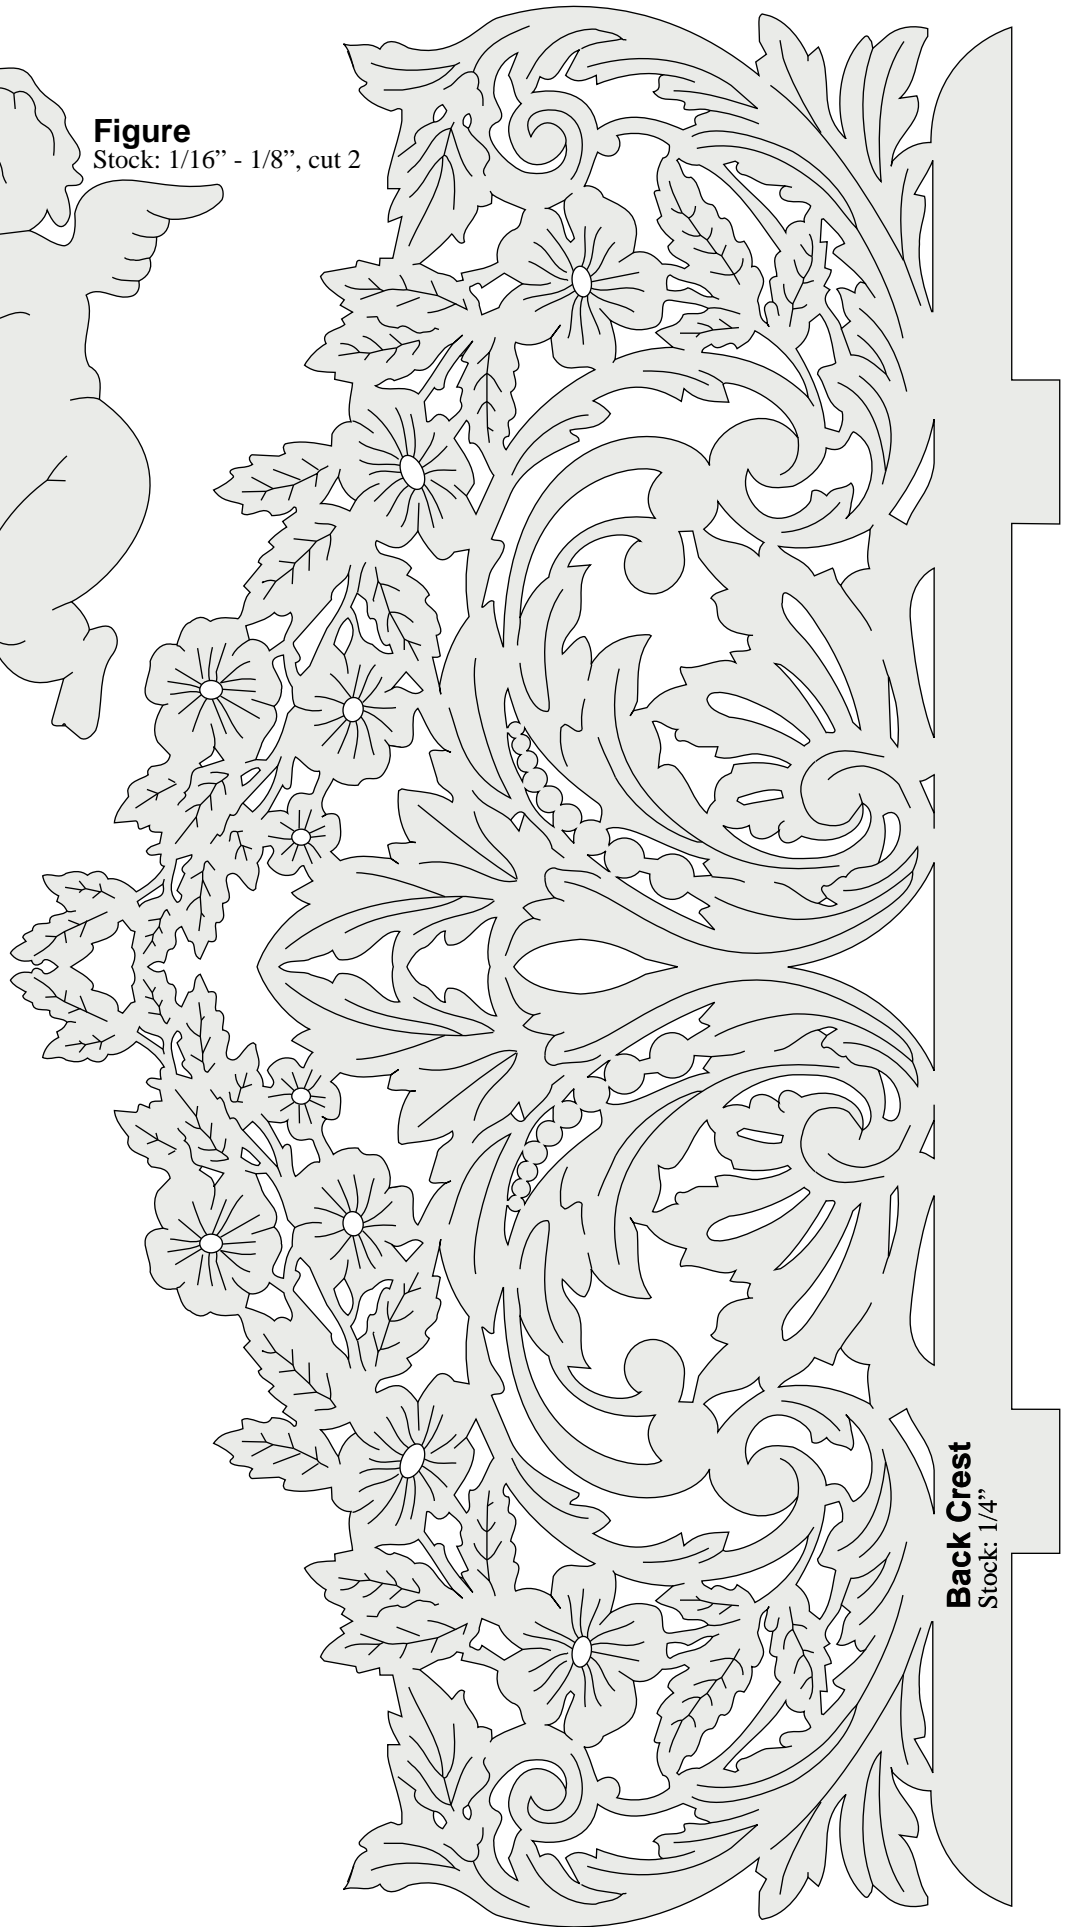




Back Crest
Stock: 1/4"

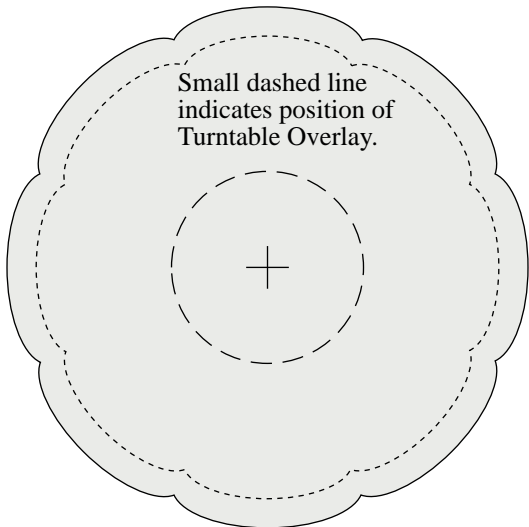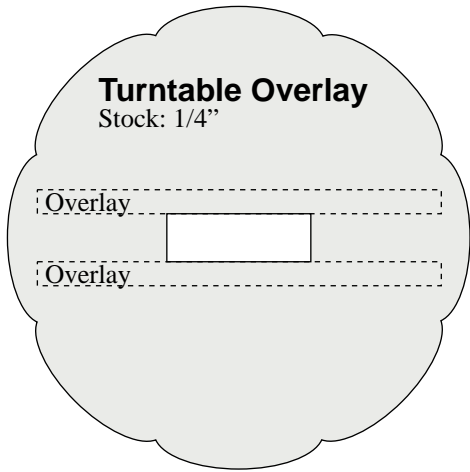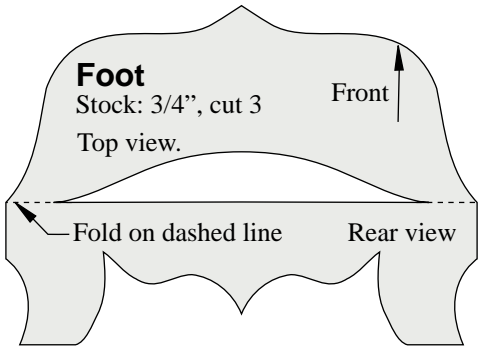 

Turntable

   Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

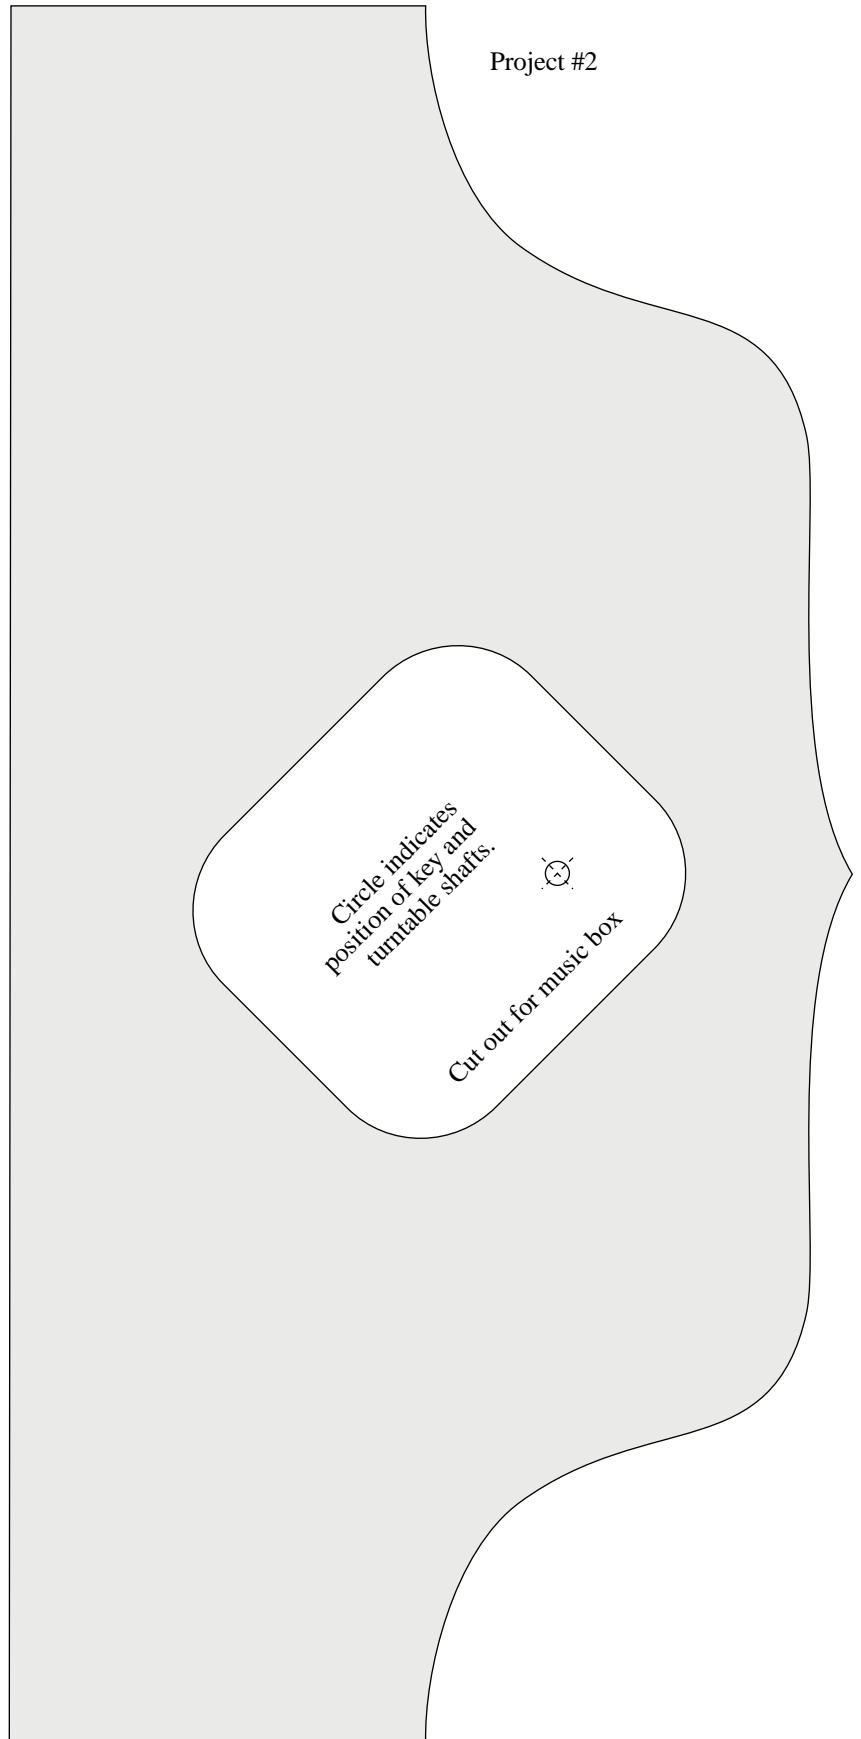

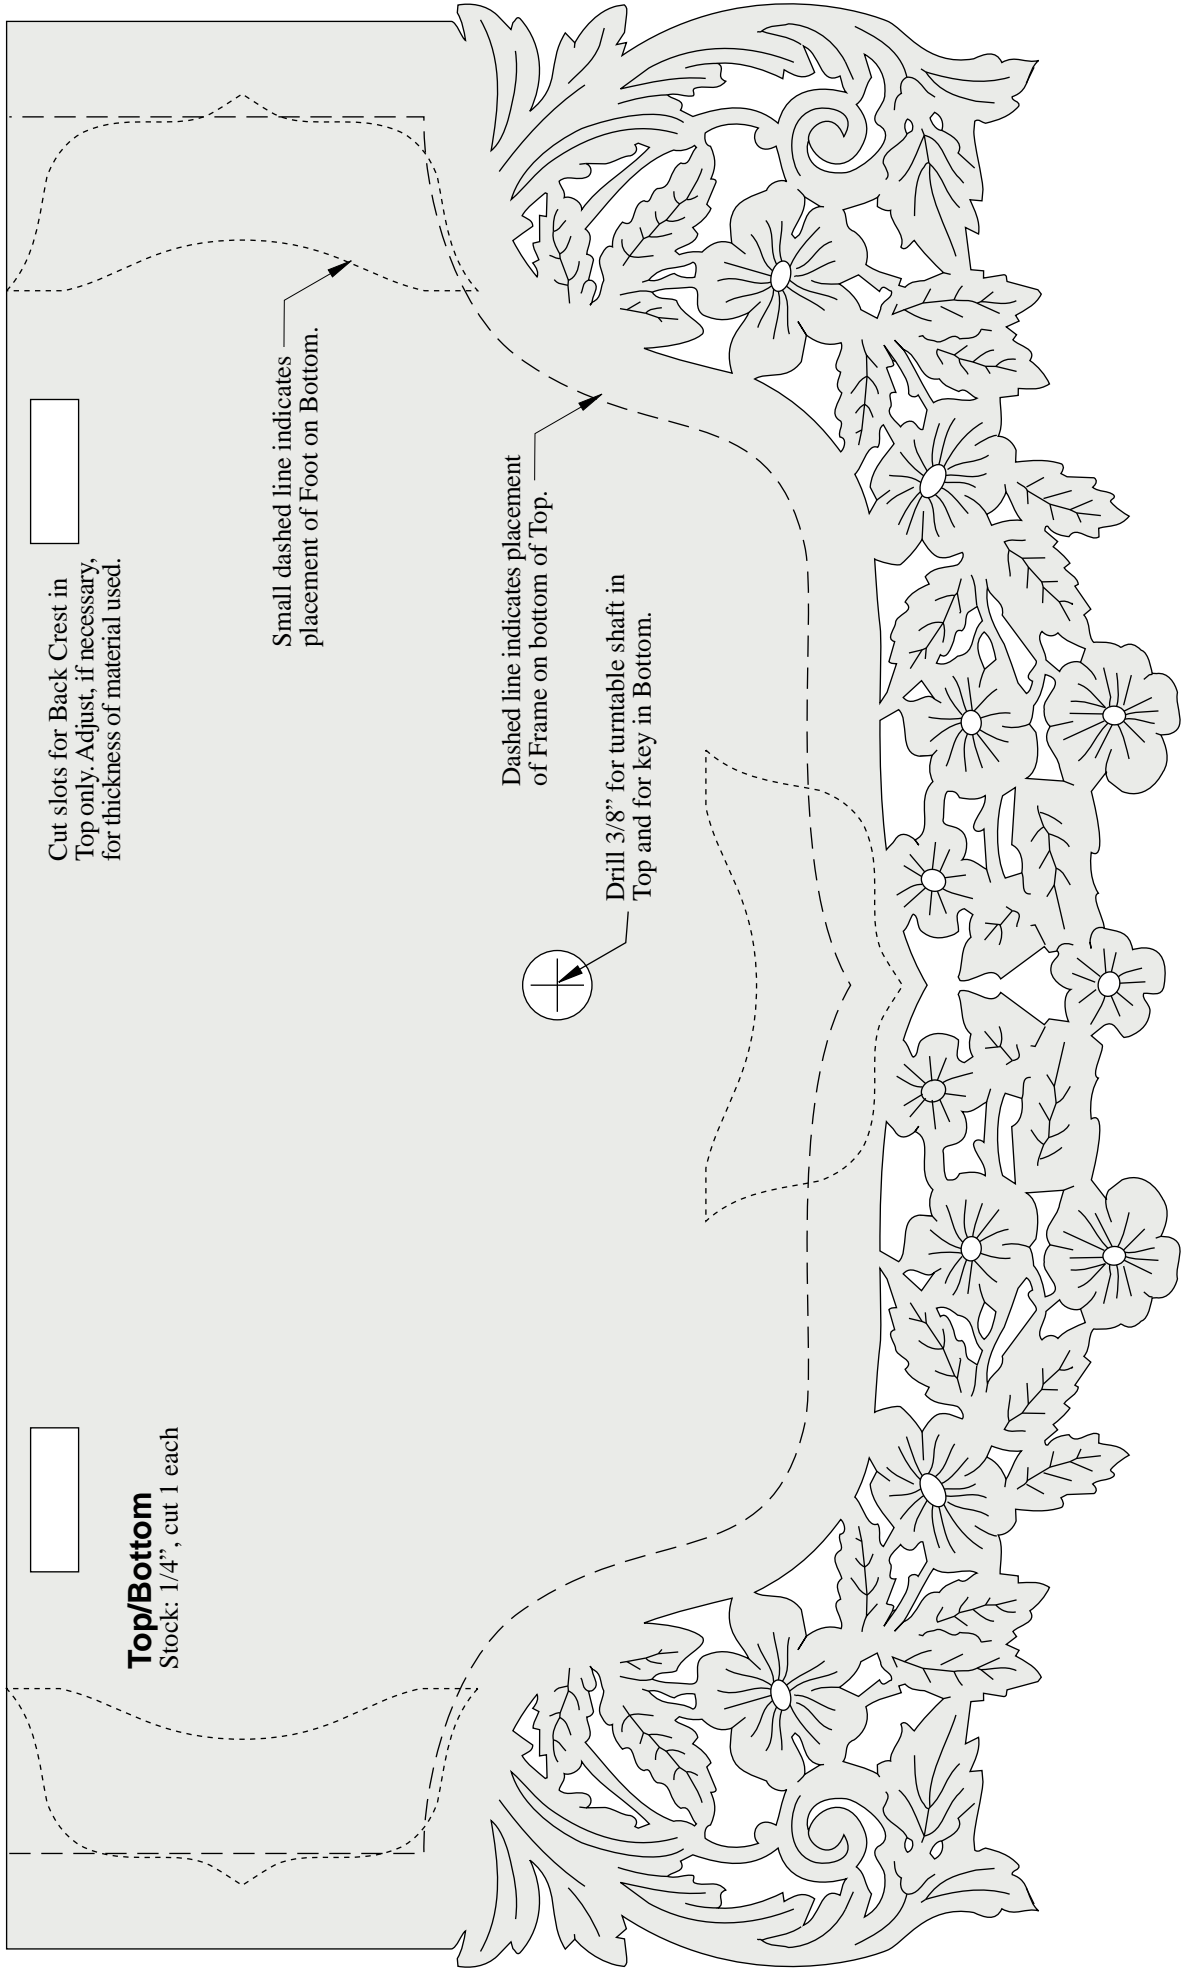

Cut slots for Back Crest in Top only. Adjust, if necessary, for thickness of material used.

Small dashed line indicates placement of Foot on Bottom.

 
 
Dashed line indicates placement of Frame on bottom of Top.

Drill 3/8" for turntable shaft in Top and for key in Bottom.



Top/Bottom

Stock: 1/4", cut 1 each

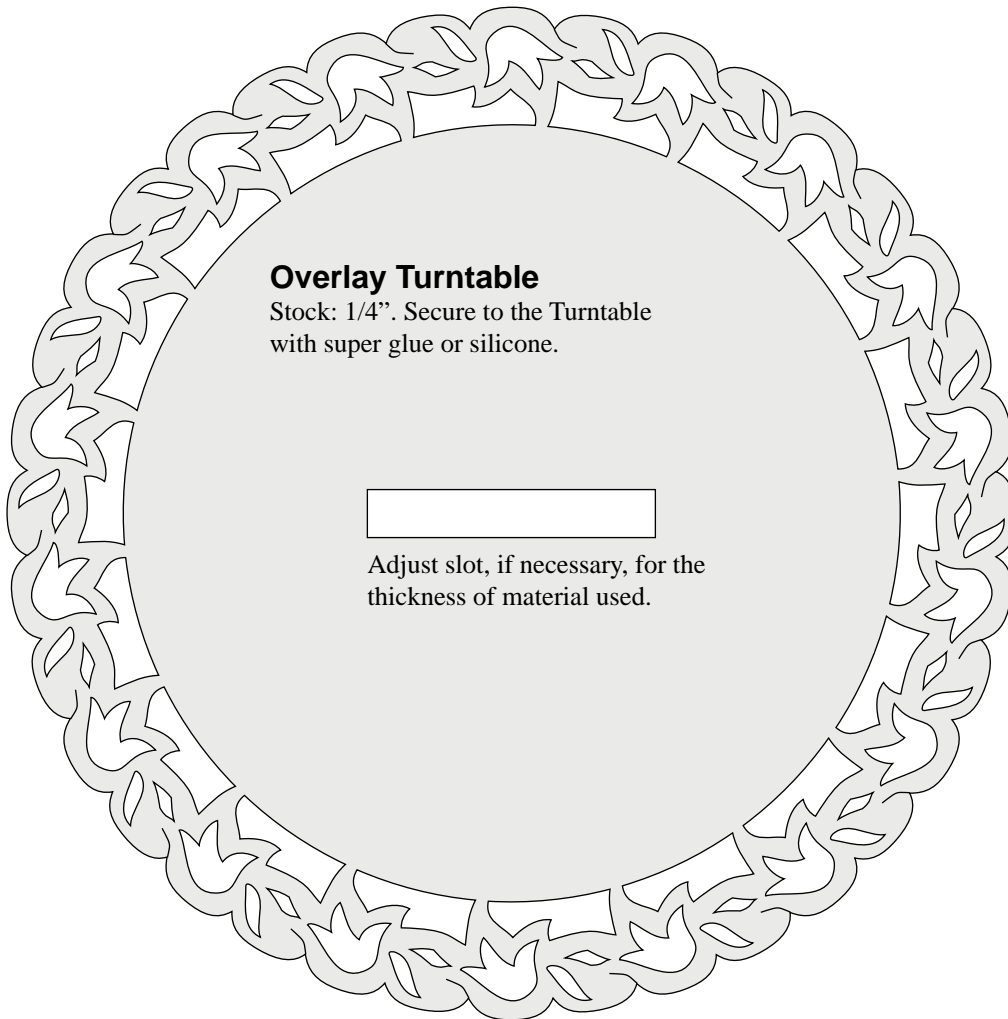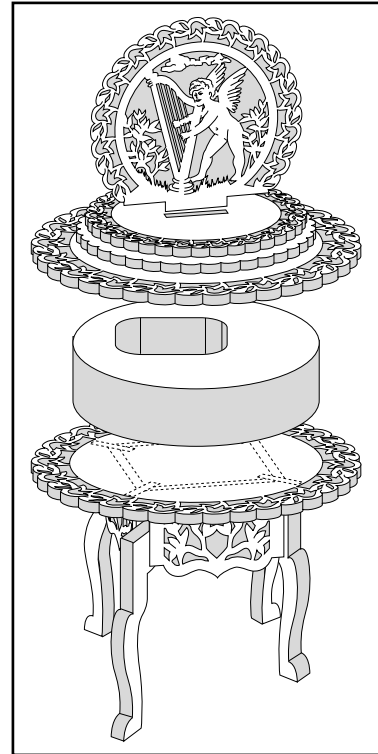

Project #3


Frame
Stock: 1 1/2"



Circle indicates
position of key and
turntable shafts.



Cut out for music box

   Figure
Stock: 1/4"



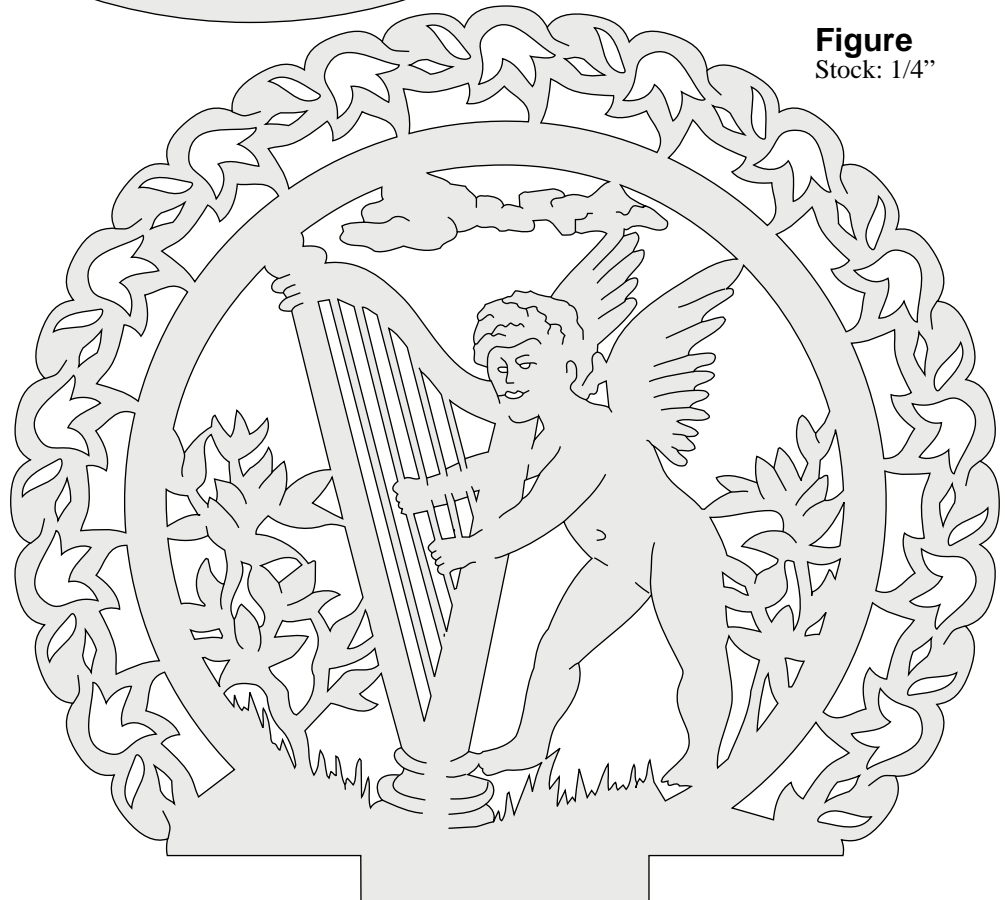


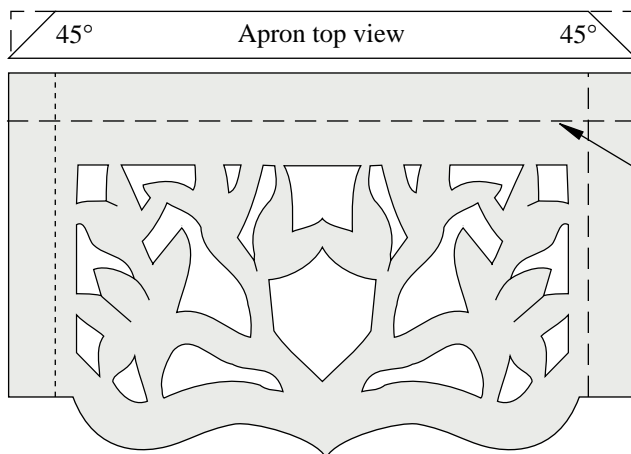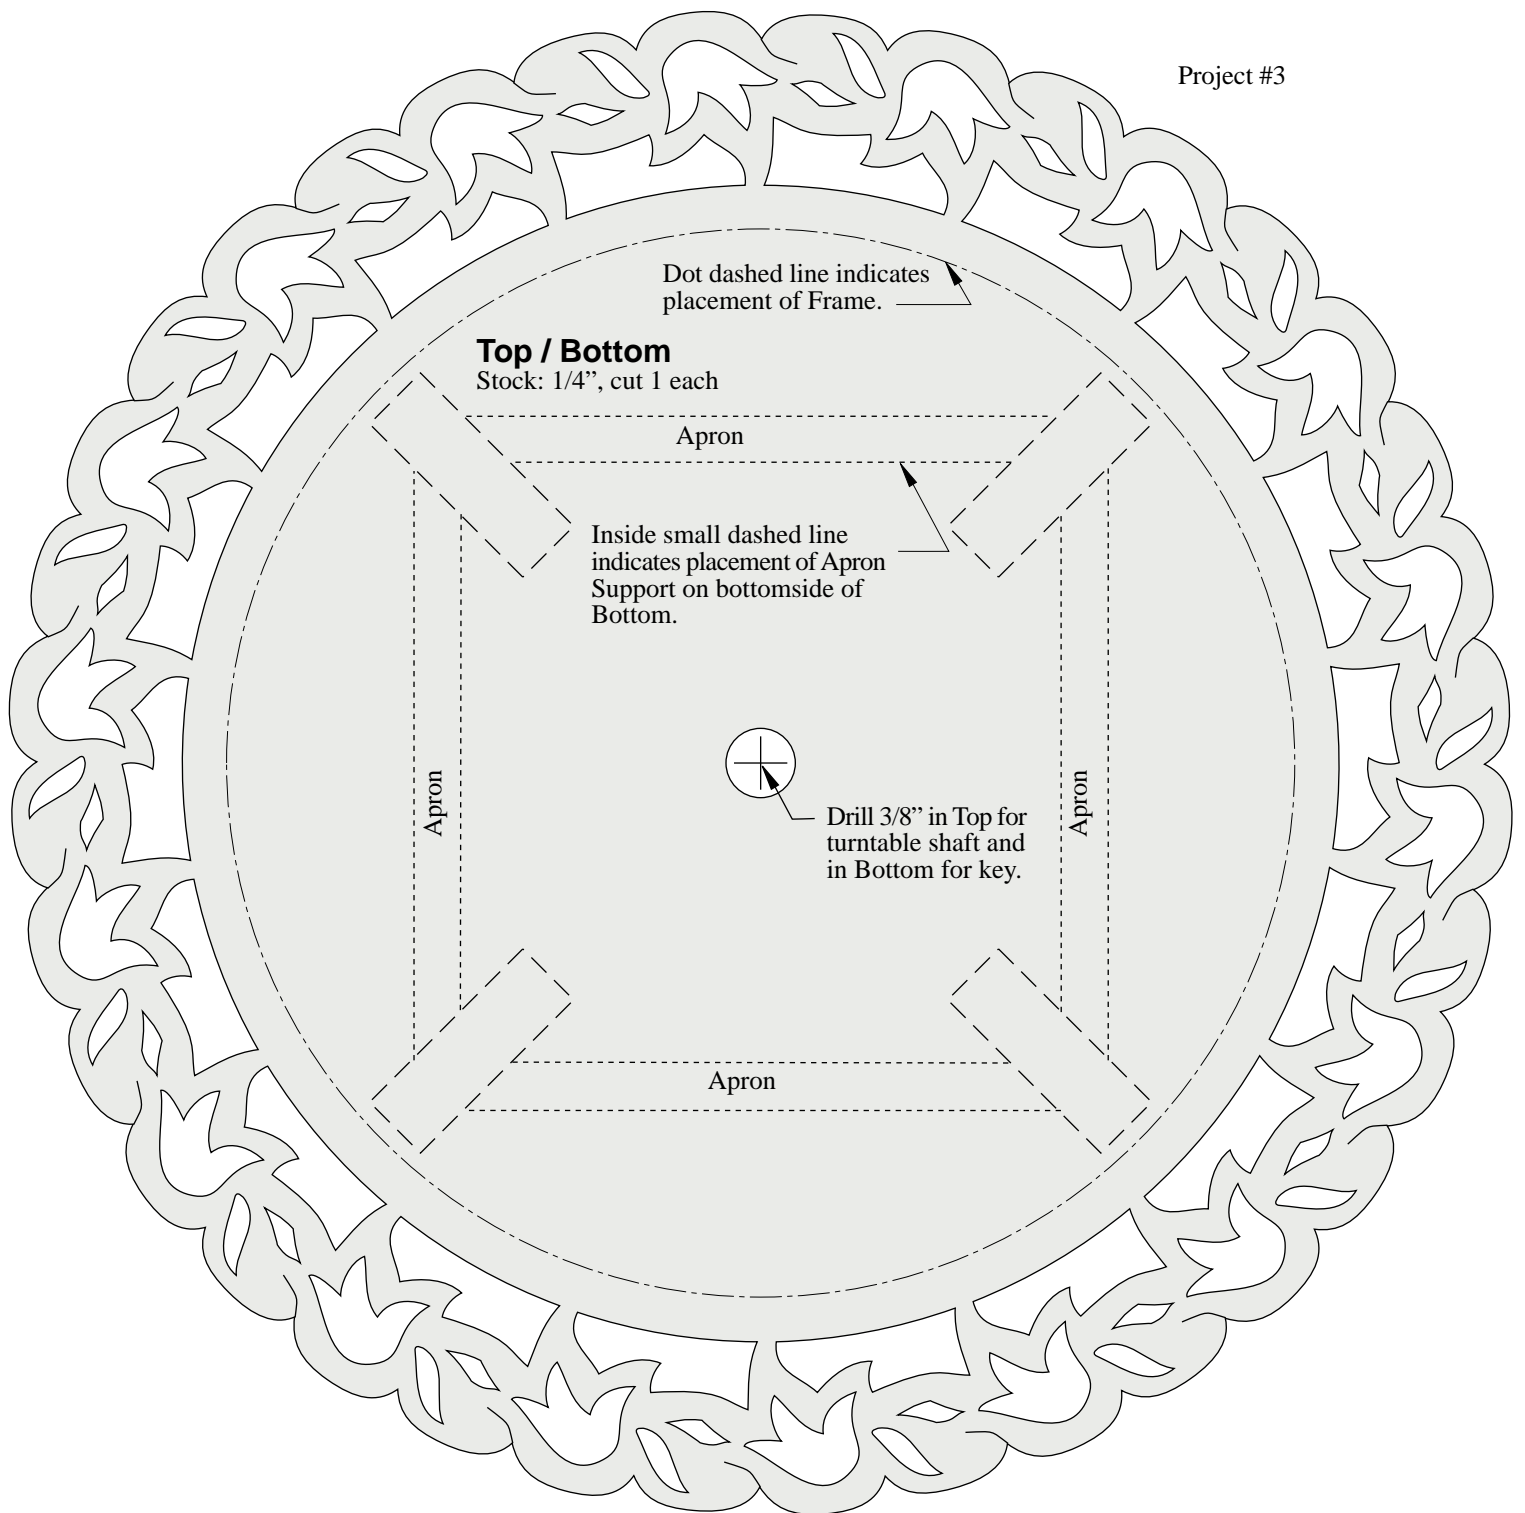



Apron
Stock: 1/4", cut 4

Dashed line indicates placement of Apron. Attach Apron to Apron Support with glue. Note: bevel cut sides at 45° before cutting pattern.

   
Project #3

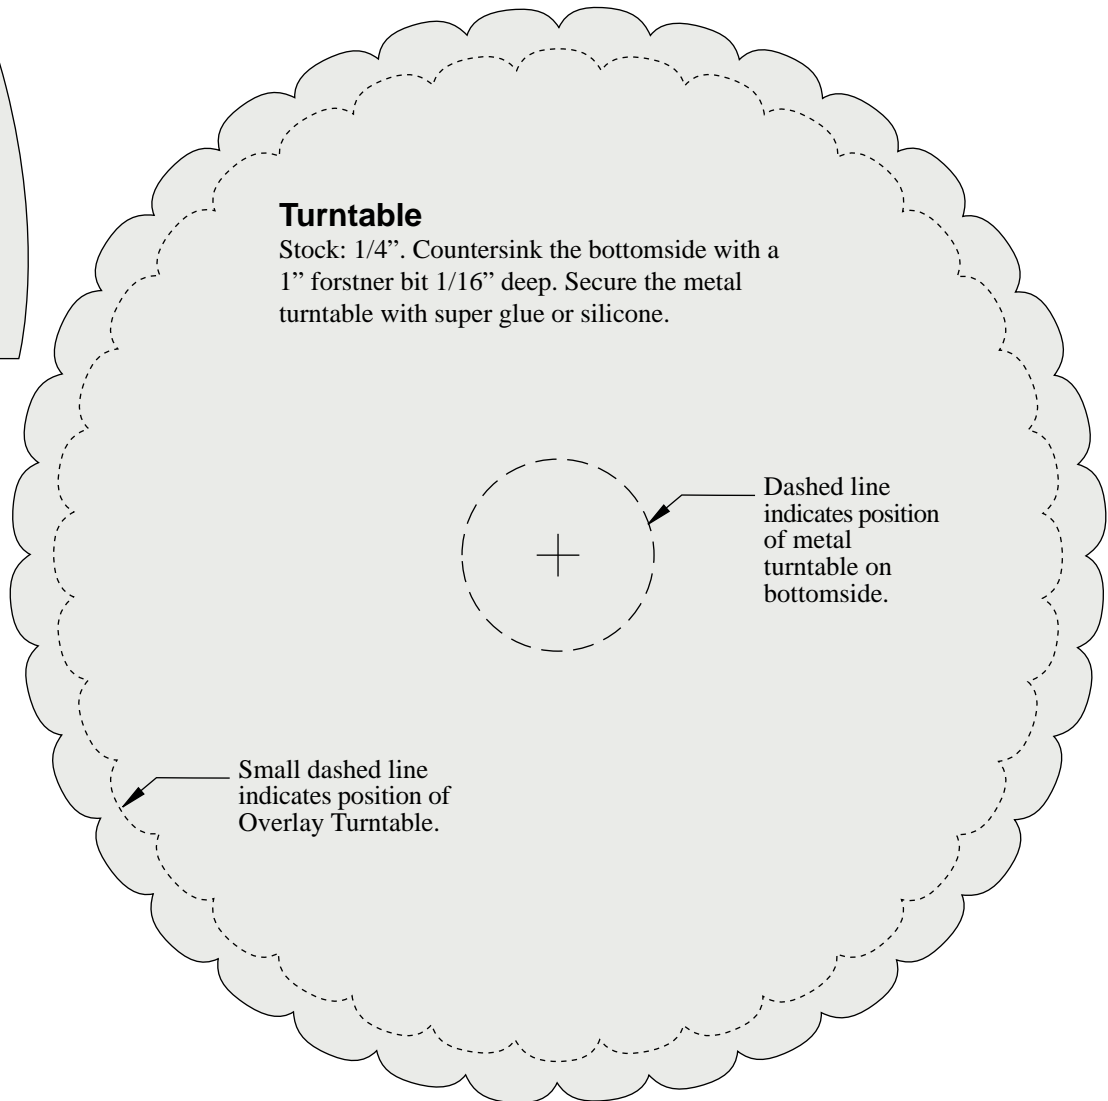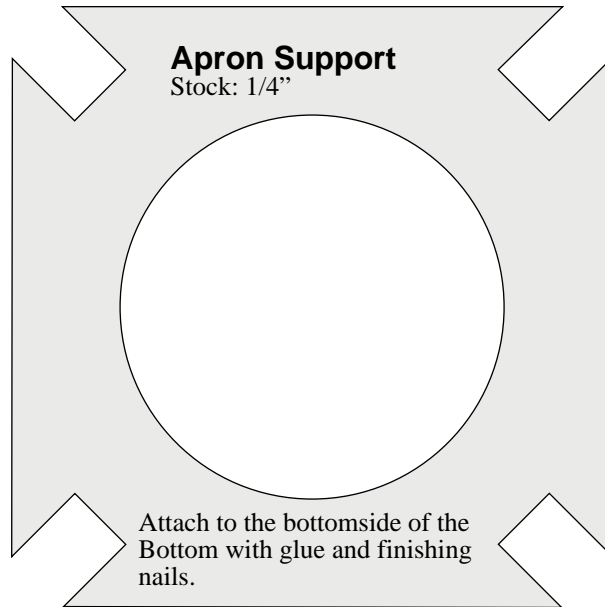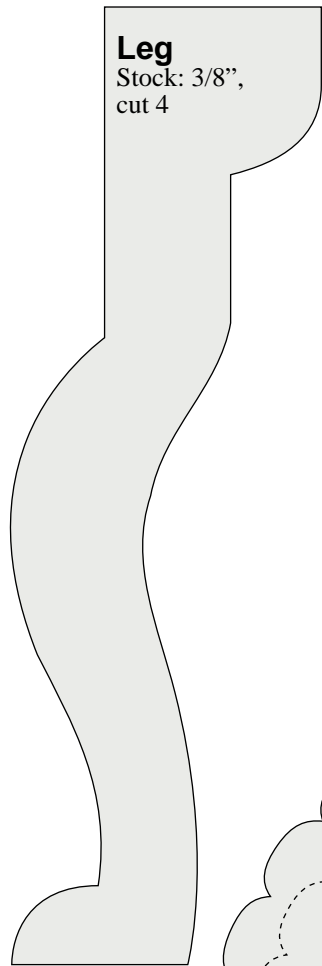

Project #4

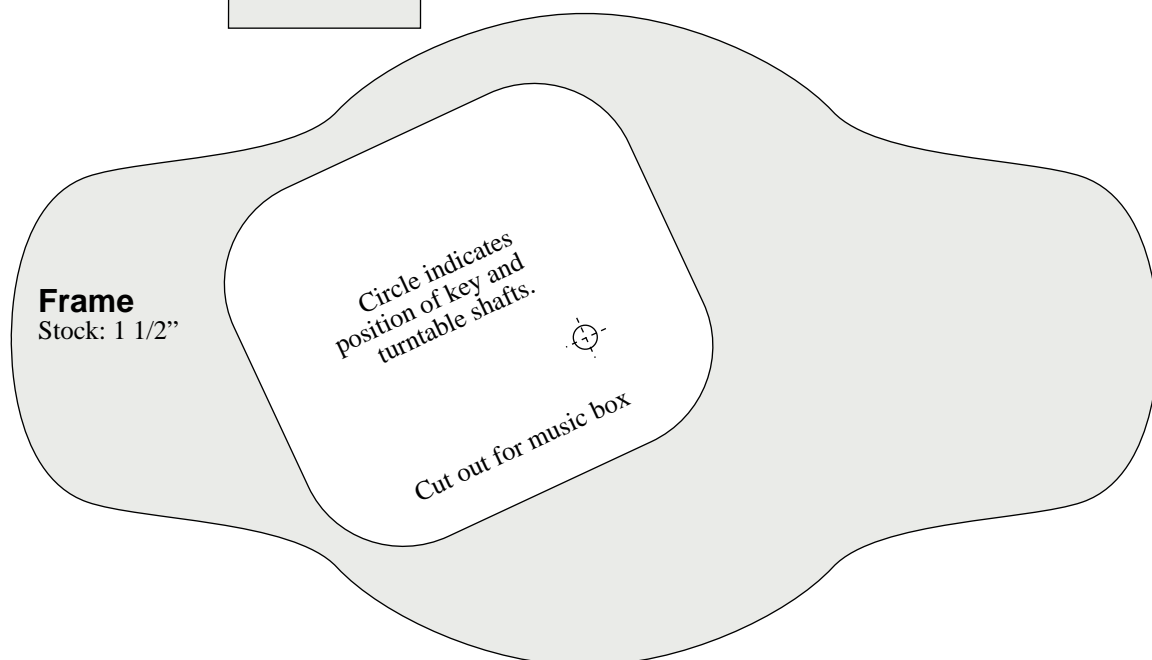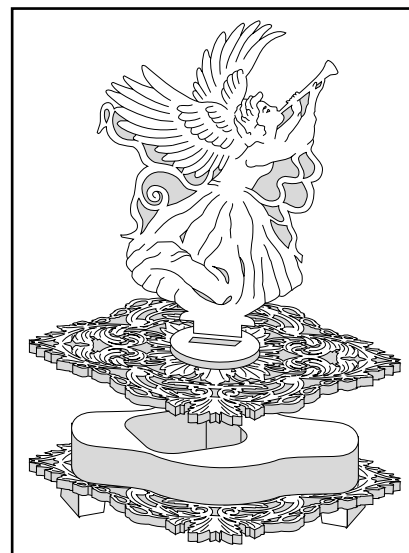  

Project #4

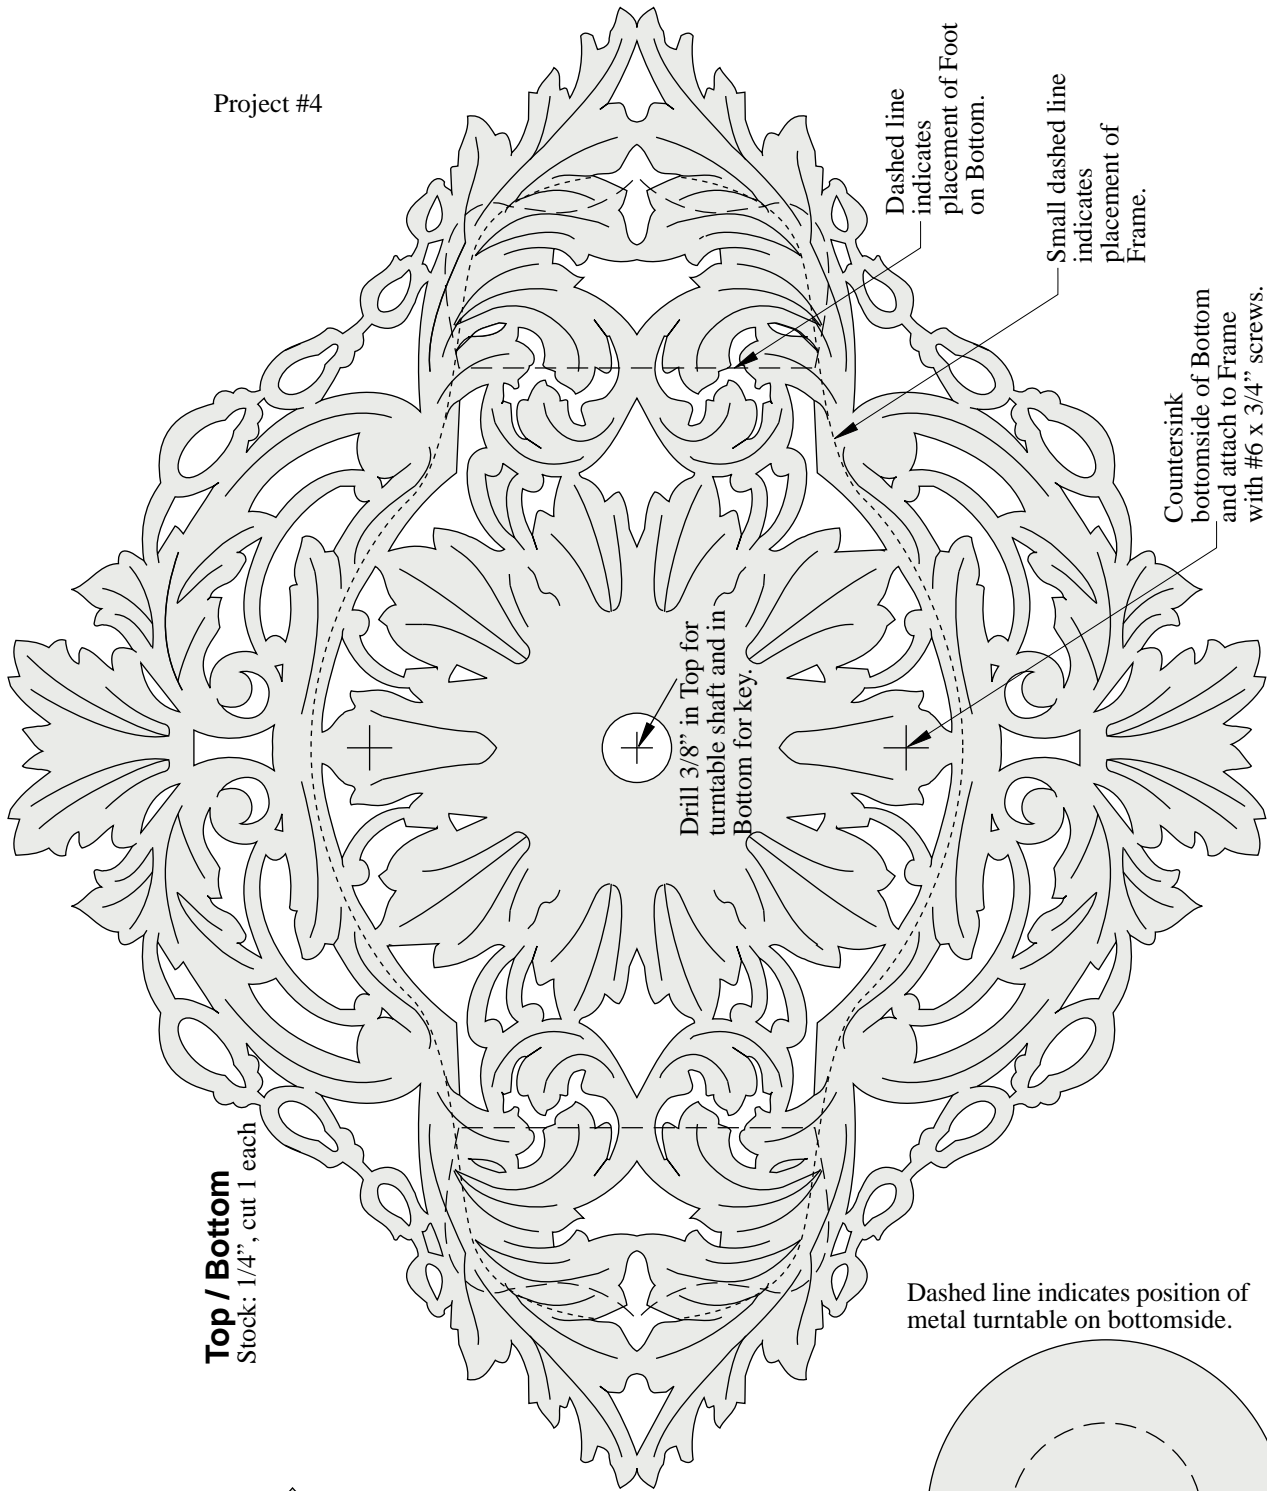 

Dashed line indicates placement of Foot on Bottom.

 
Small dashed line indicates placement of Frame.

Countersink bottomsides of Bottom and attach to Frame with #6 x 3/4" screws.

Drill 3/8" in Top for turntable shaft and in Bottom for key.


Top / Bottom
Stock: 1/4", cut 1 each

Dashed line indicates position of metal turntable on bottomsides.

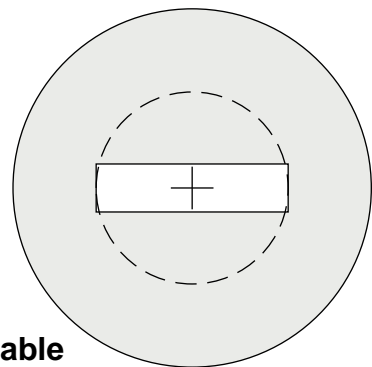

Turntable

 Stock: 3/8", countersink the bottomsides with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone. Note: countersink bottomsides before cutting slot.

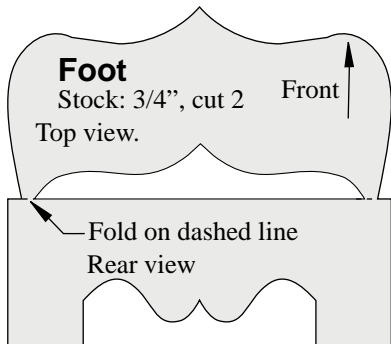

Foot
Stock: 3/4", cut 2
Top view.

 
Fold on dashed line
Rear view

Turntable

Stock: 1/4", countersink the
bottomside with a 1" forstner bit
1/16" deep. Secure the metal
turntable with super glue or silicone.



Adjust slots, if
necessary, for thickness
of material used.

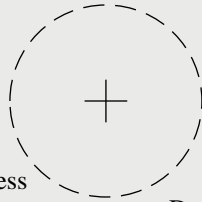

Dashed line
indicates position
of metal turntable
on bottomside.



 
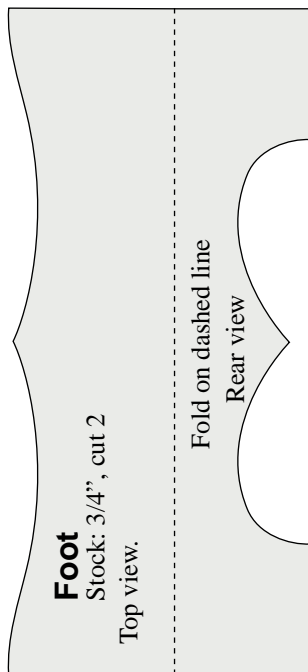 


Figure
Stock: 1/4"

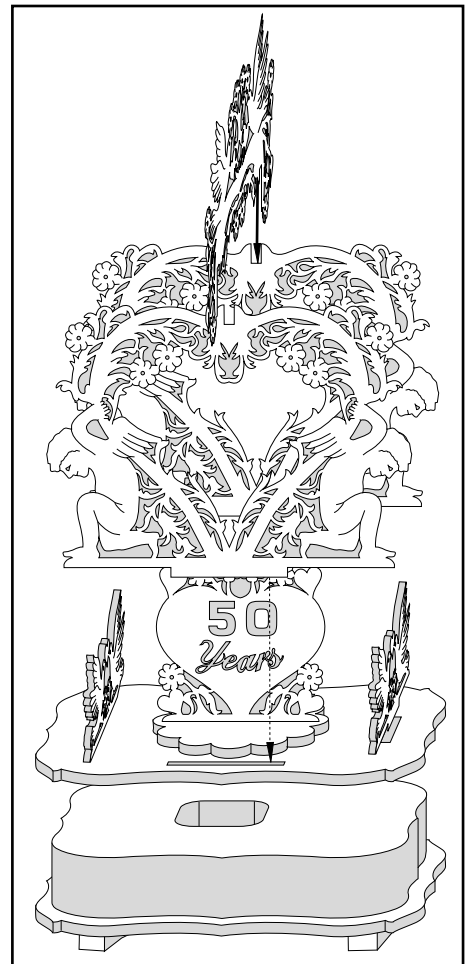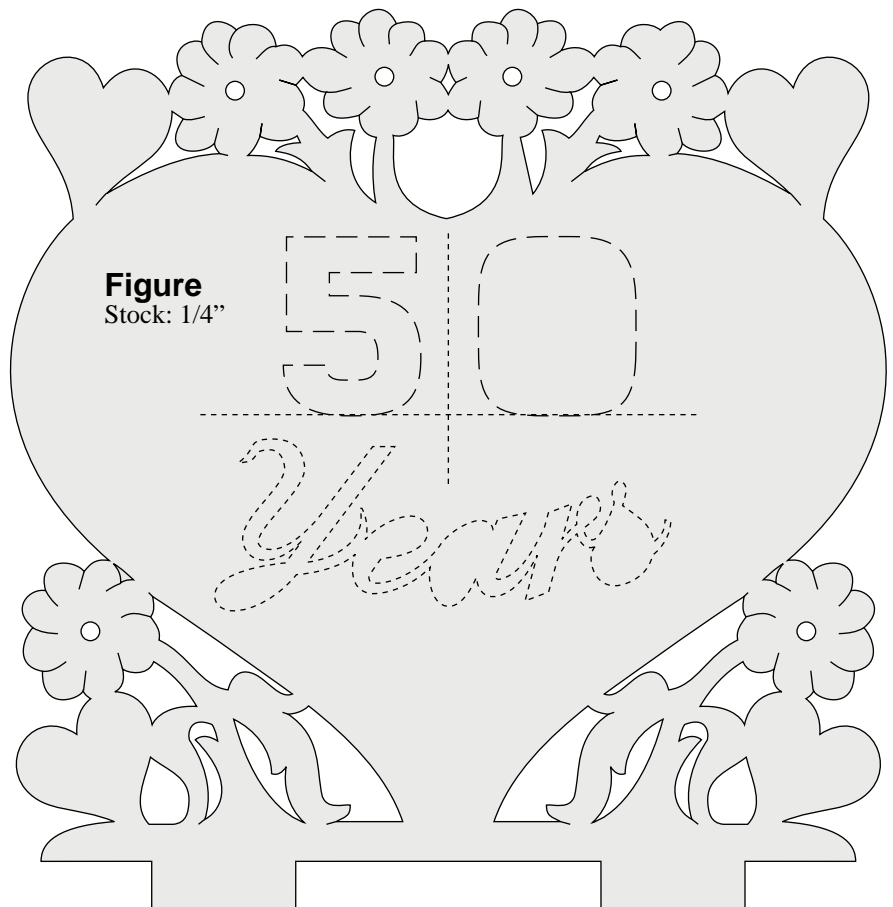 

Project #5

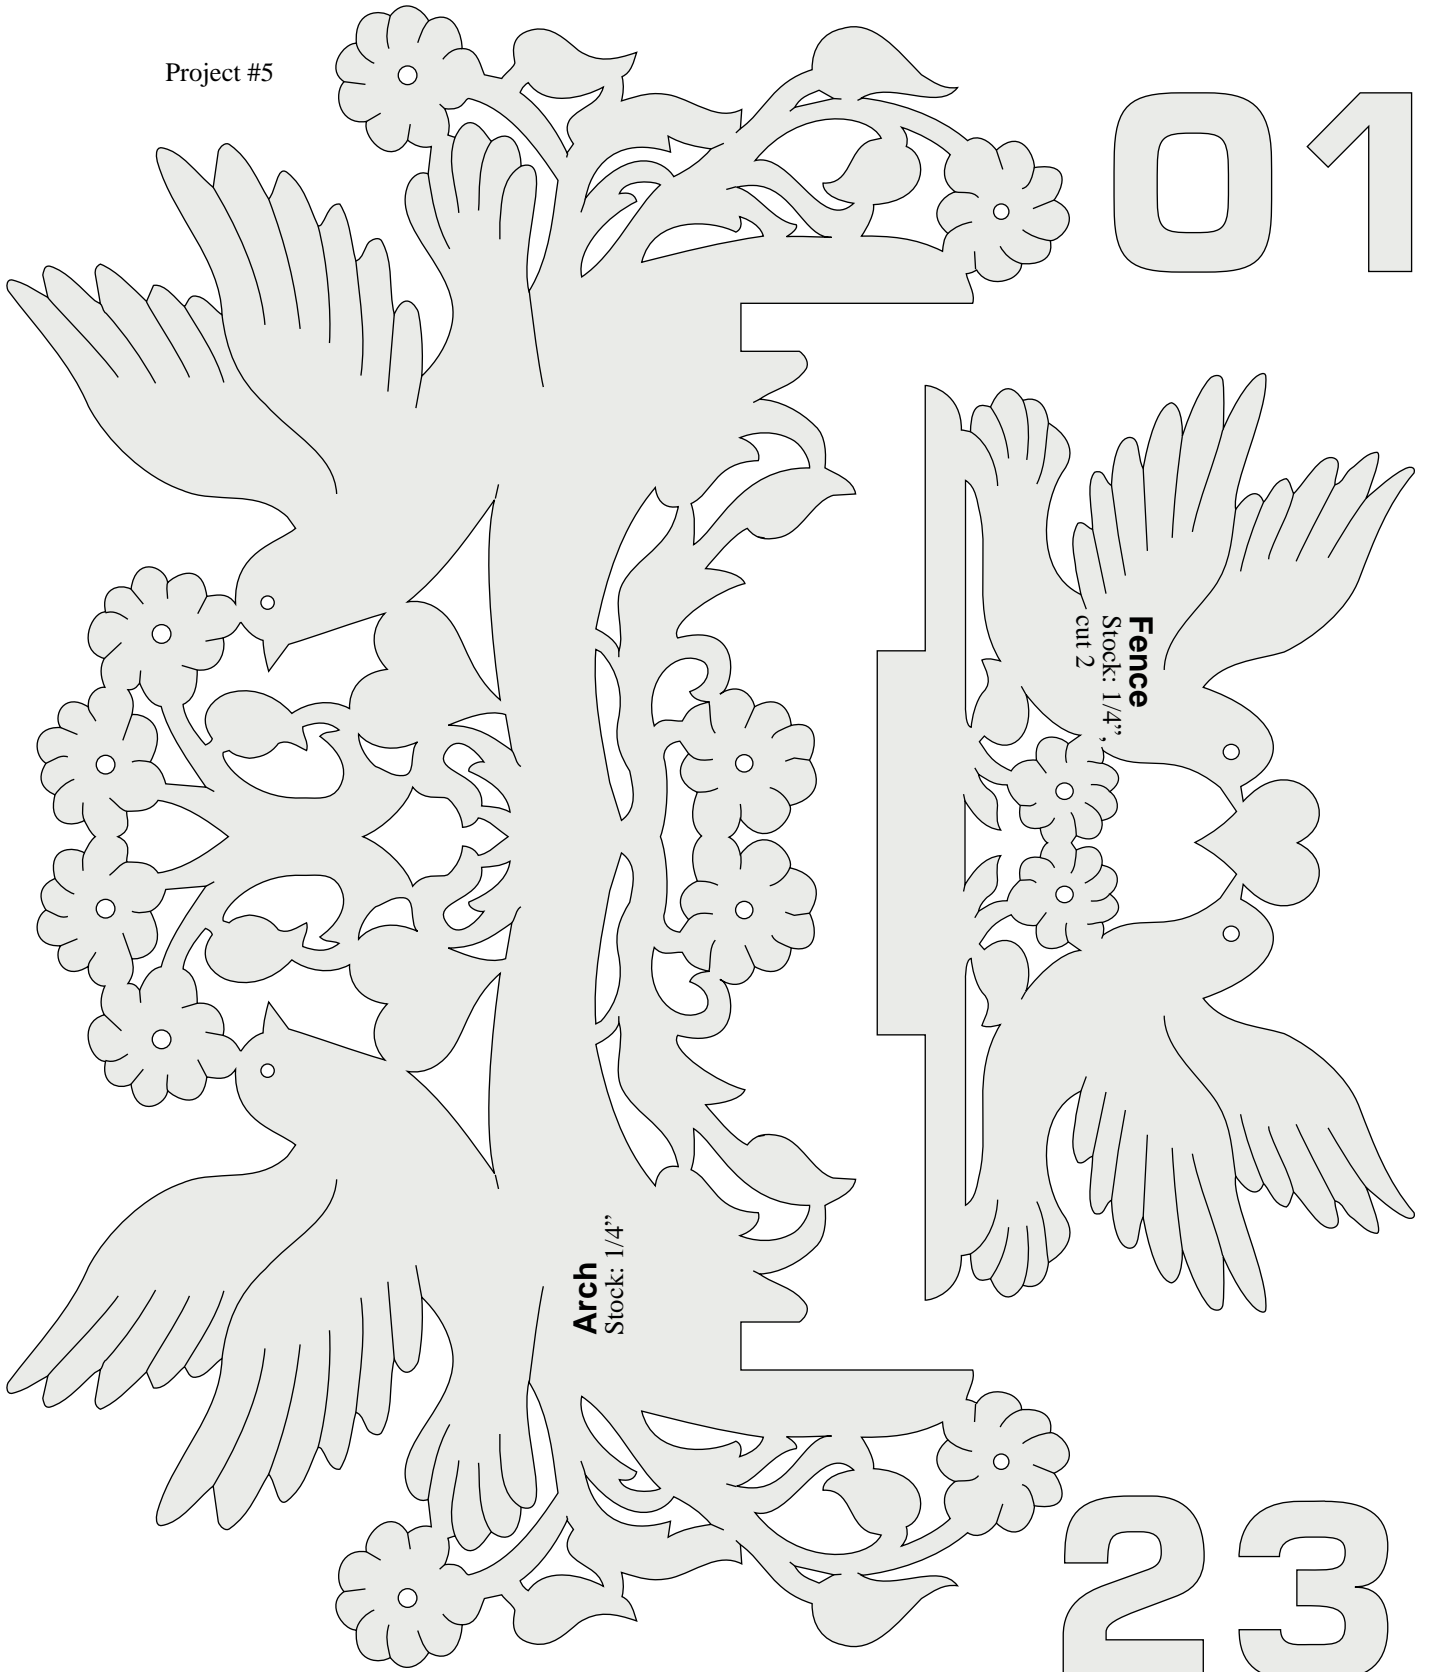 


0 1


2 3

Number Overlays
Stock: 1/16" - 1/8"

 4 5 6 7 8 9

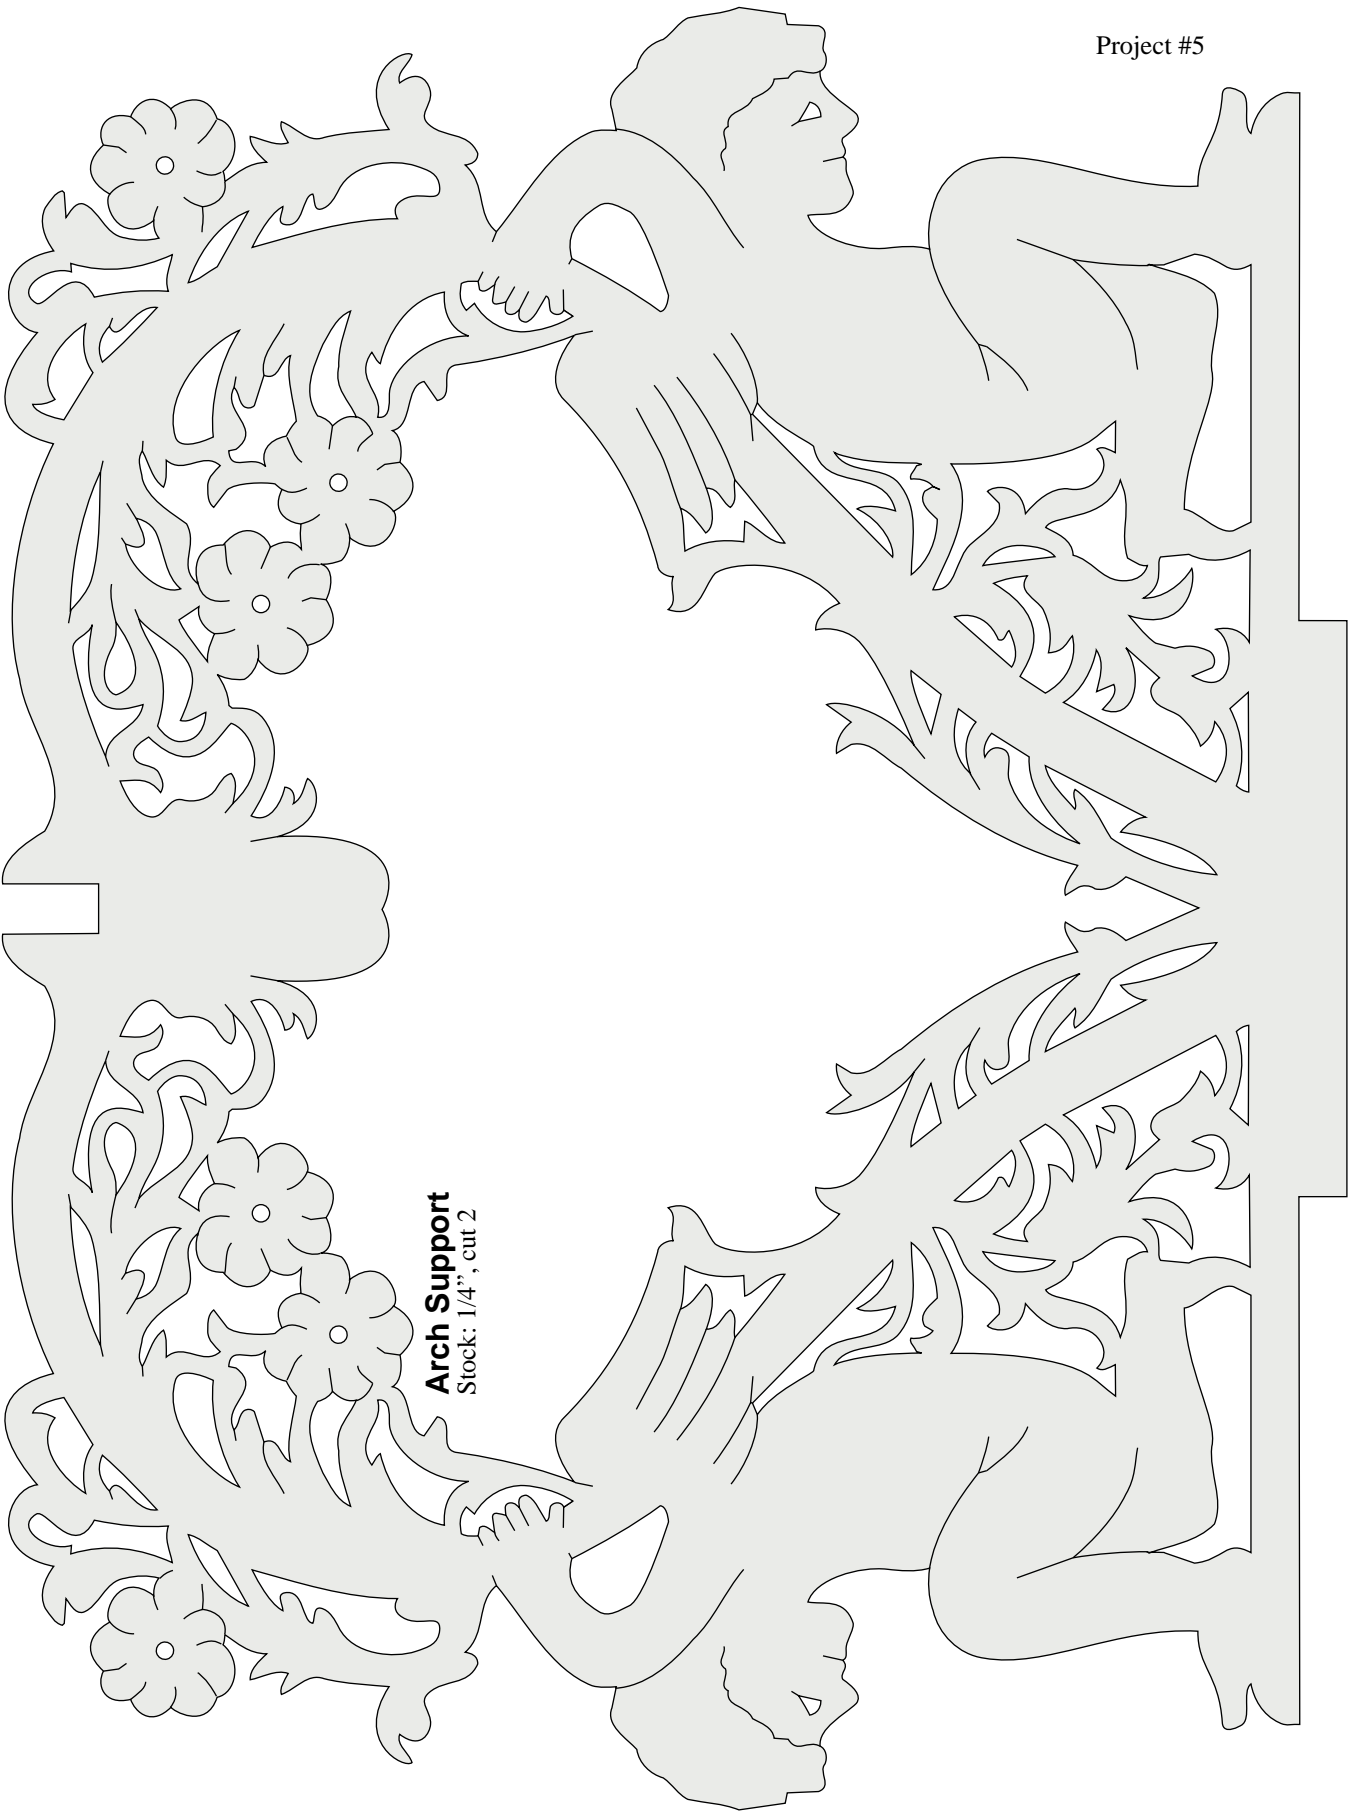

Arch Support
Stock: 1/4", cut 2

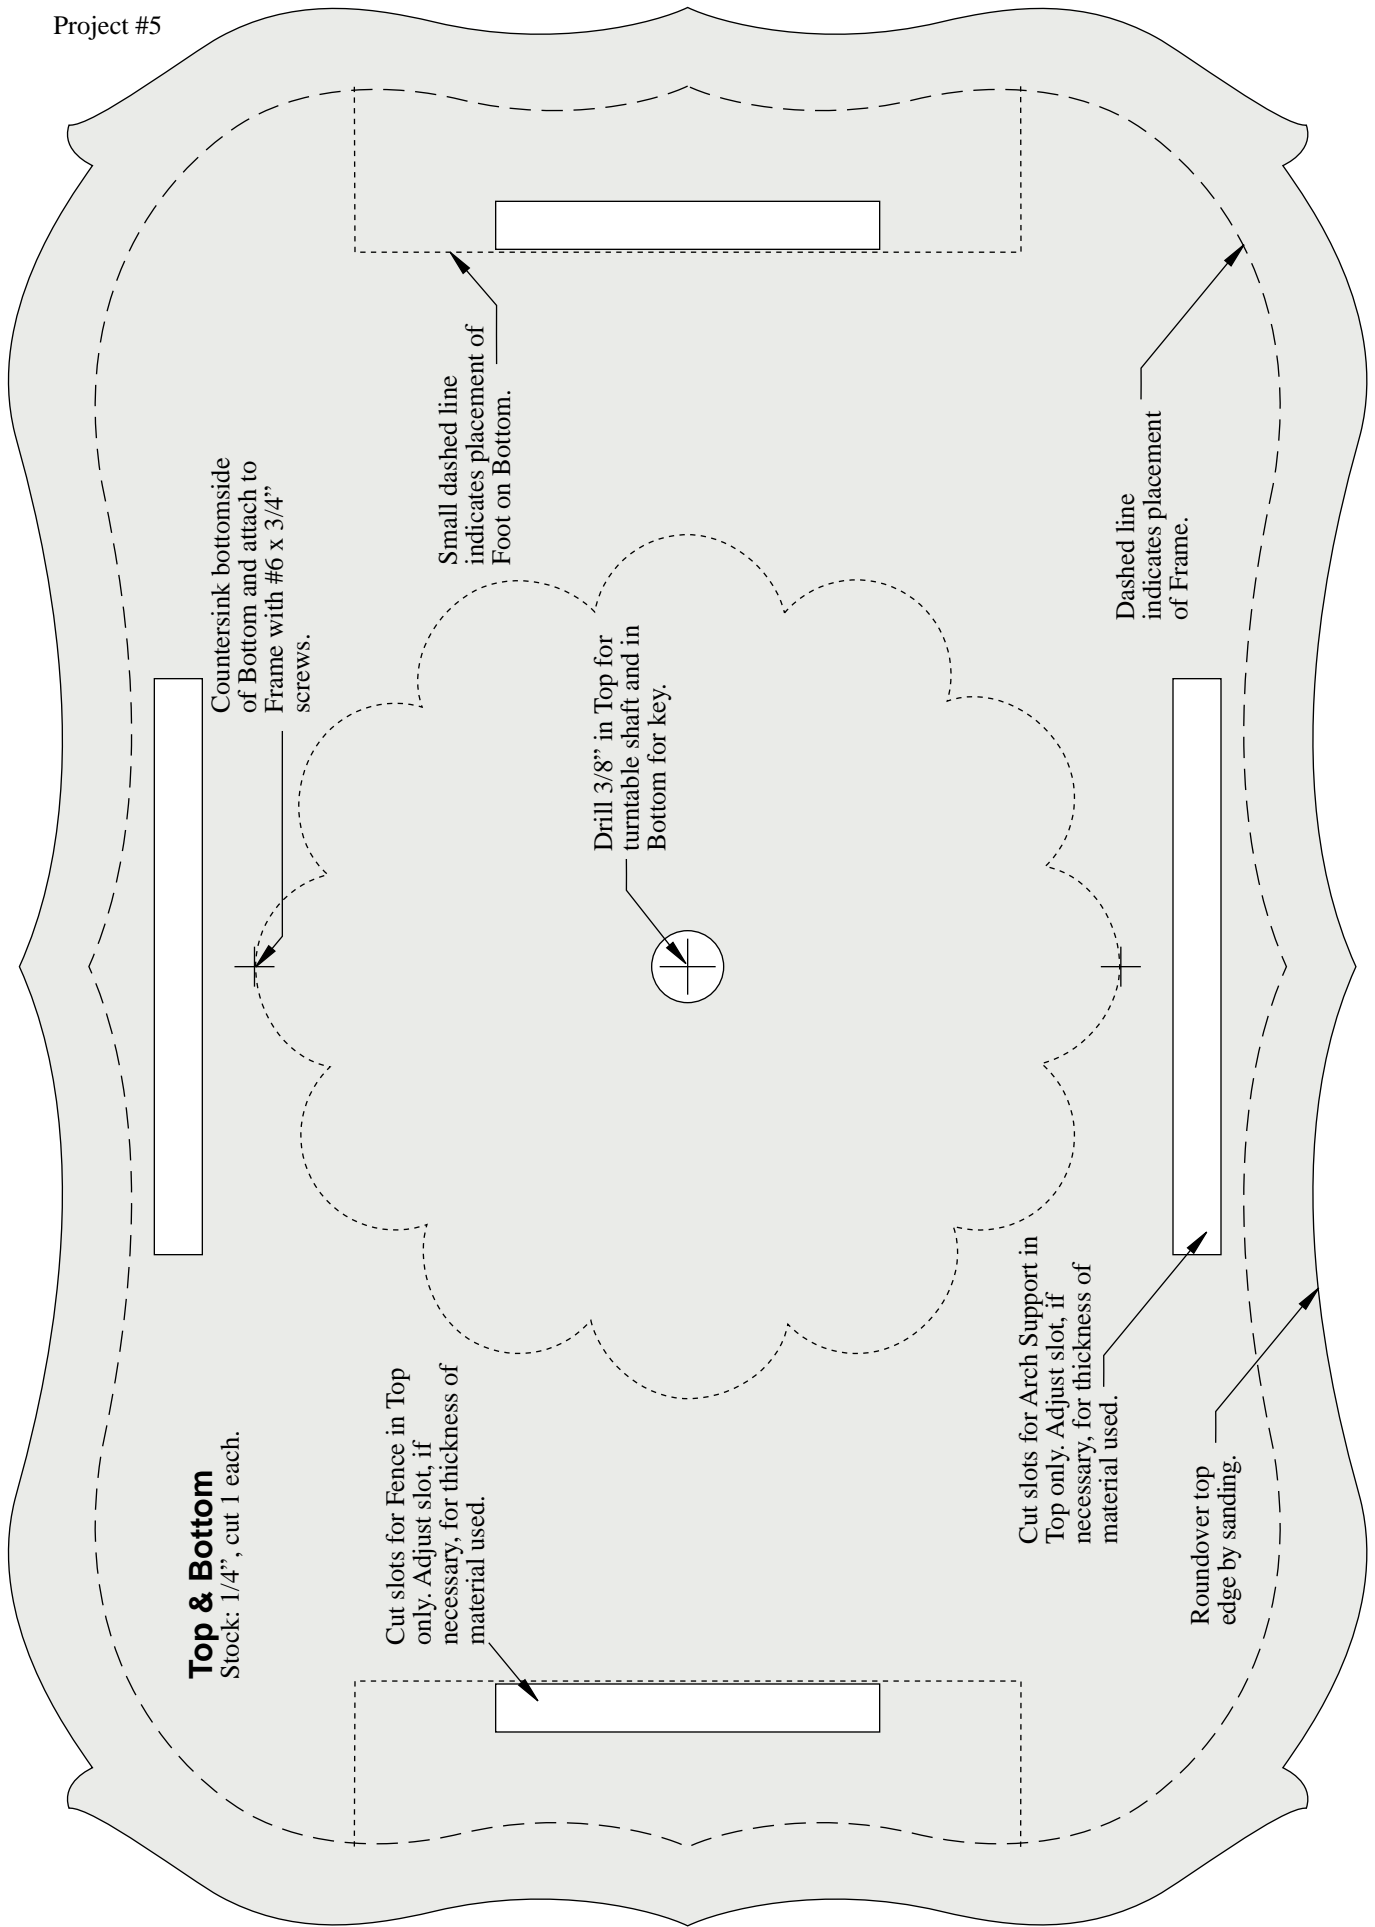 



Frame
Stock: 1 1/2"


Circle indicates
position of key and
turntable shafts.



Cut out for music box

   Project #6

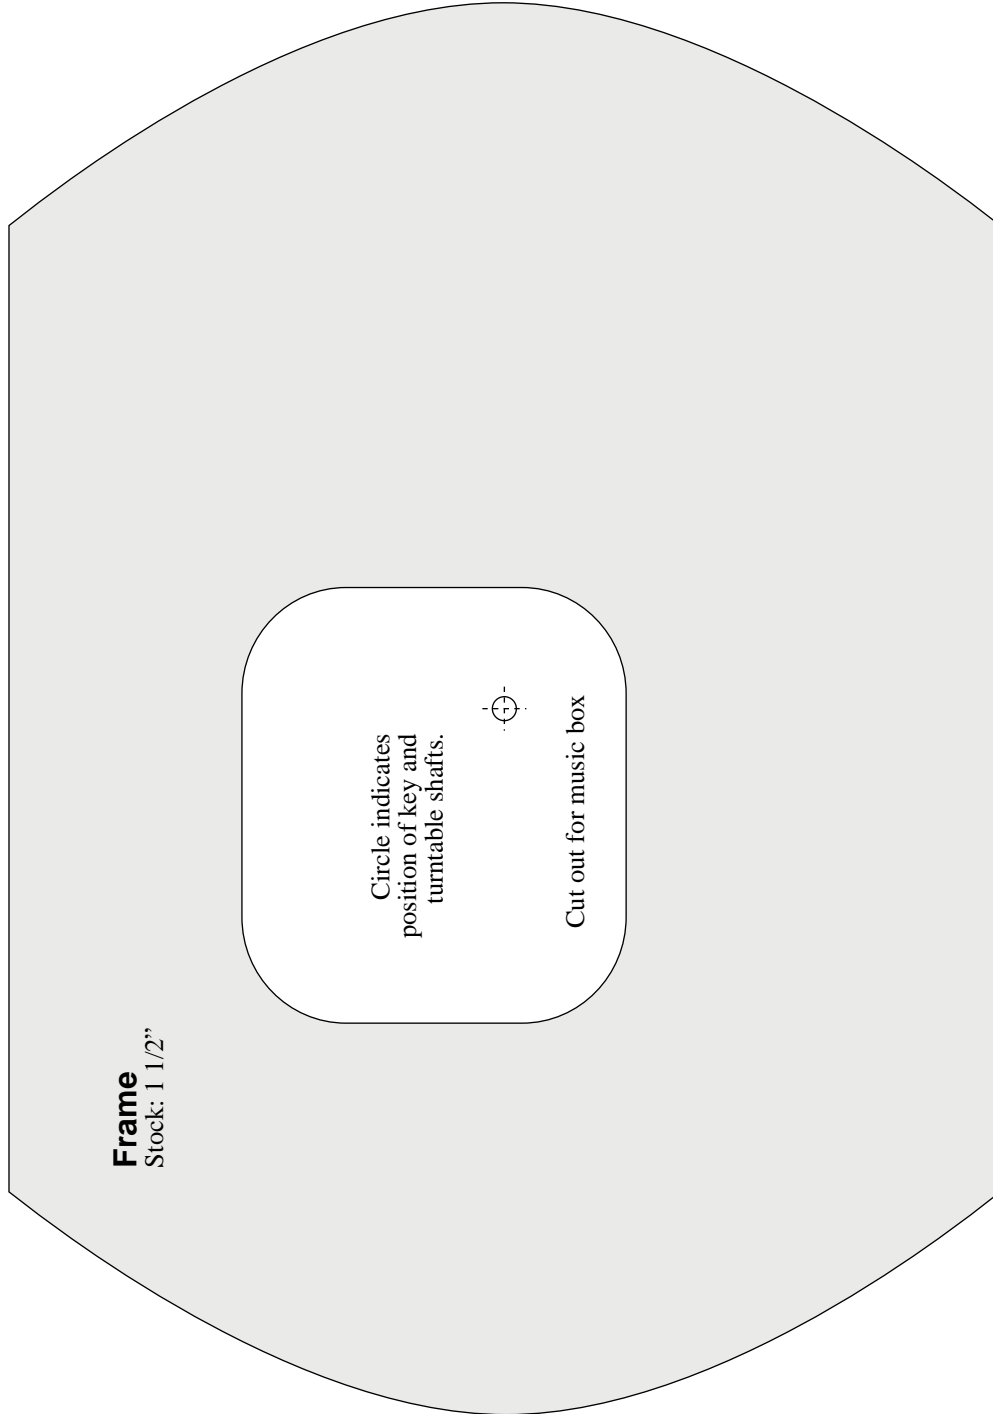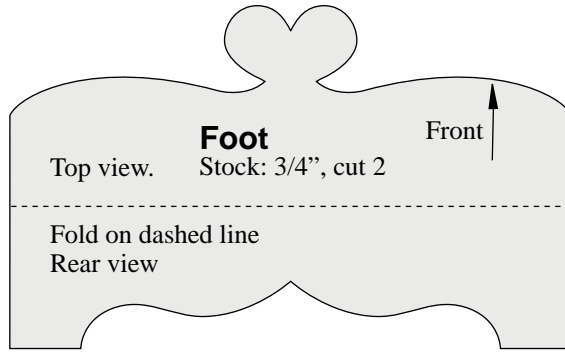


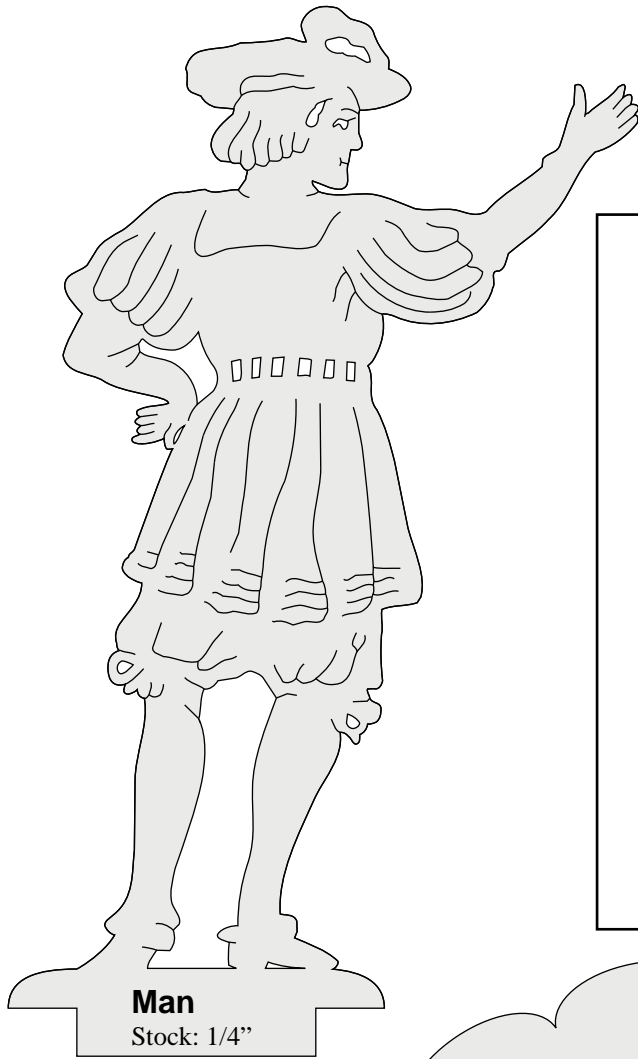

Turntable


Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

 Adjust slots, if necessary, for the thickness of material used.

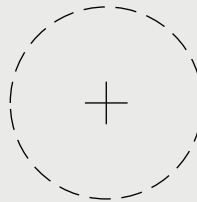


Dashed line indicates position of metal turntable on bottomside.

 Project #6

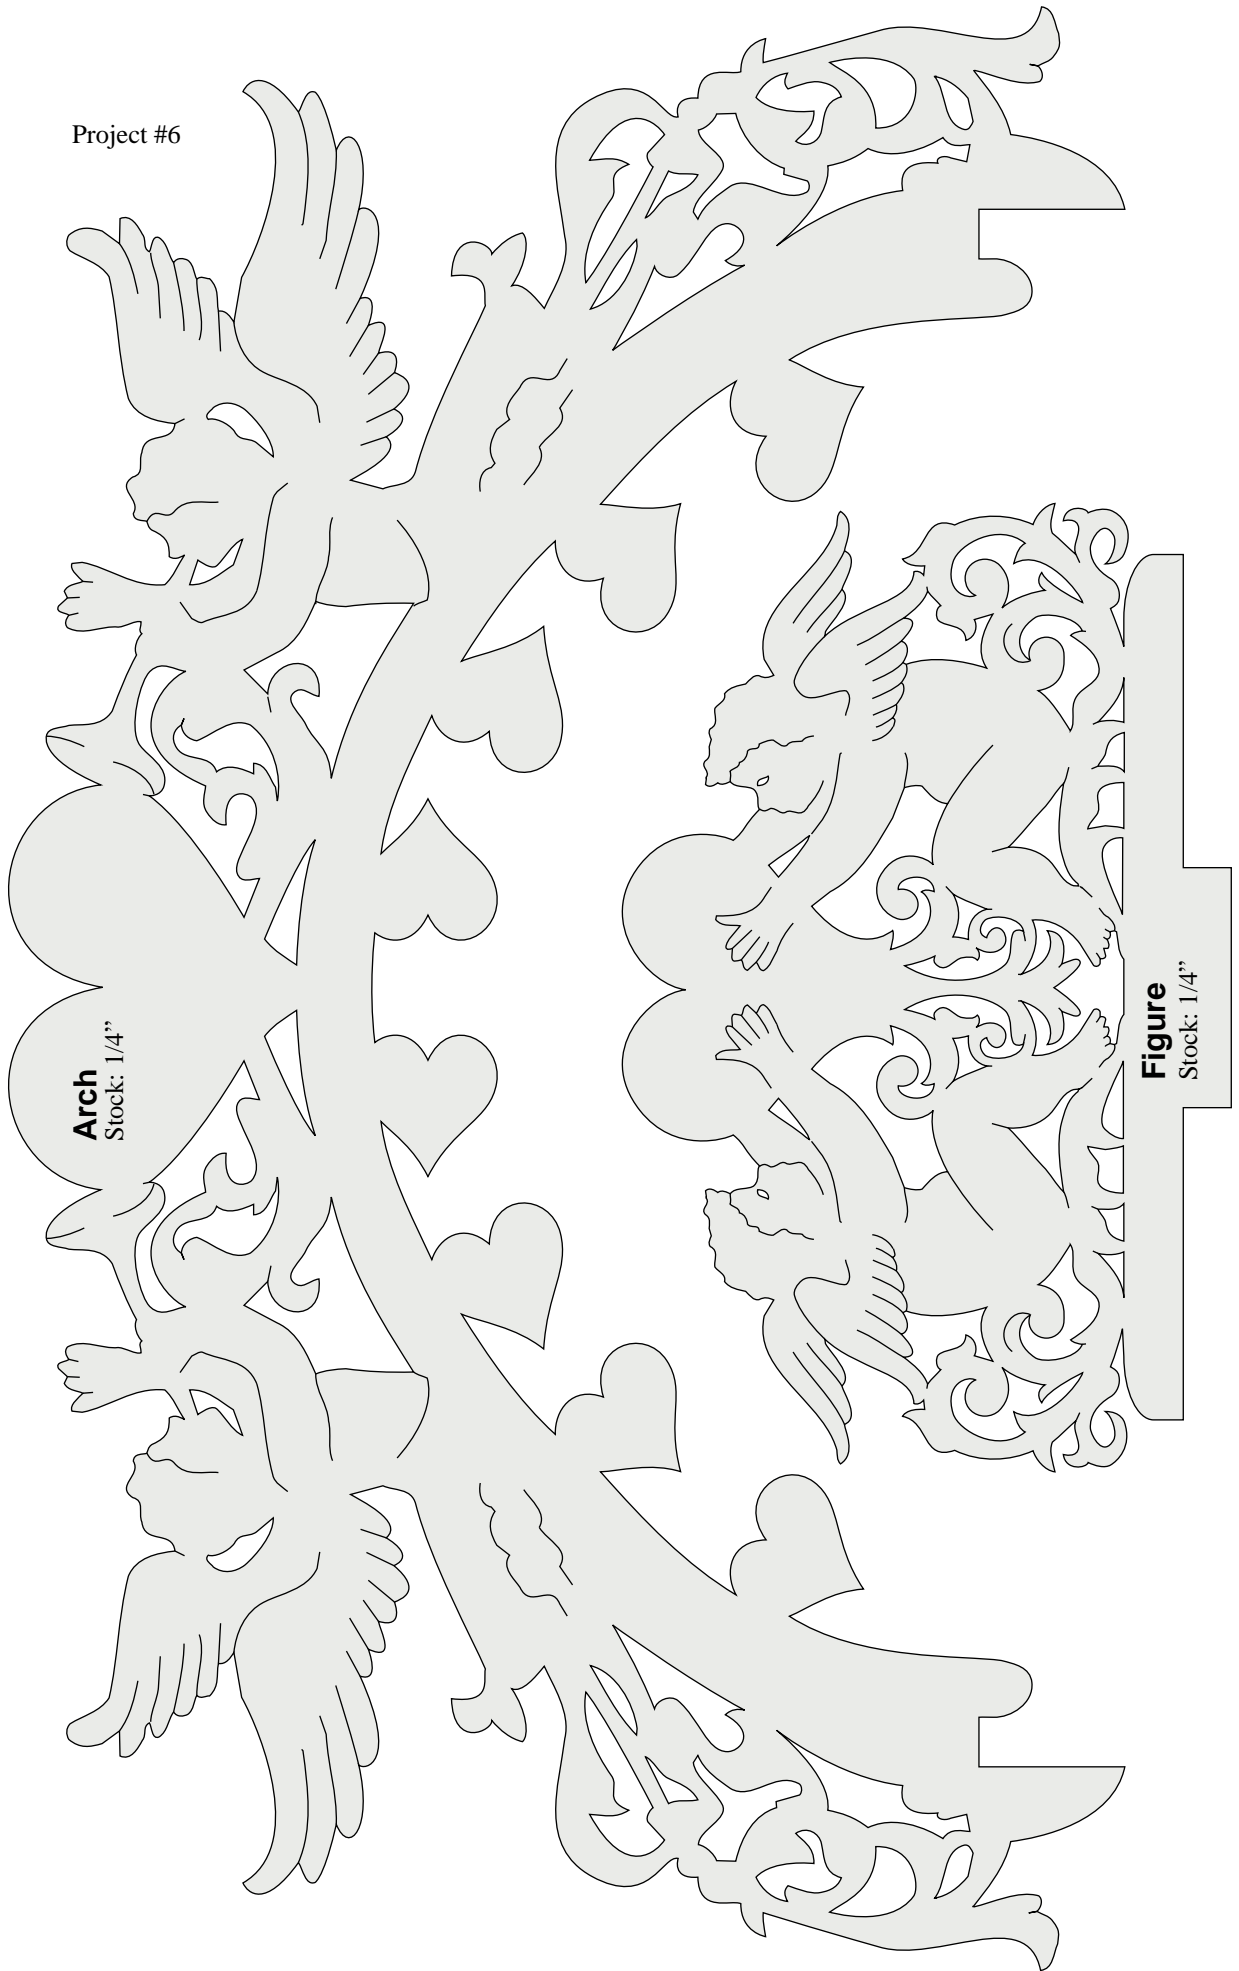


Arch
Stock: 1/4"

 Figure
Stock: 1/4"

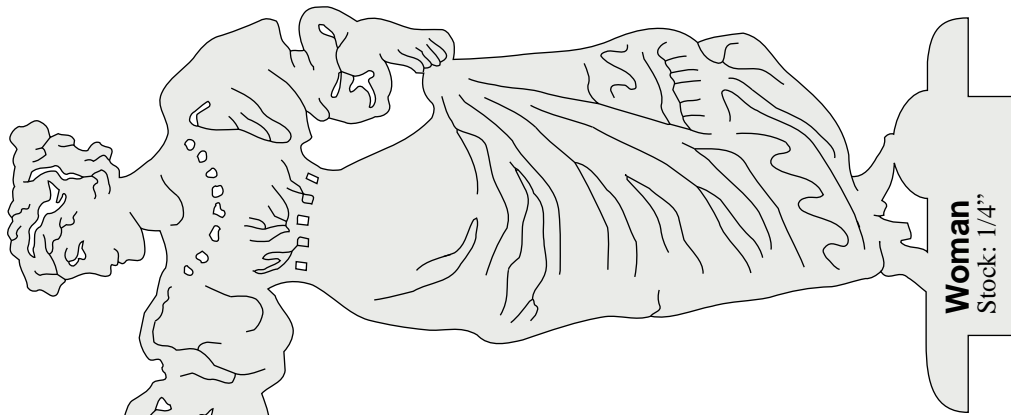


Woman
Stock: 1/4"

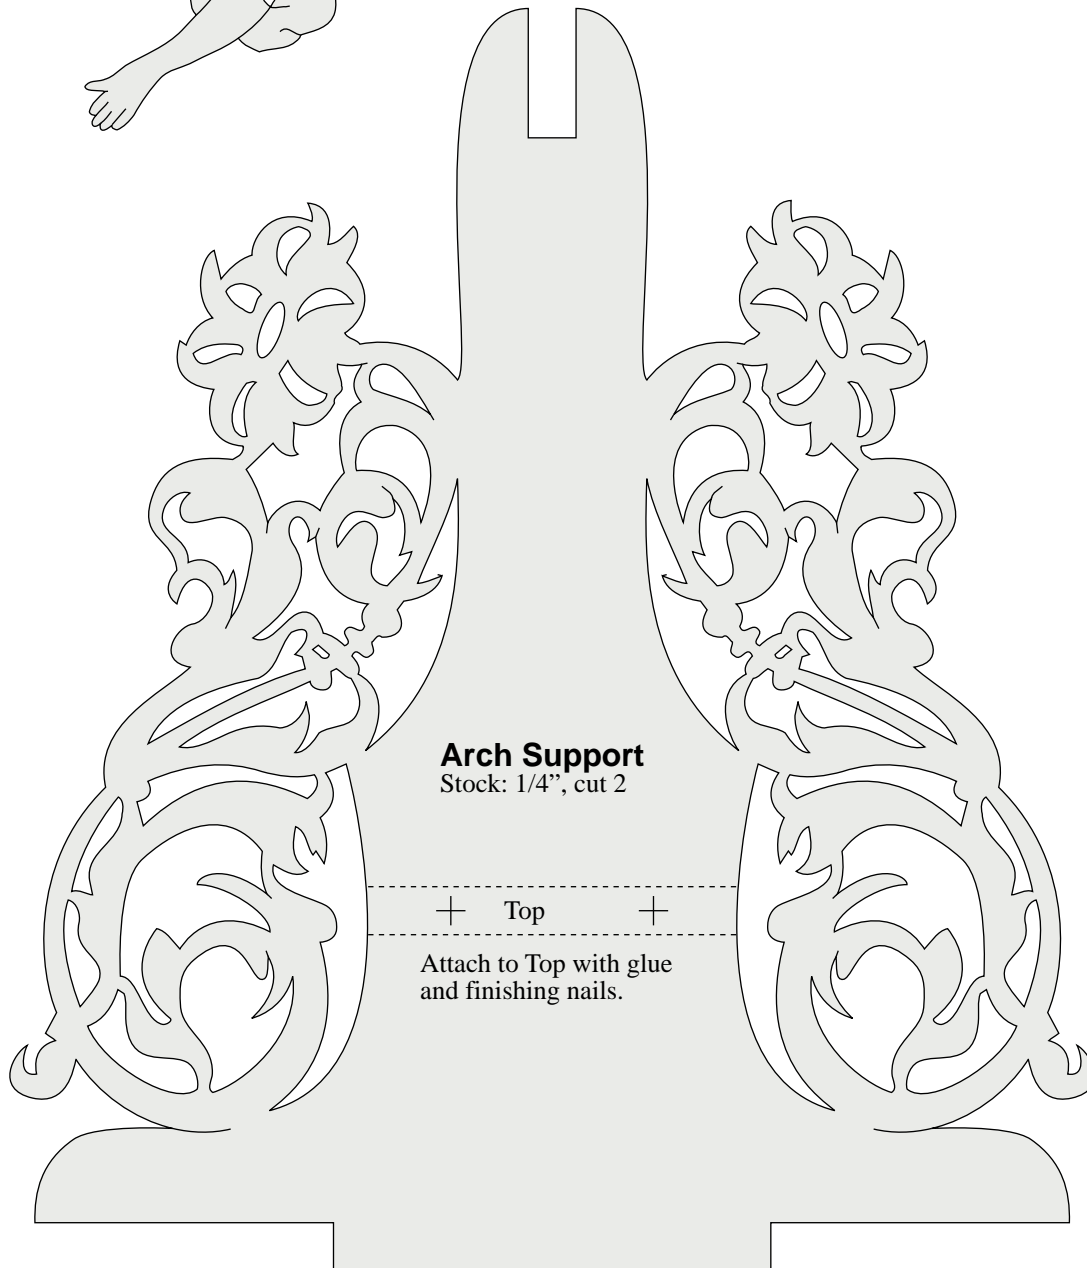 

Arch Support
Stock: 1/4", cut 2

+ Top +

 Attach to Top with glue
and finishing nails.

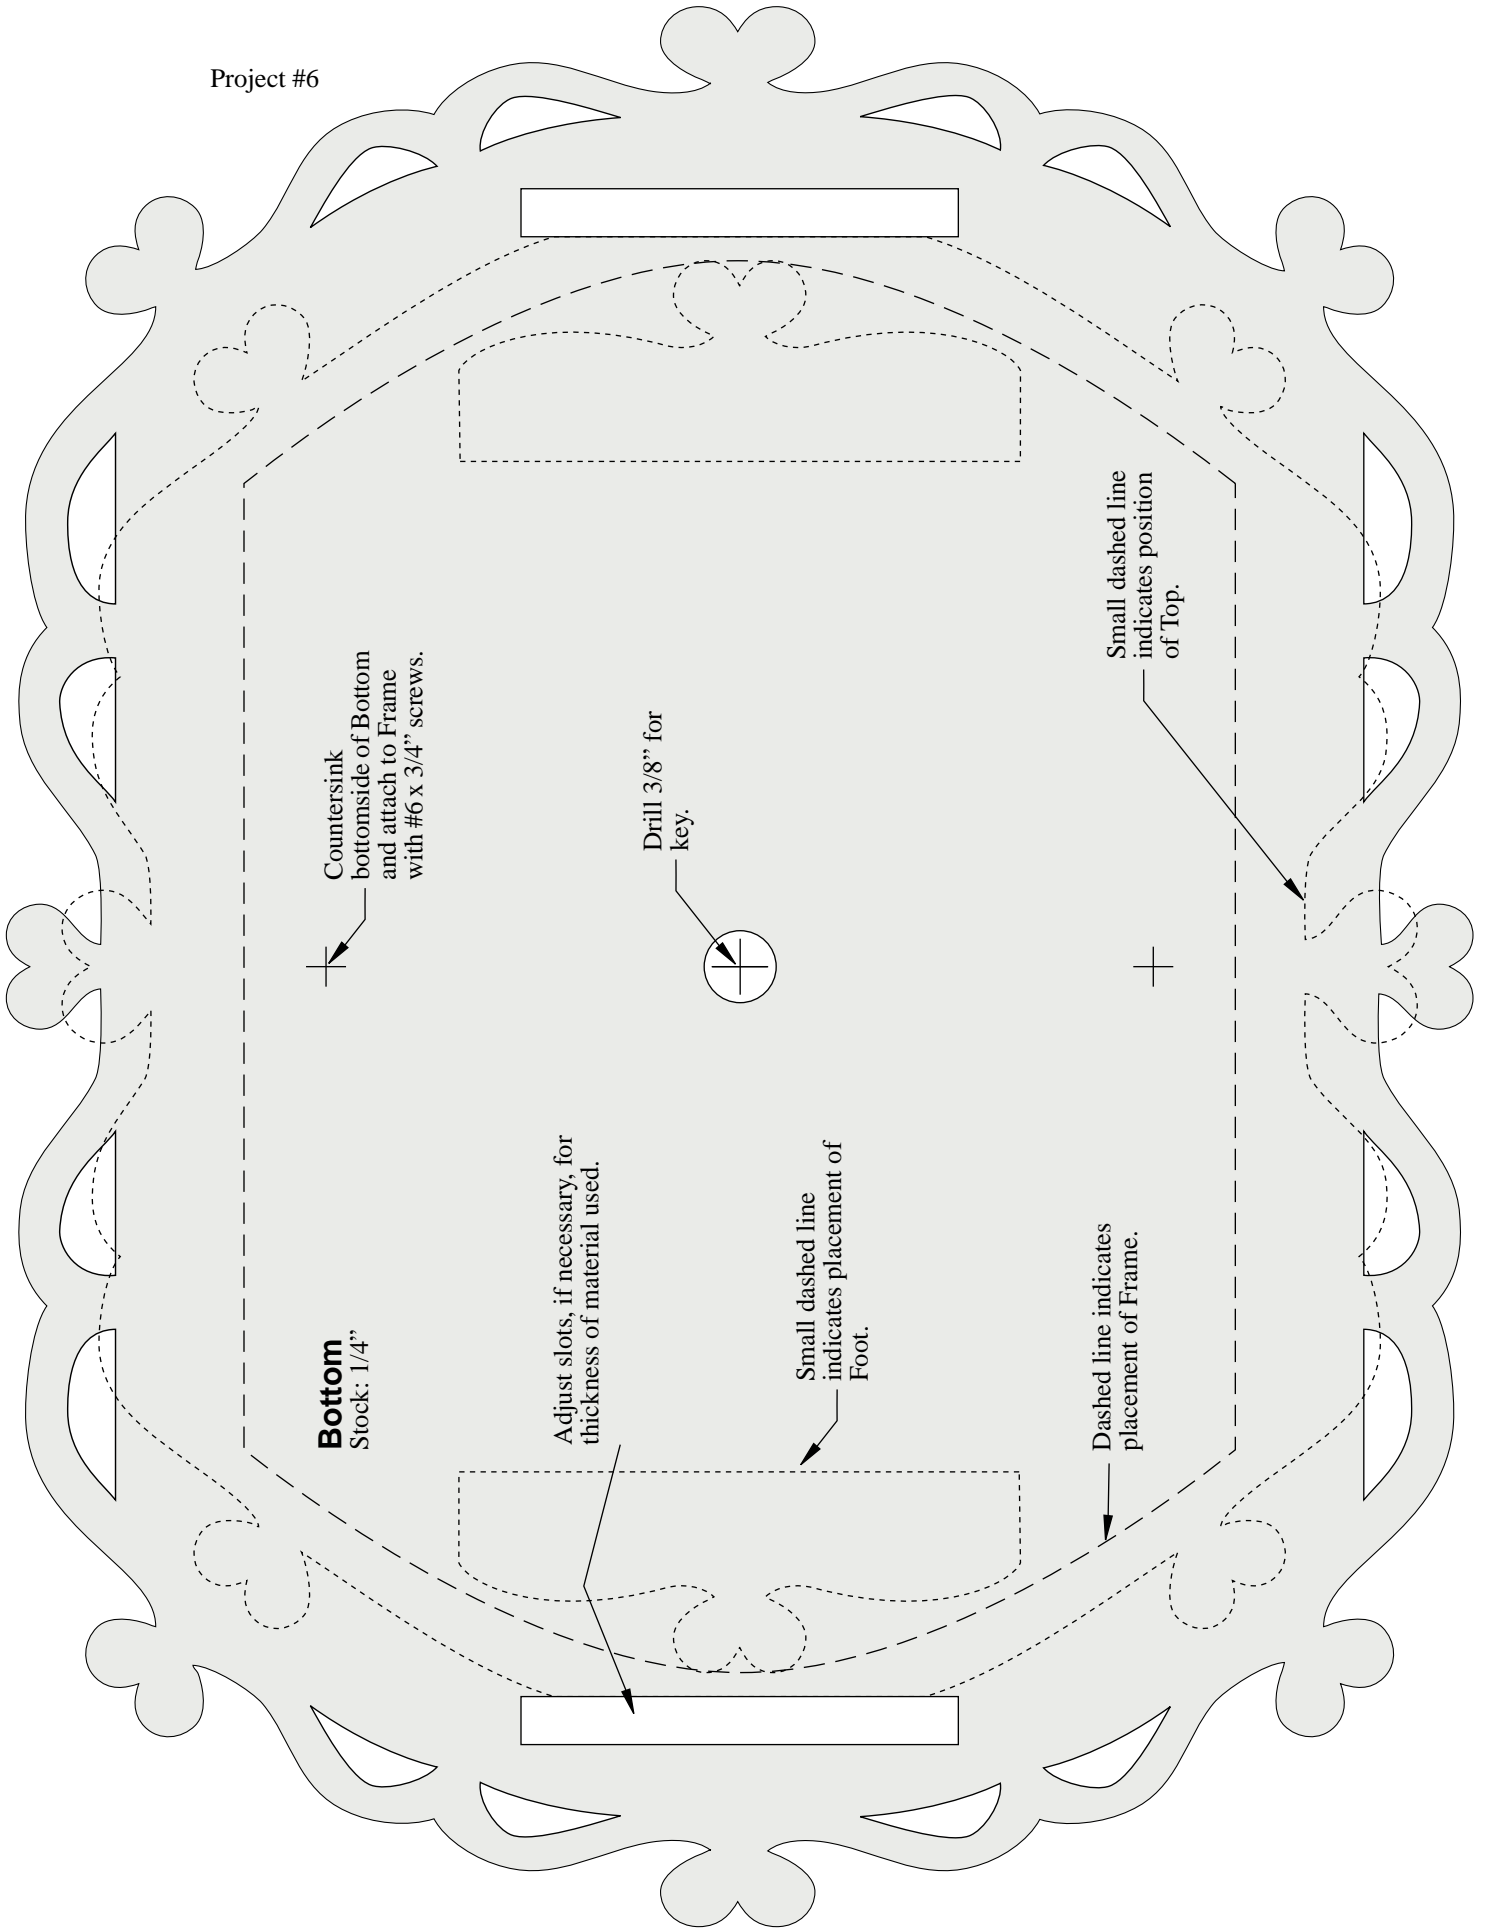

Bottom
Stock: 1/4"

Countersink
bottomside of Bottom
and attach to Frame
with #6 x 3/4" screws.

 
Drill 3/8" for
key.

 
Adjust slots, if necessary, for
thickness of material used.

Small dashed line
indicates placement of
Foot.

Dashed line indicates
placement of Frame.

Small dashed line
indicates position
of Top.

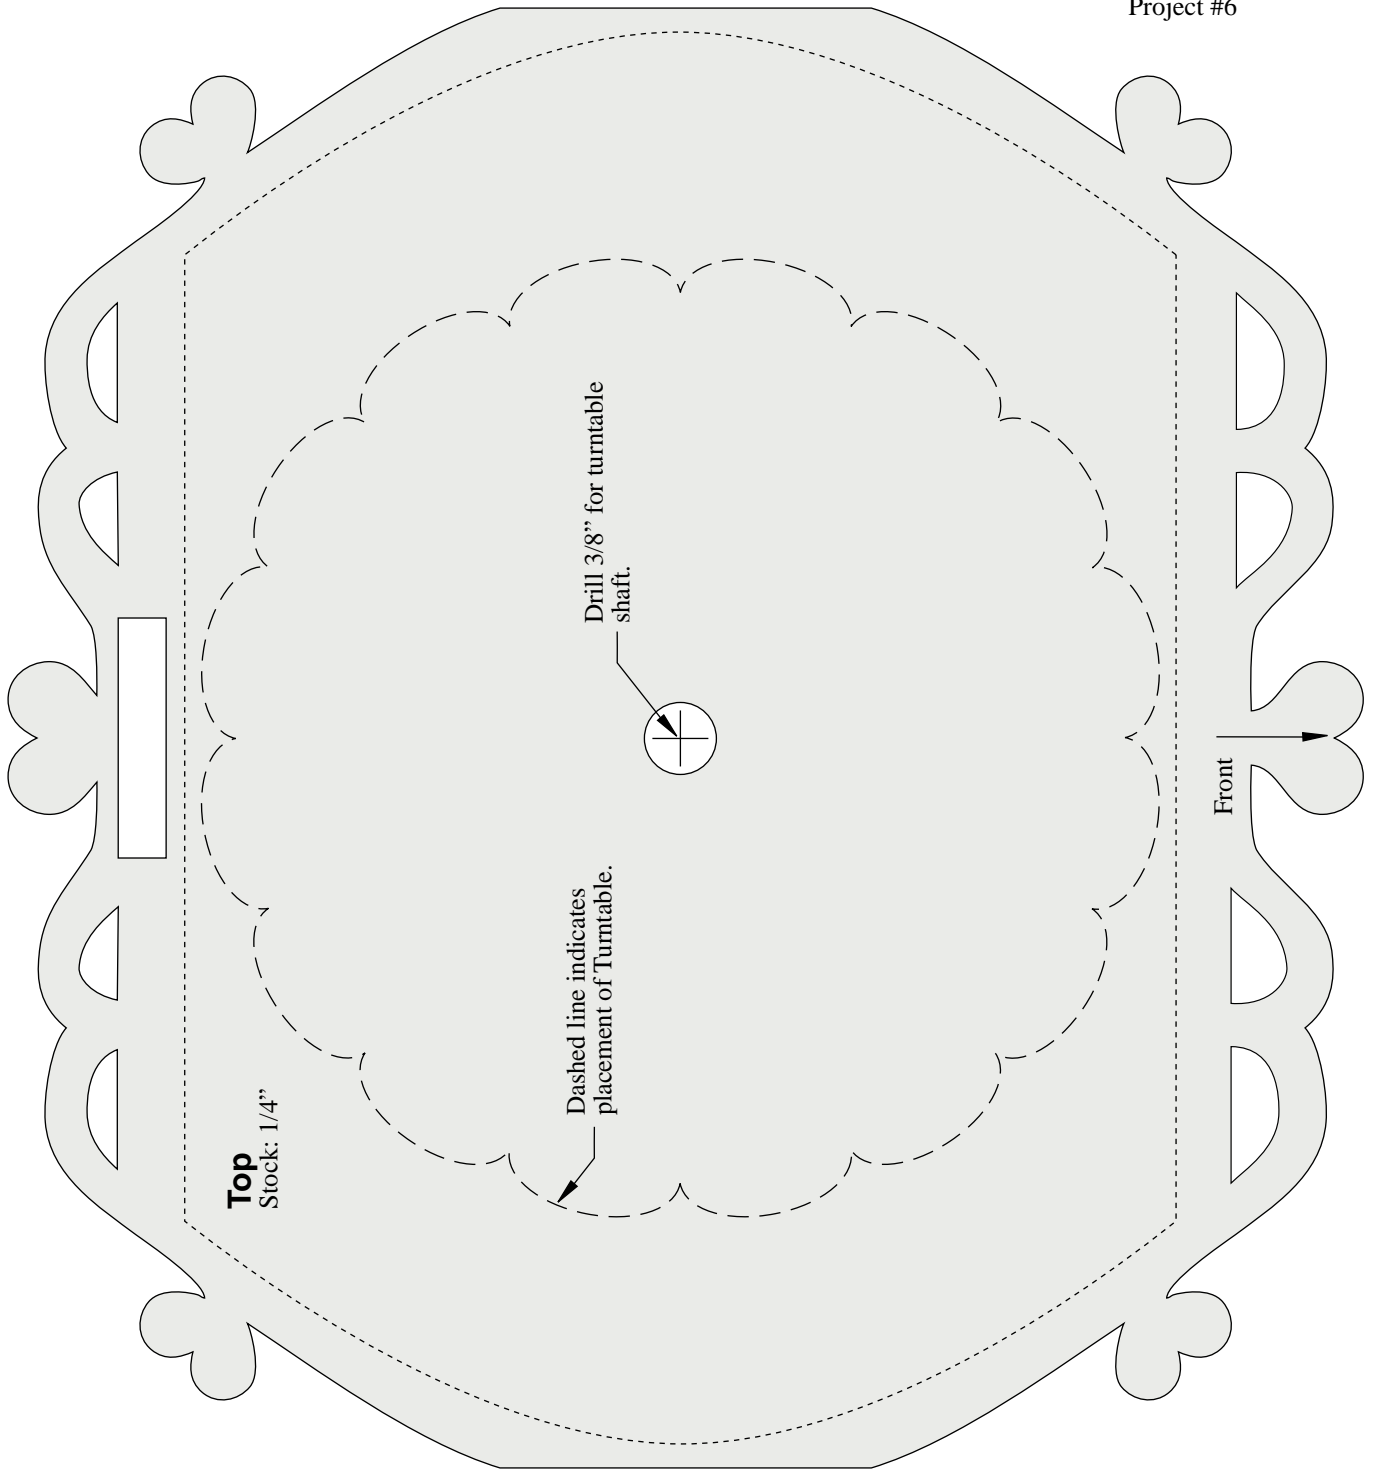

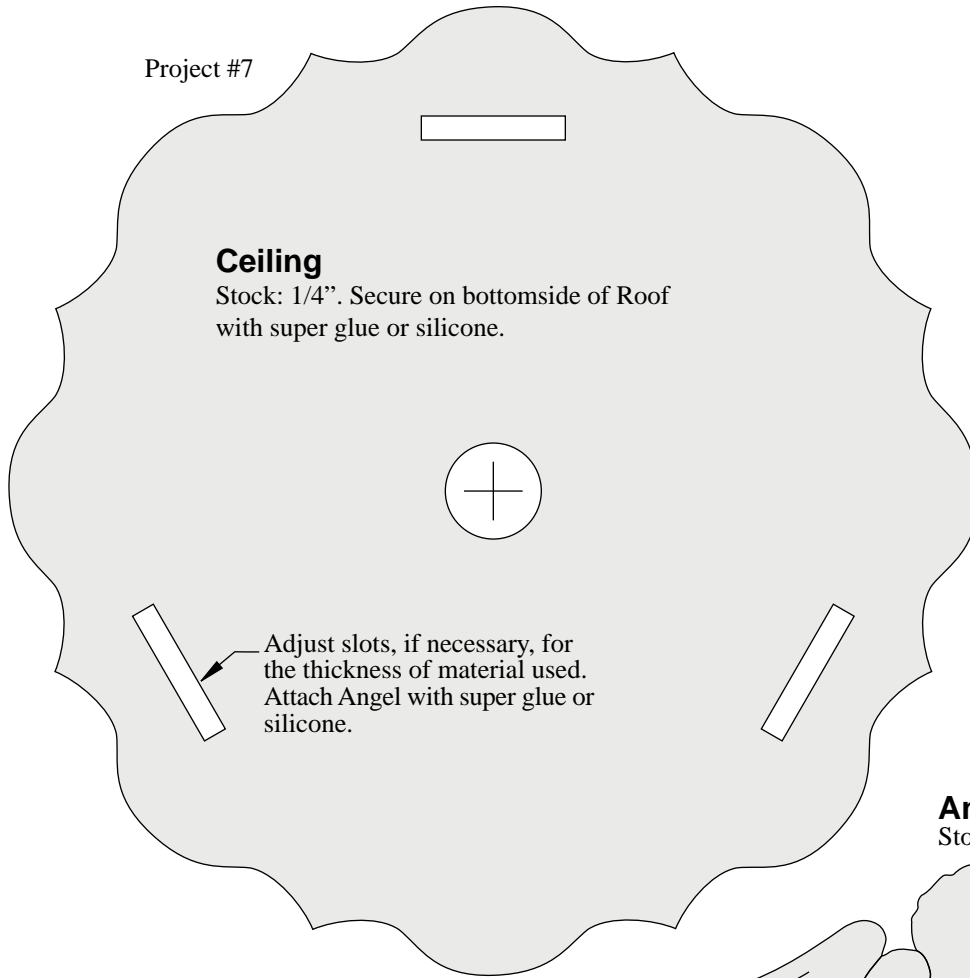



Ceiling

Stock: 1/4". Secure on bottomside of Roof with super glue or silicone.

Adjust slots, if necessary, for the thickness of material used. Attach Angel with super glue or silicone.

Angel

  Stock: 1/8", cut 3

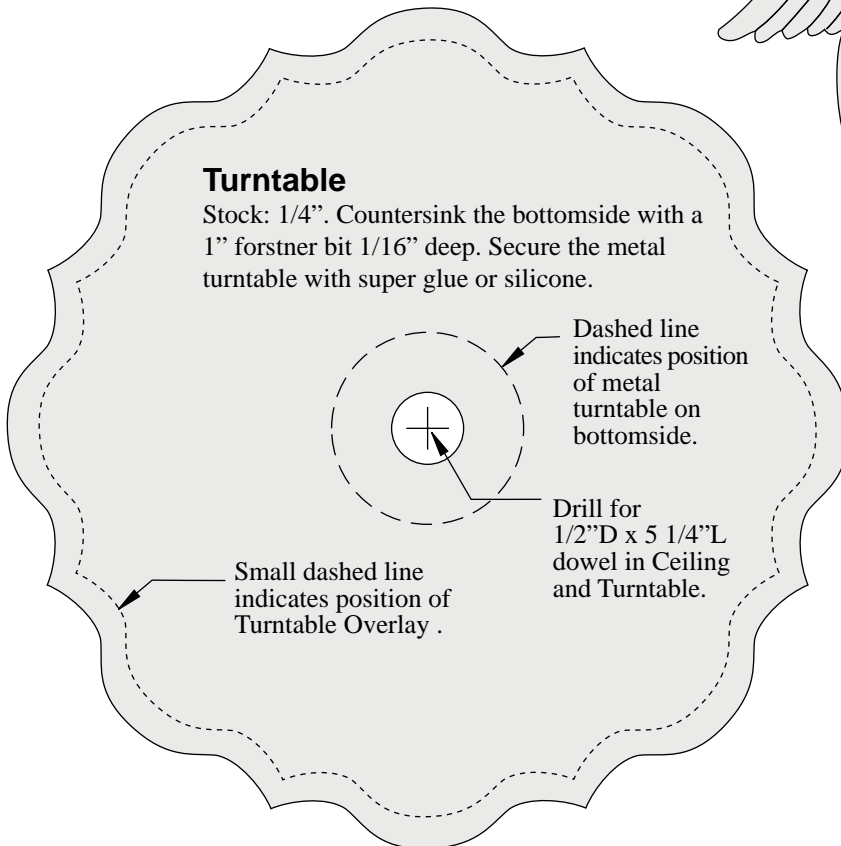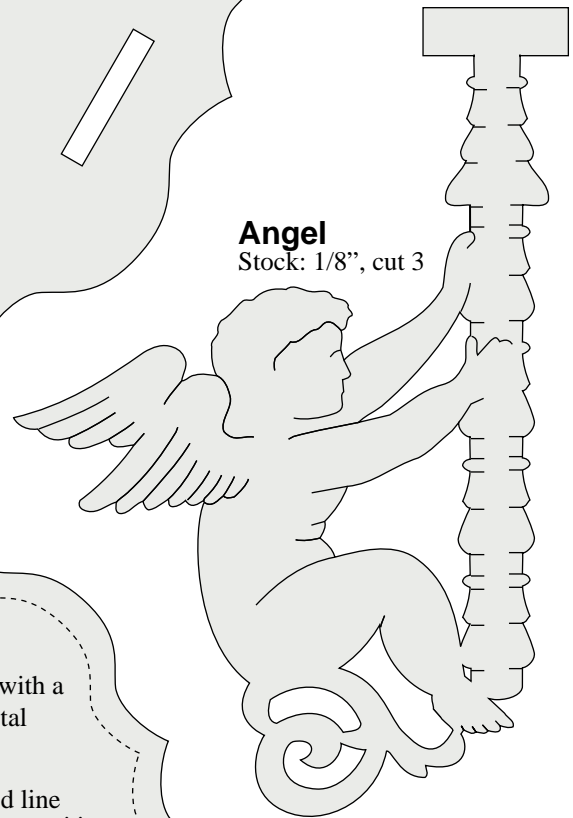

Turntable

 
Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

Dashed line indicates position of metal turntable on bottomside.

Drill for 1/2"D x 5 1/4"L dowel in Ceiling and Turntable.


Small dashed line indicates position of Turntable Overlay .

Top section

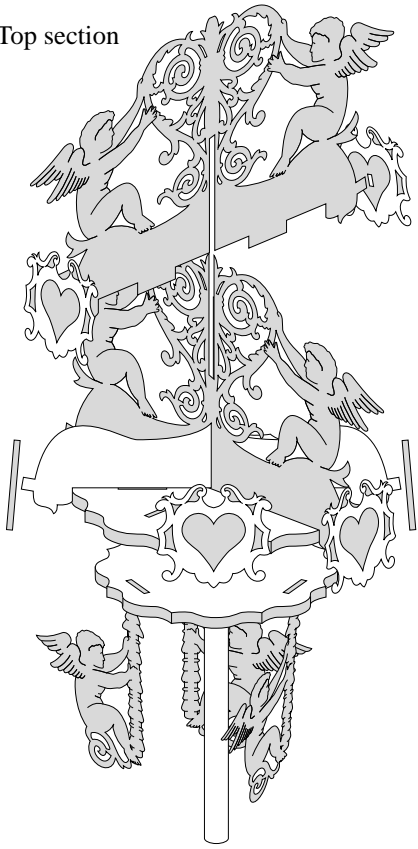

Project #7

 Bottom section

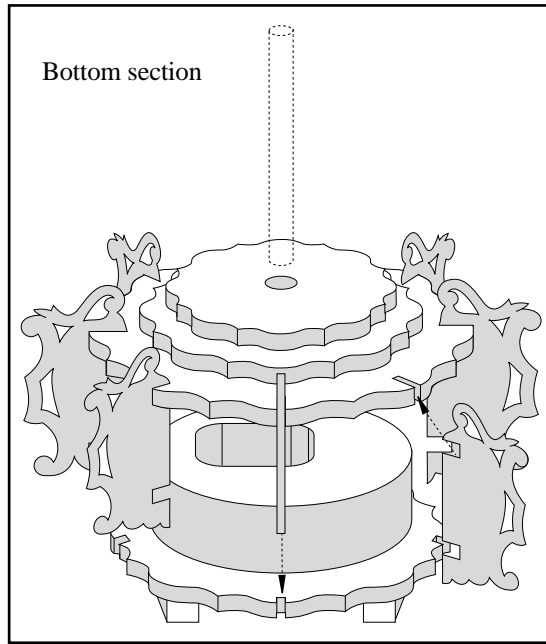

Frame

 
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.





Cut out for music box




Project #7

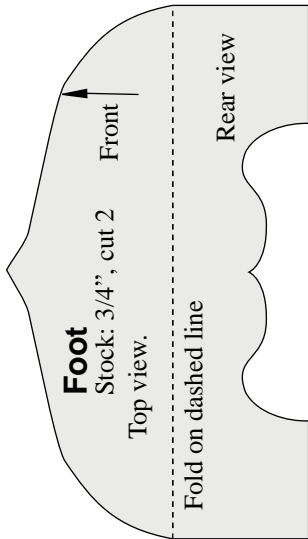


Turntable Overlay

     Stock: 1/4". Secure the Turntable Overlay with super glue or silicone.

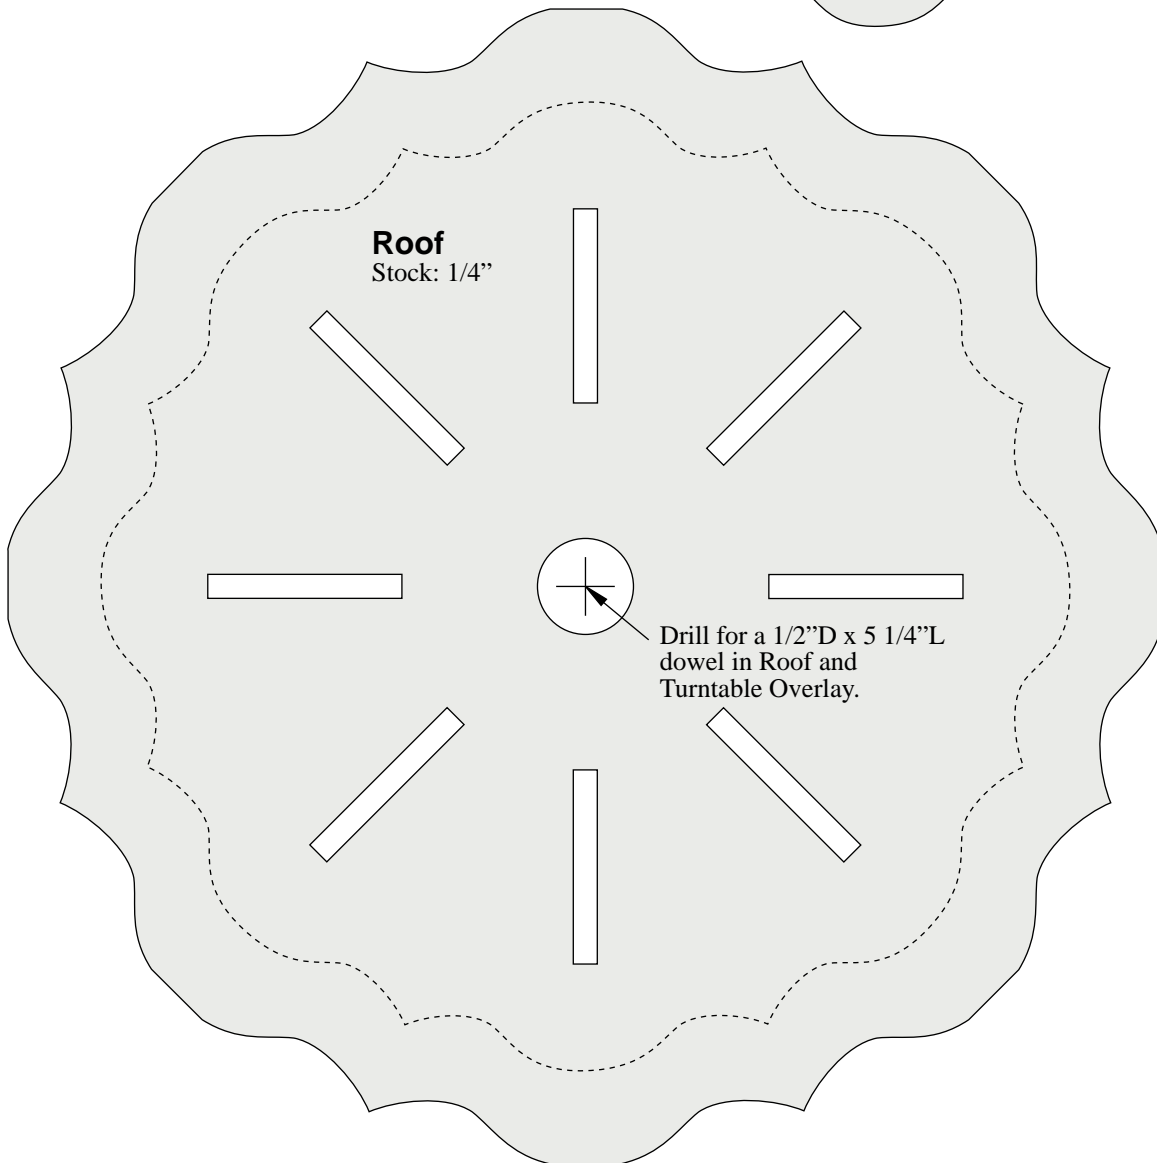

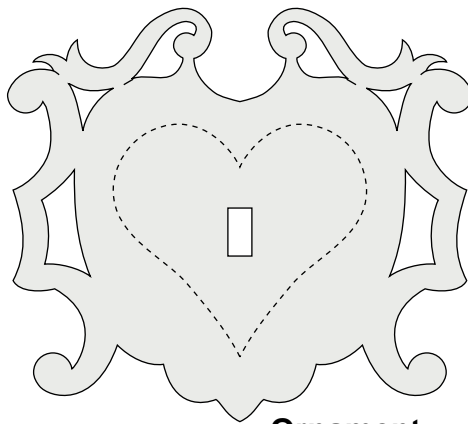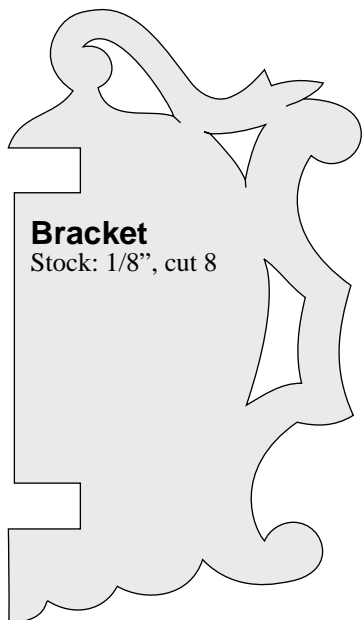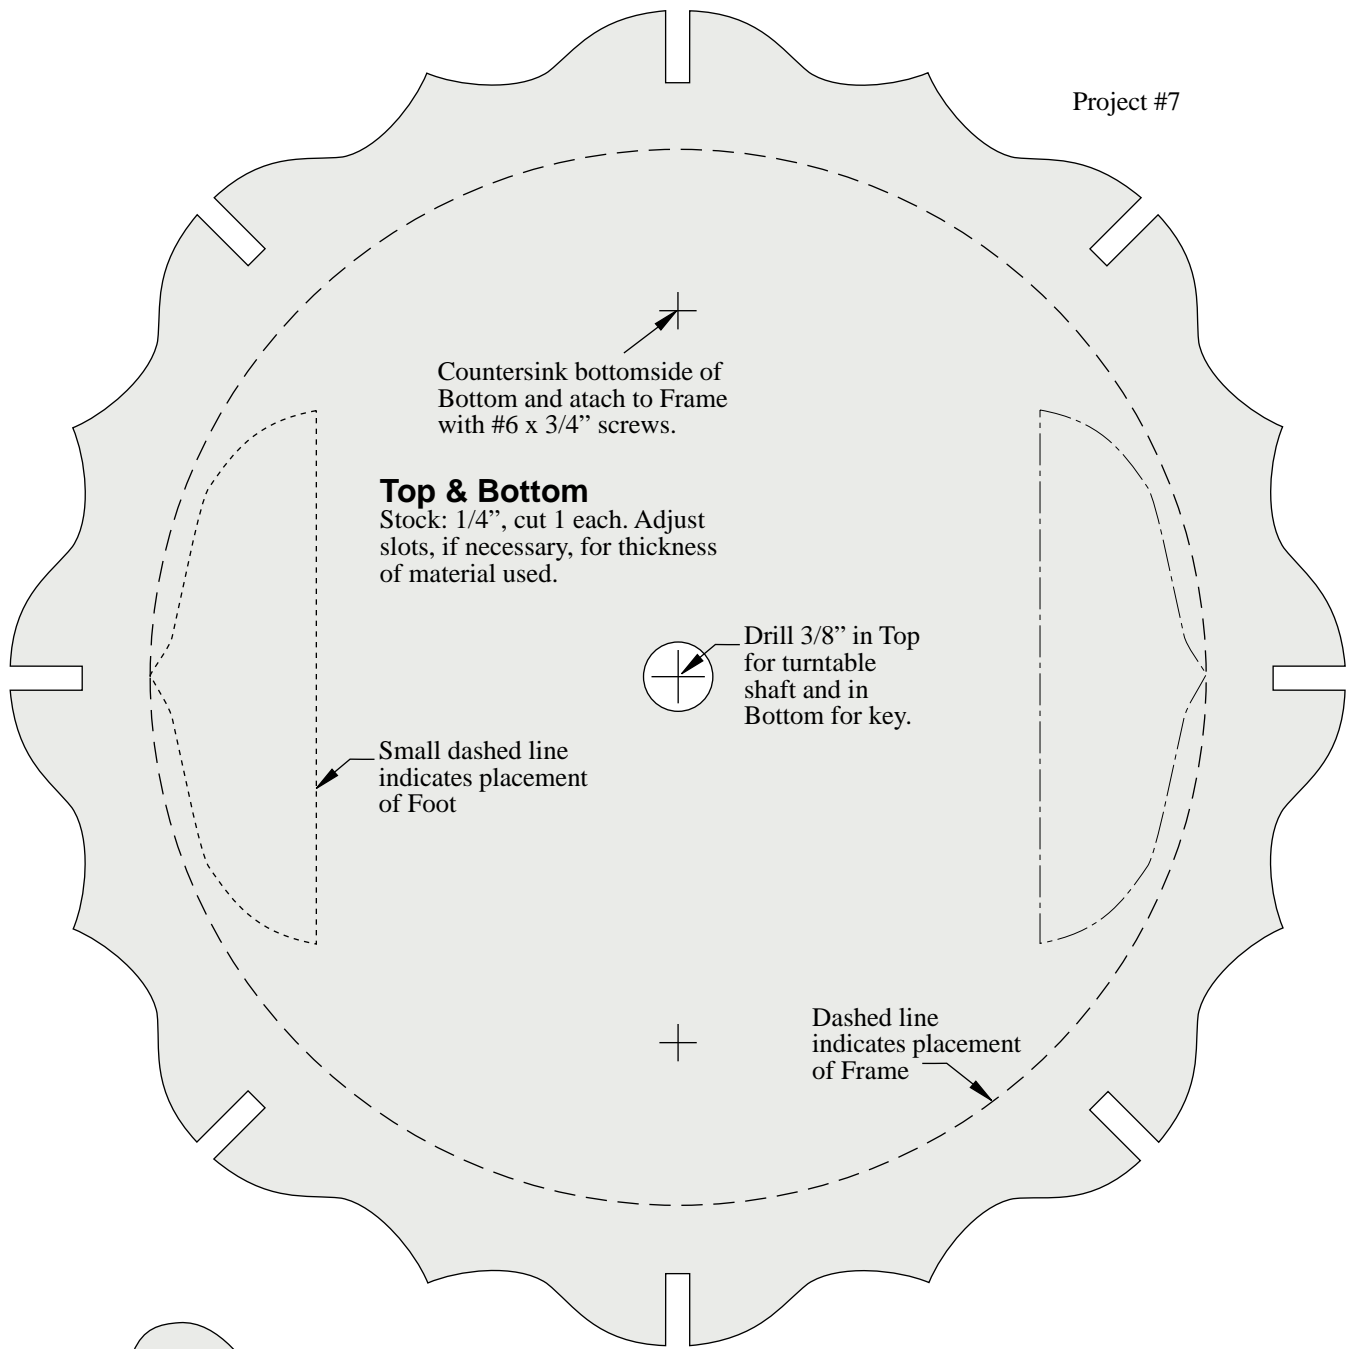


Ornament Overlay
Stock: 1/8", cut 8

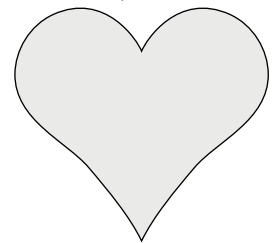 


Project #7

22.5° Sand inside
edges 22.5° to fit
in corner of
Crest (A) & (B)
on Roof.

 
22.5°
Top view

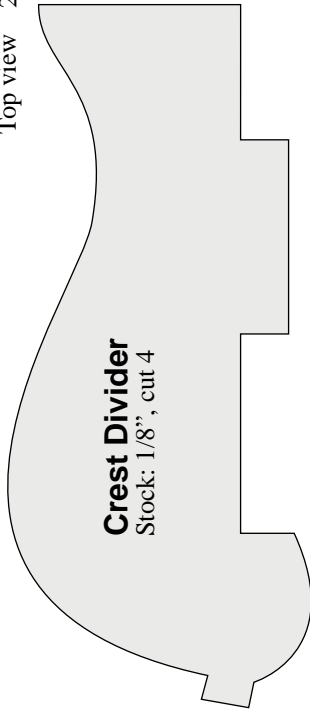

A — Cut this slot for Crest (A)


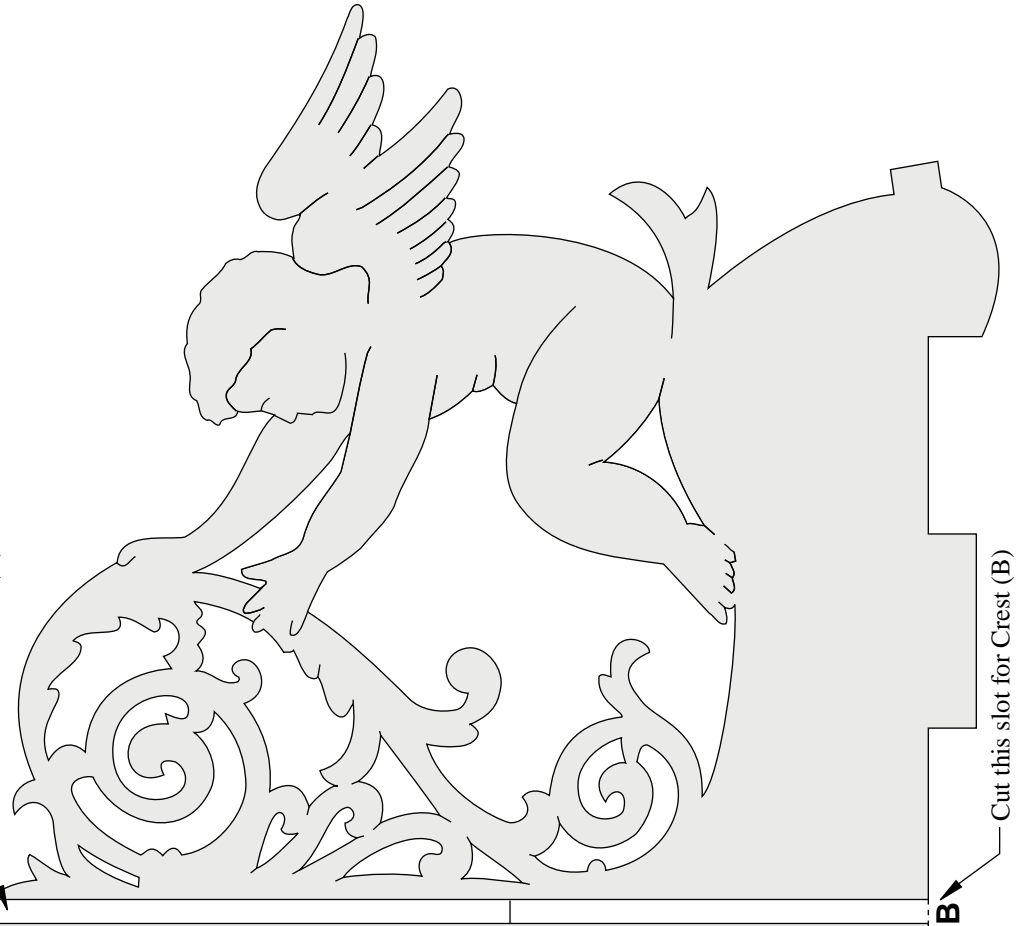 


B — Cut this slot for Crest (B)

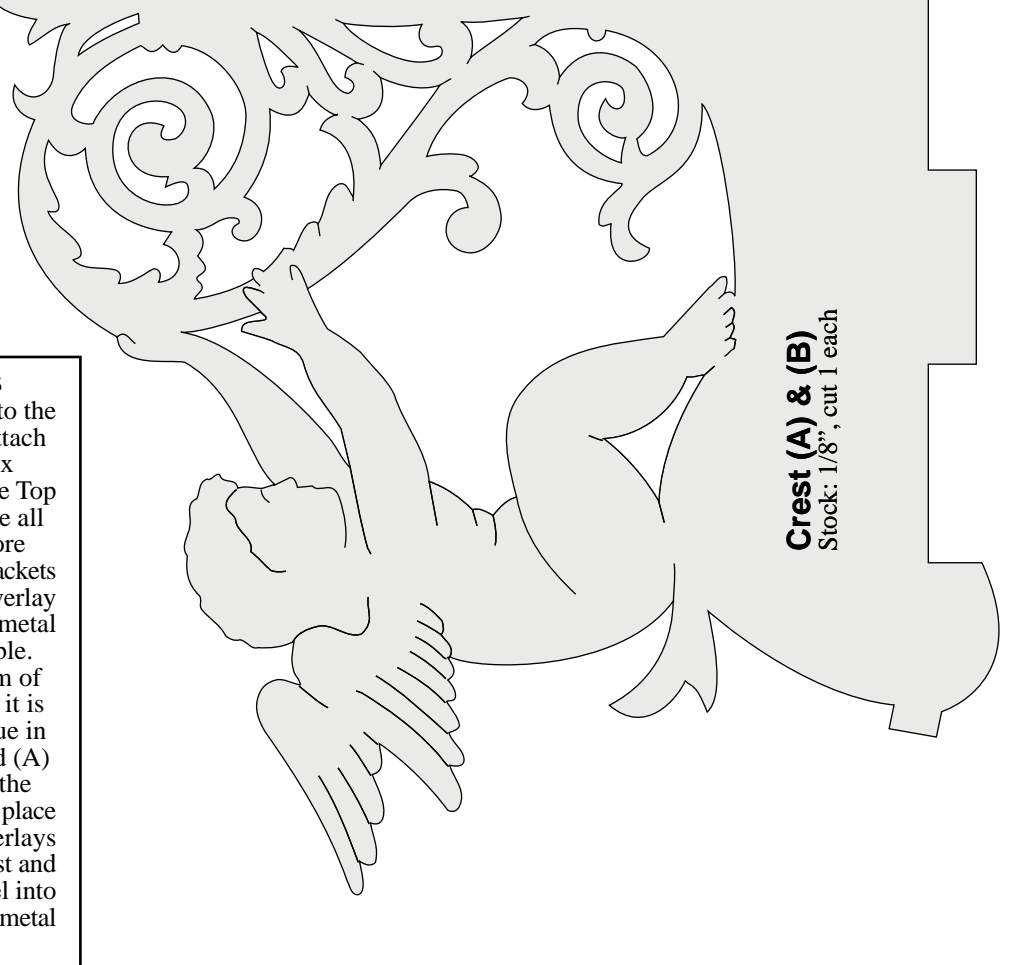 

Assembly Instructions

  Assemble by first attaching the Feet to the Bottom with glue or silicone. Next attach the Frame, making sure the music box movement is secure in place. Place the Top into position on the Frame, being sure all the slots for the Brackets line up before securing it in place. Then secure the Brackets in place. Now attach the Turntable Overlay to the Turntable, and then secure the metal turntable to the bottom of the Turntable. Next, secure the Ceiling to the bottom of the Roof. Then insert the dowel until it is flush with the top of the Roof and glue in place. Now secure both Crest (B) and (A) into place on the Roof, and then add the Crest Dividers. Secure the Angels into place in the Ceiling, and the Ornament Overlays and Ornaments on the tabs of the Crest and Crest Dividers. Now, secure the dowel into the Turntable assembly, and attach the metal turntable to the movement.

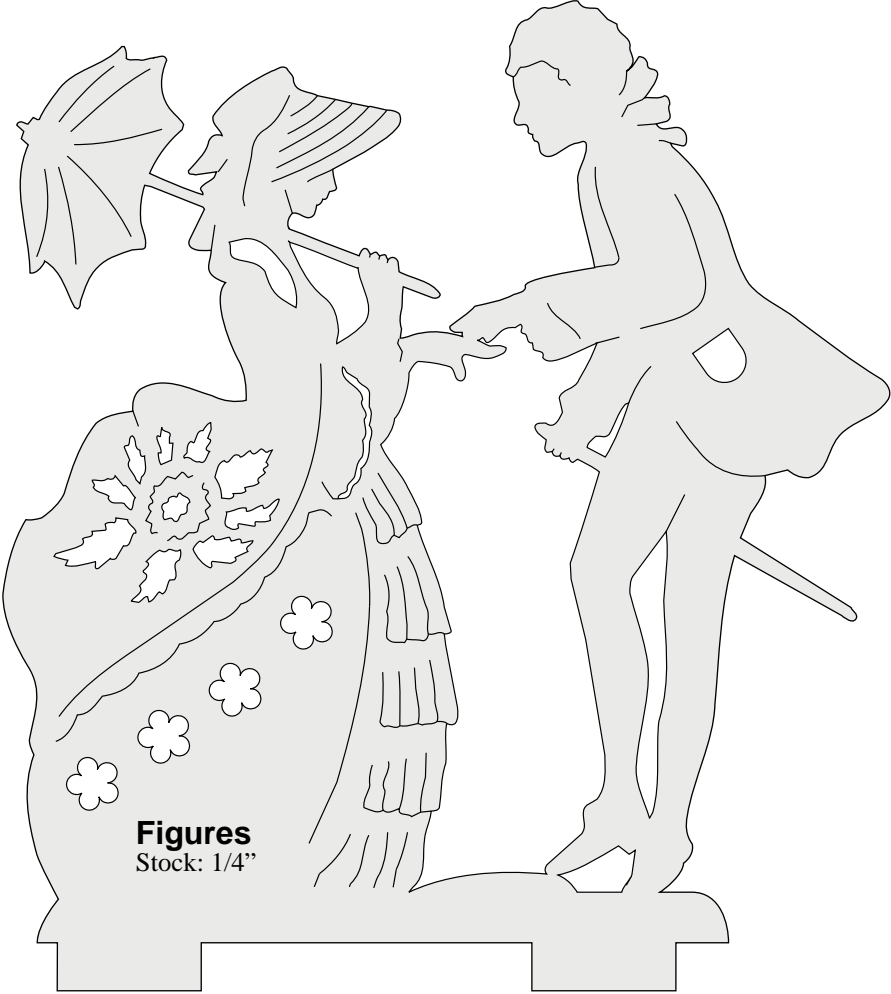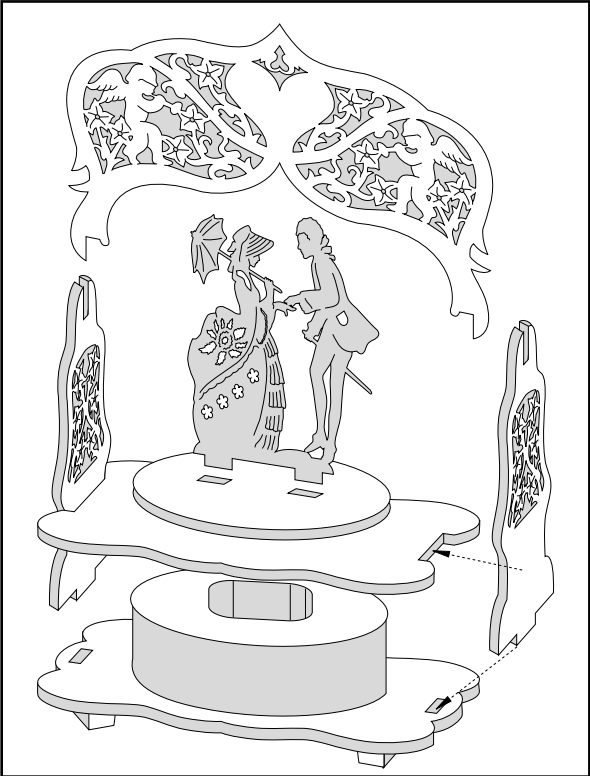


Project #8

Turntable

Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

Dashed line indicates position of metal turntable on bottomside.

 
Adjust slots if necessary for thickness of the material used.

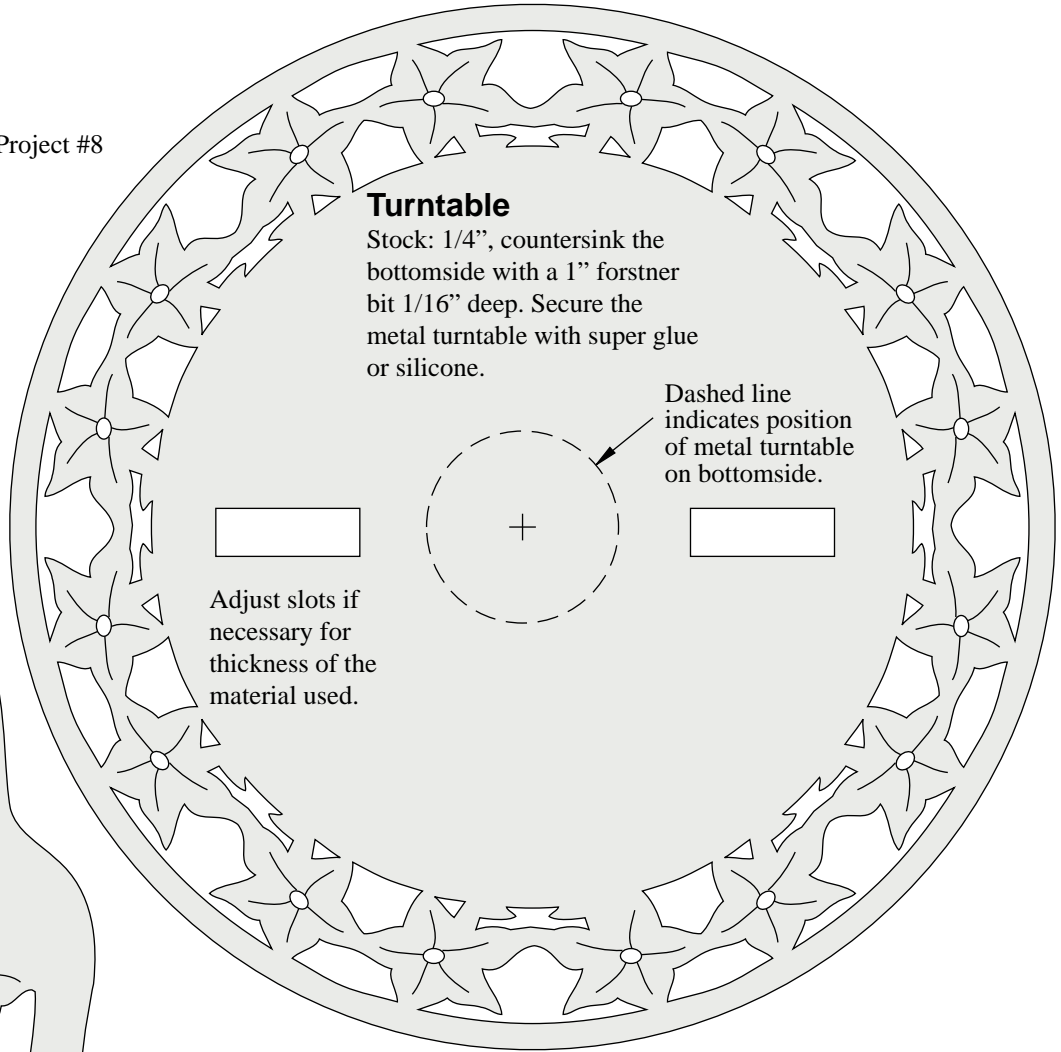



Arch Support

Stock: 1/4", cut 2

 
Attach to Top with #6 x 5/8" nails and glue.

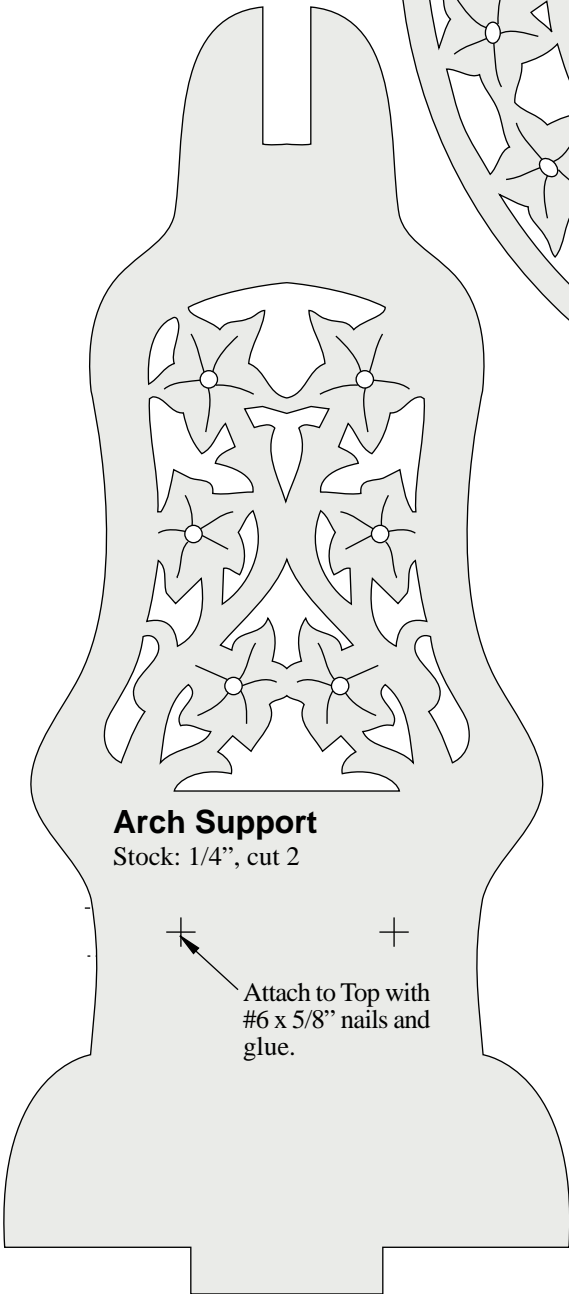


Project #8

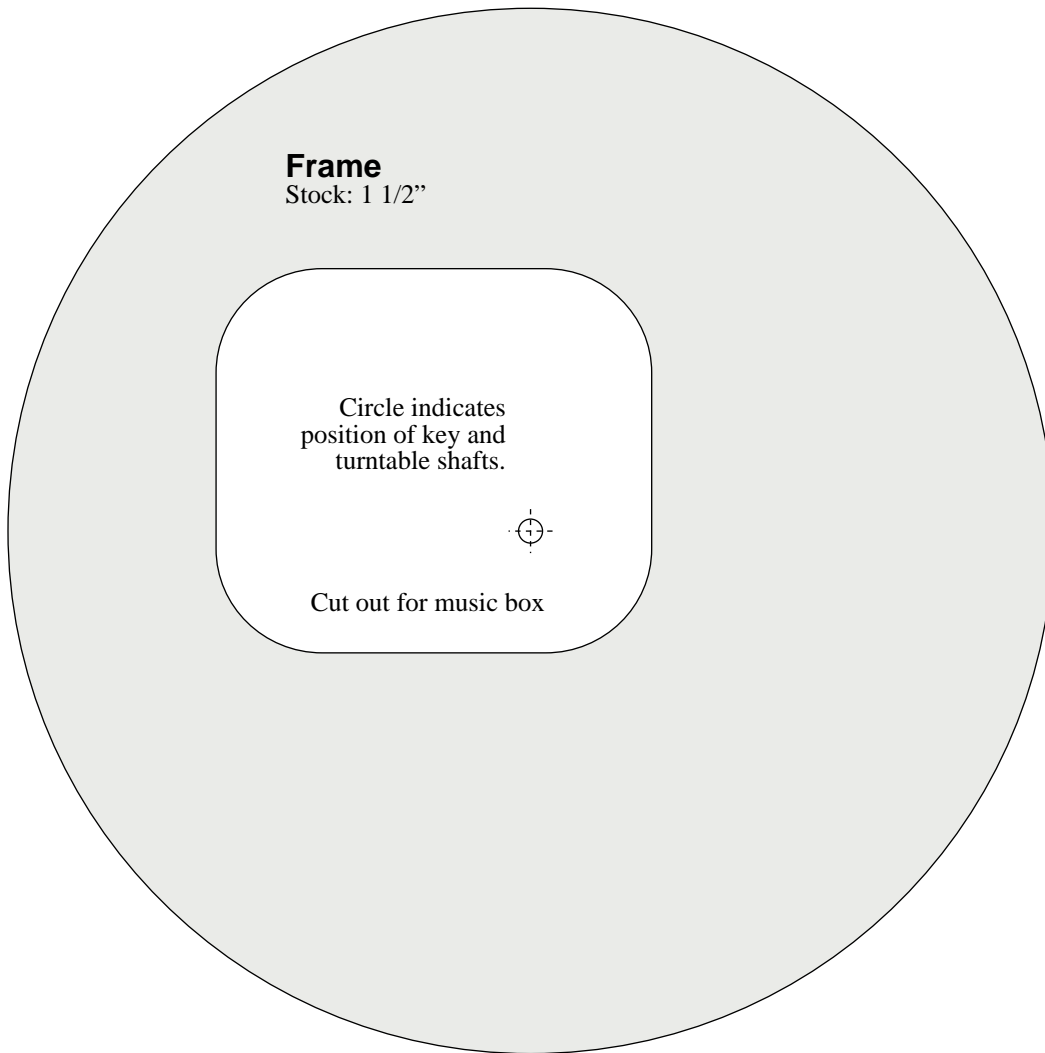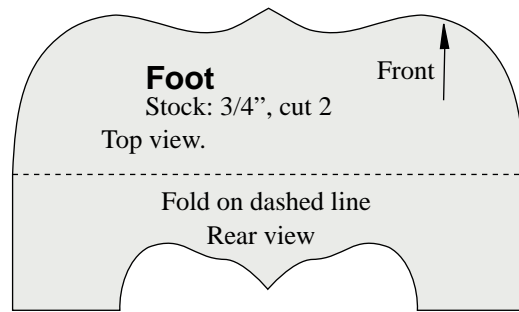  

Project #8

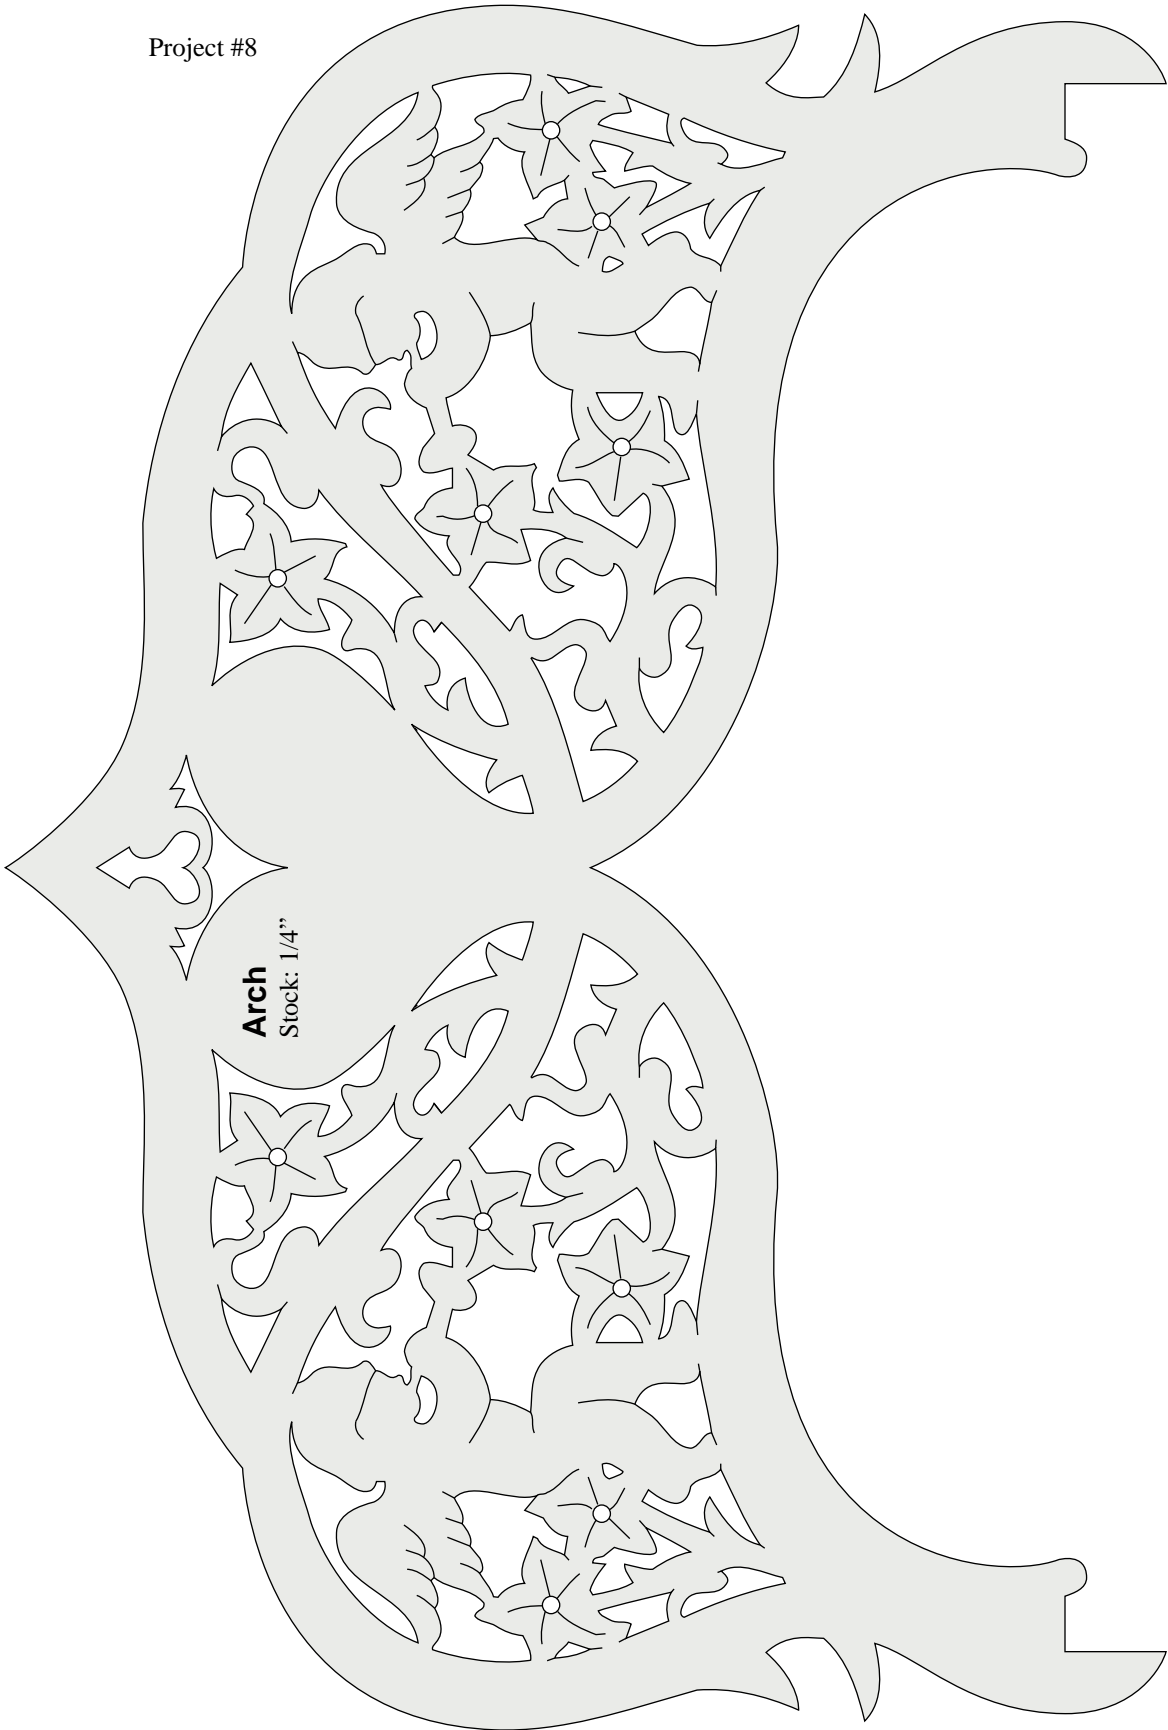 


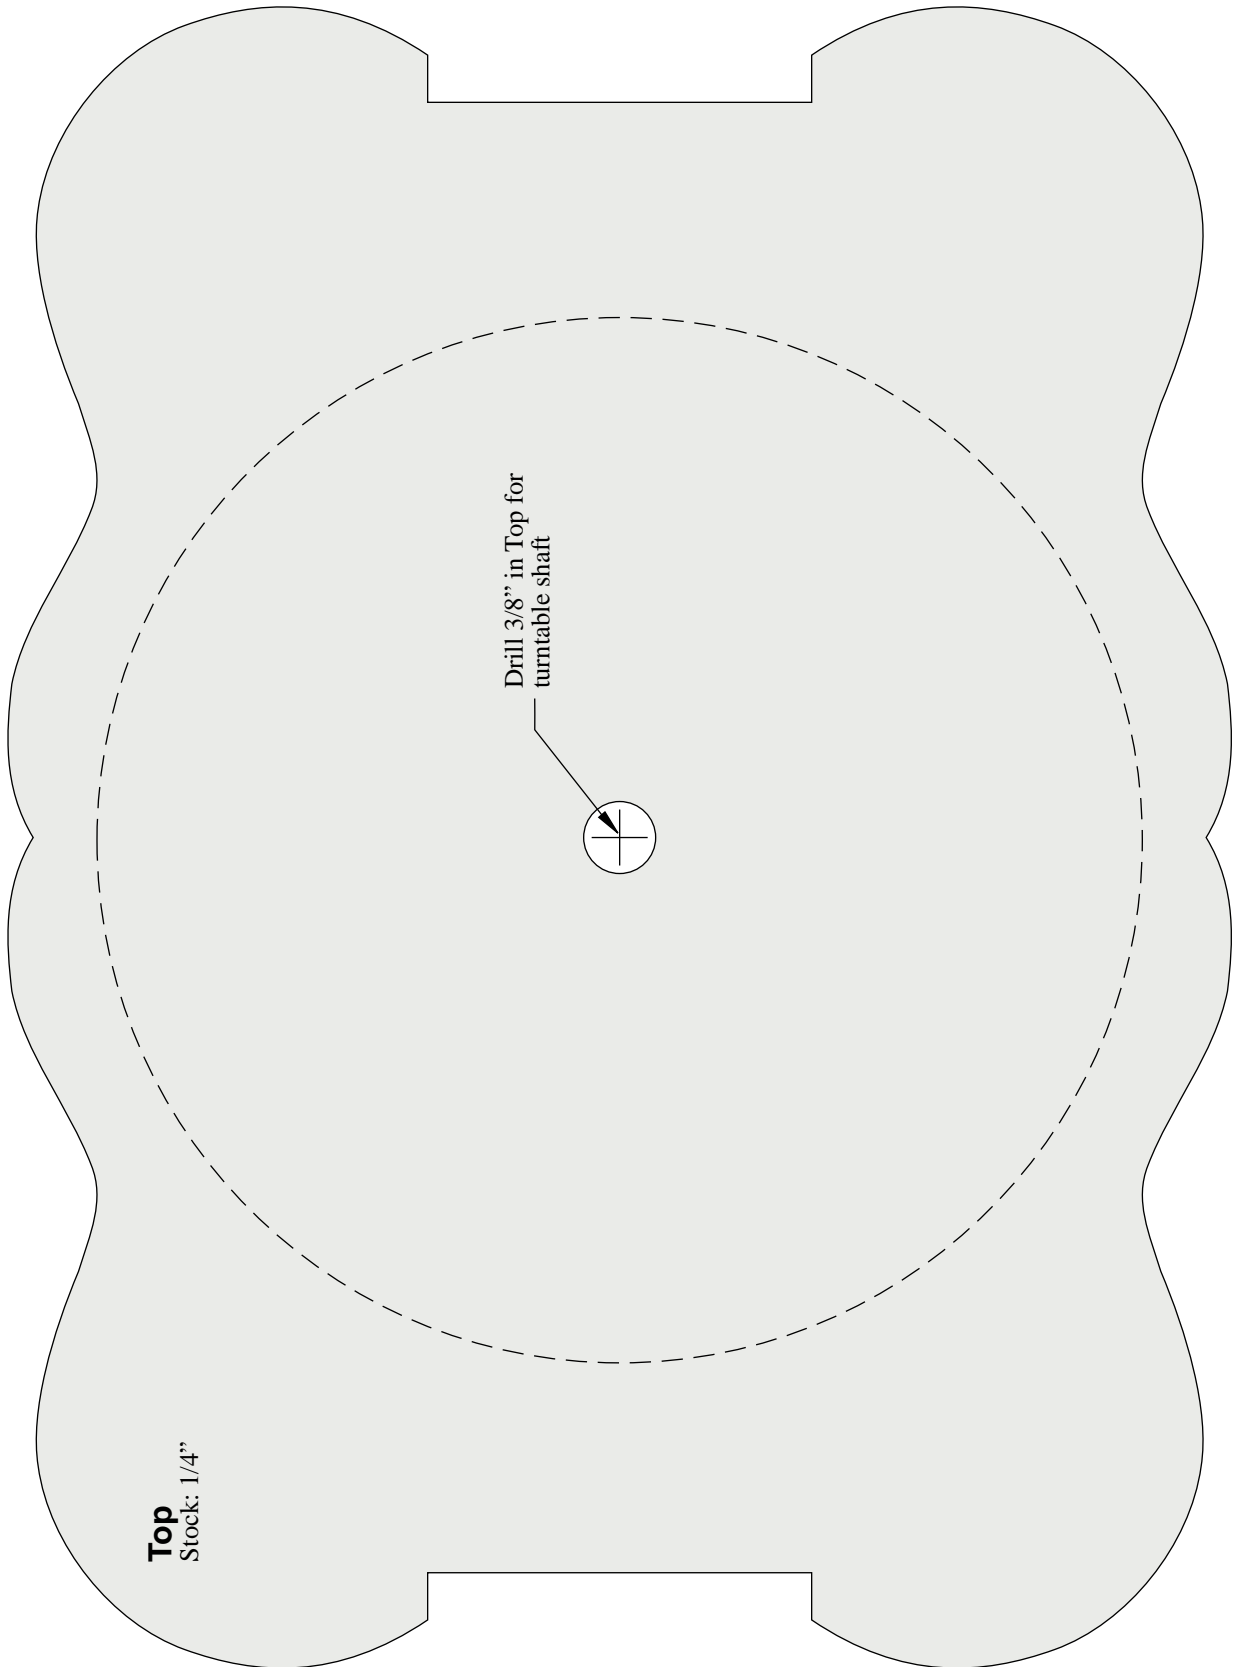 

Drill 3/8" in Top for
turntable shaft

Top
Stock: 1/4"

 Project #8

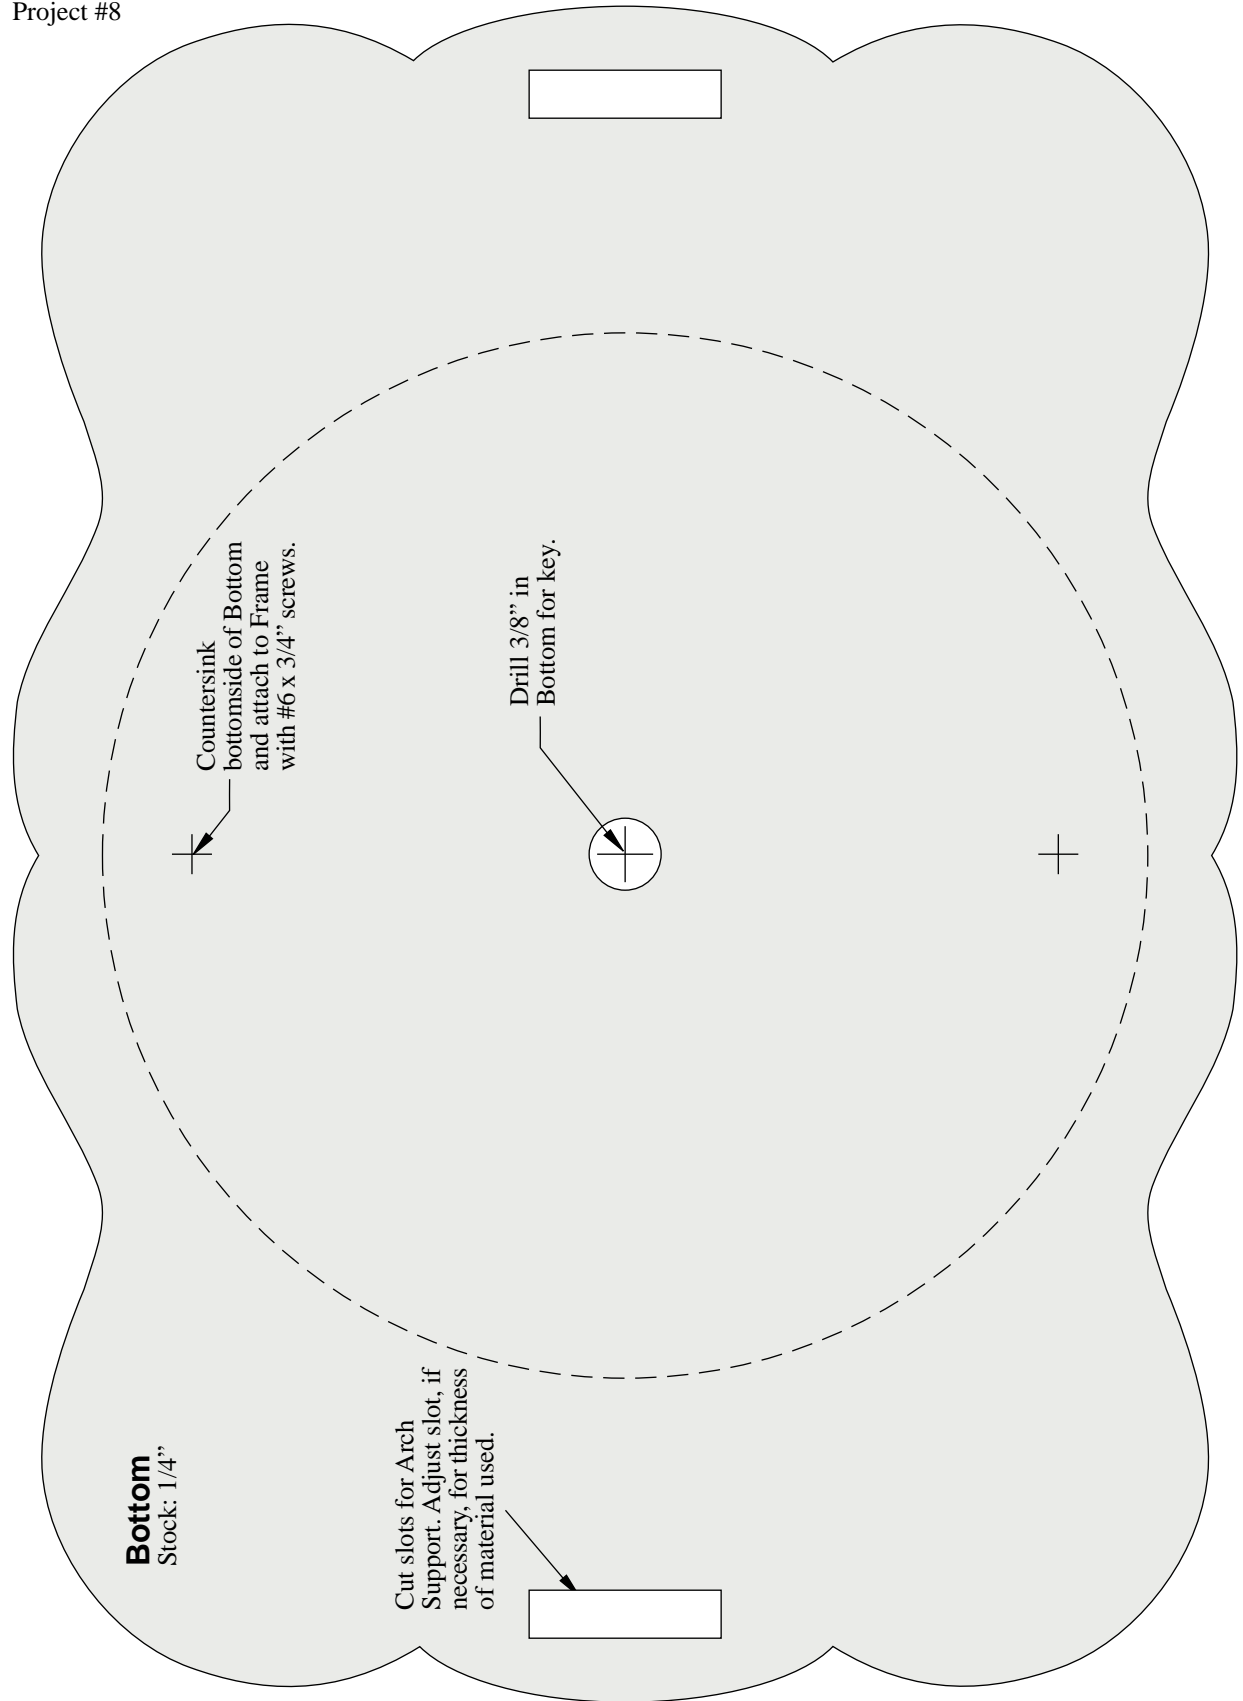

Bottom
Stock: 1/4"

 
 
Countersink
bottomside of Bottom
and attach to Frame
with #6 x 3/4" screws.

Drill 3/8" in
Bottom for key.

Cut slots for Arch
Support. Adjust slot, if
necessary, for thickness
of material used.


Assembly Instructions

Assemble by first attaching one Side Support and one Side to the Bottom. Continue in a clockwise direction with the remaining Side Supports and Sides. Next, secure the Top into position. Now attach the Lid Underlay to the bottom of the Lid. Then secure the Handles, Handle Support, Overlay, and Top Overlay into position.

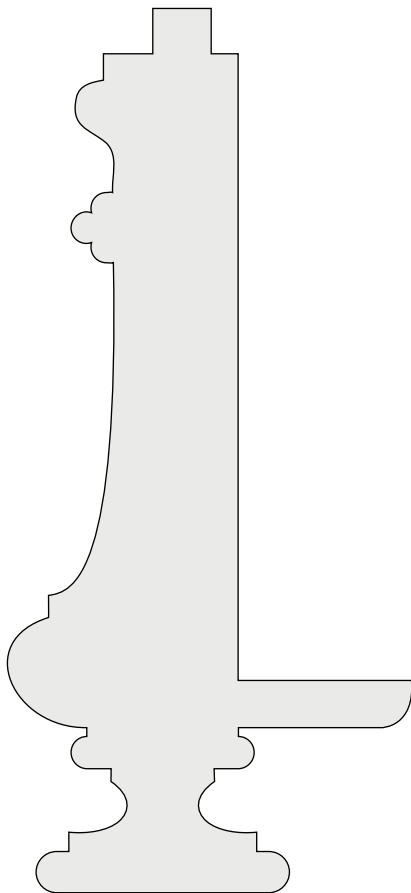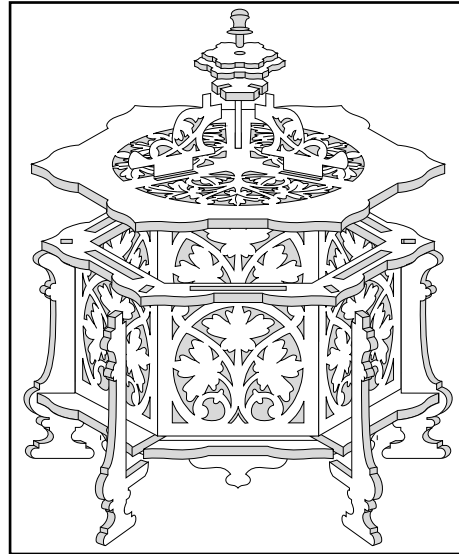

Side Support
Stock: 1/4", cut 6

 
30° Top view 30°

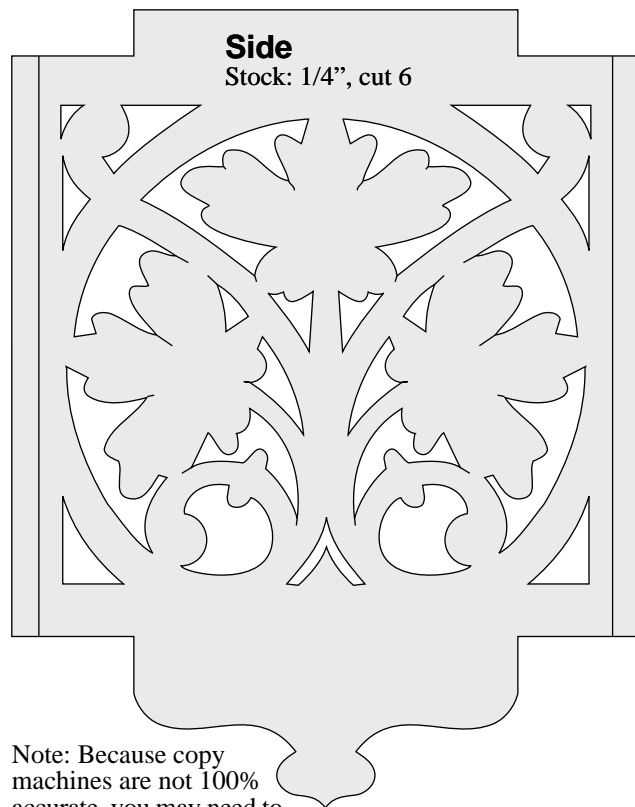


Note: Because copy machines are not 100% accurate, you may need to adjust the width.

Note: Most copy machines are not 100% accurate, which can result in distortion of your pattern pieces. Since this project has several slots and tab connections, it may be necessary to adjust them for an accurate fit.

  Project #9

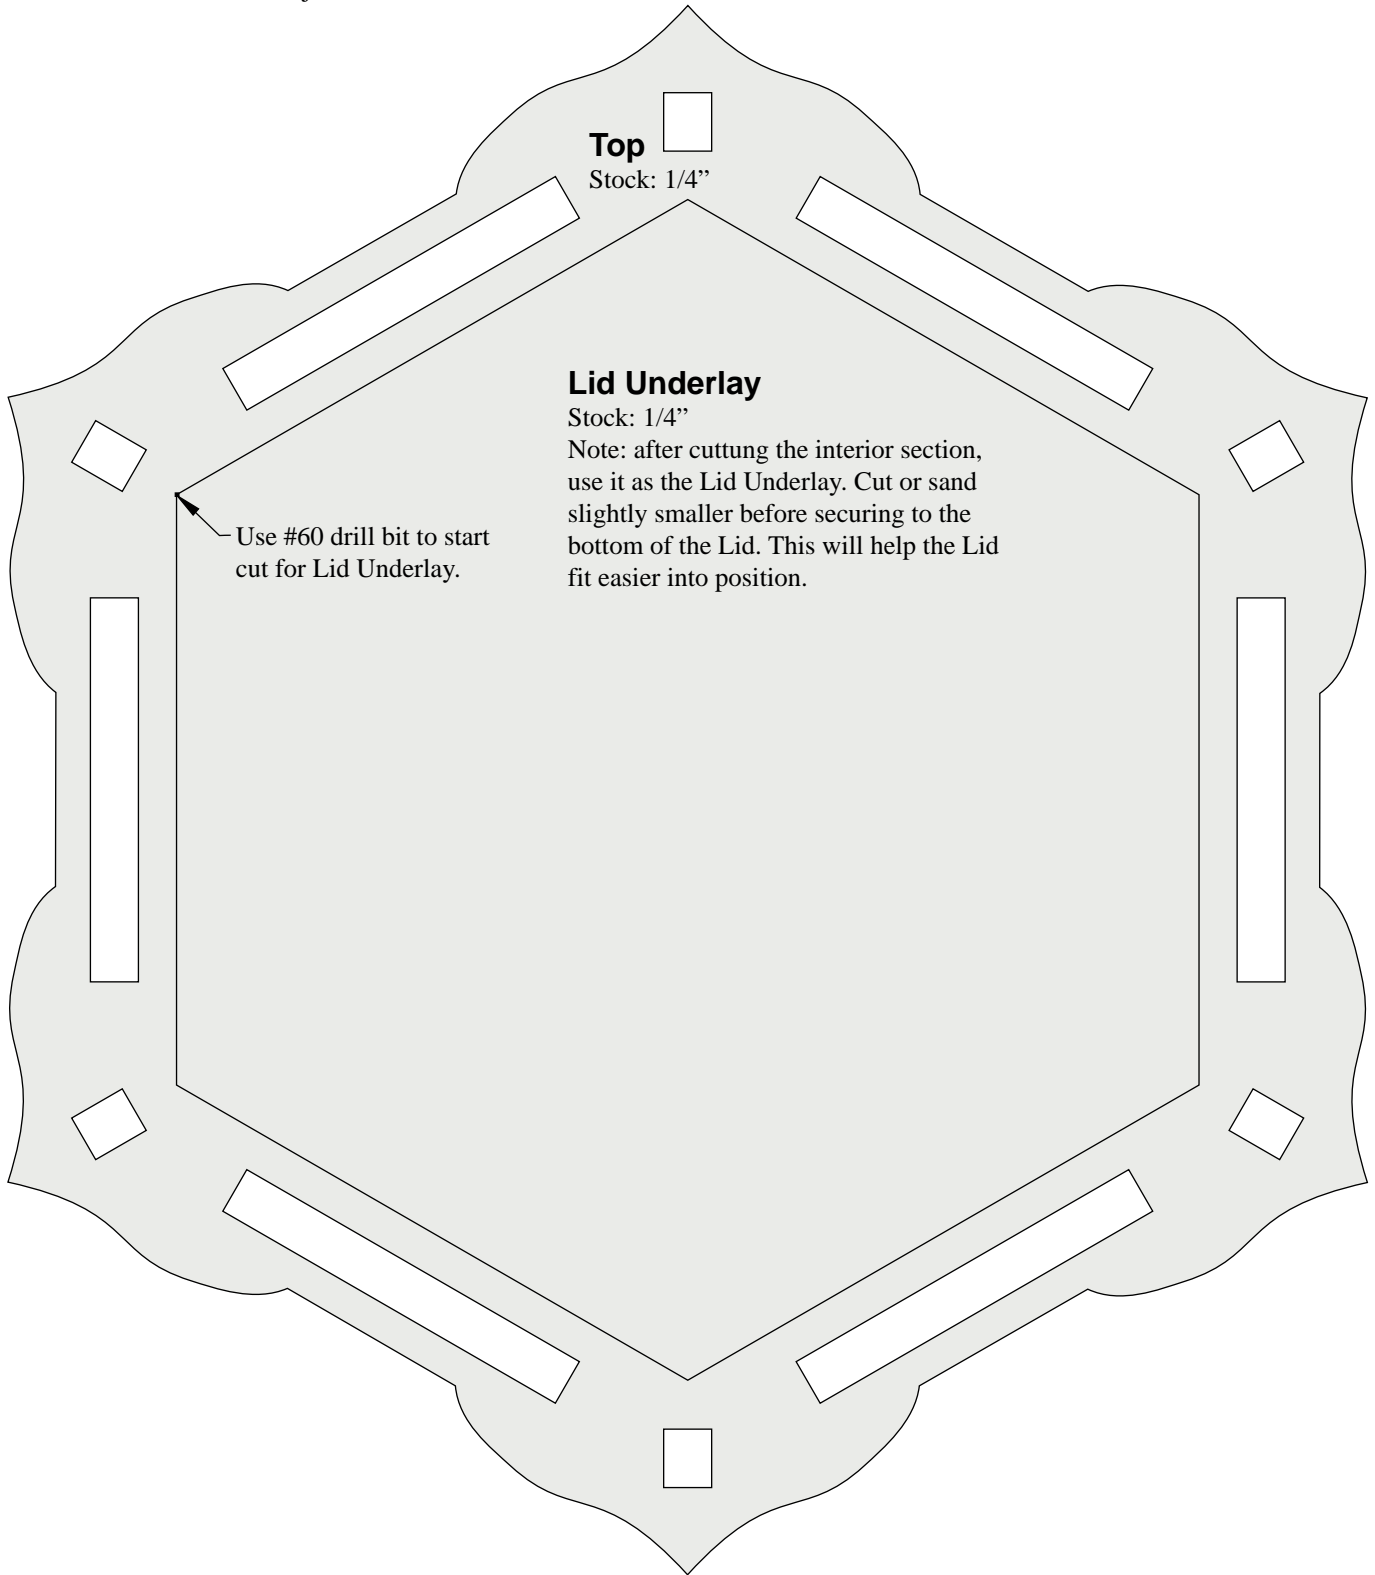


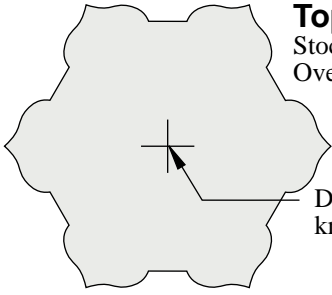

Top Overlay
Stock: 1/8". Attach to
Overlay with glue.

Drill for finial or brass
knob of your choice.

 Project #9

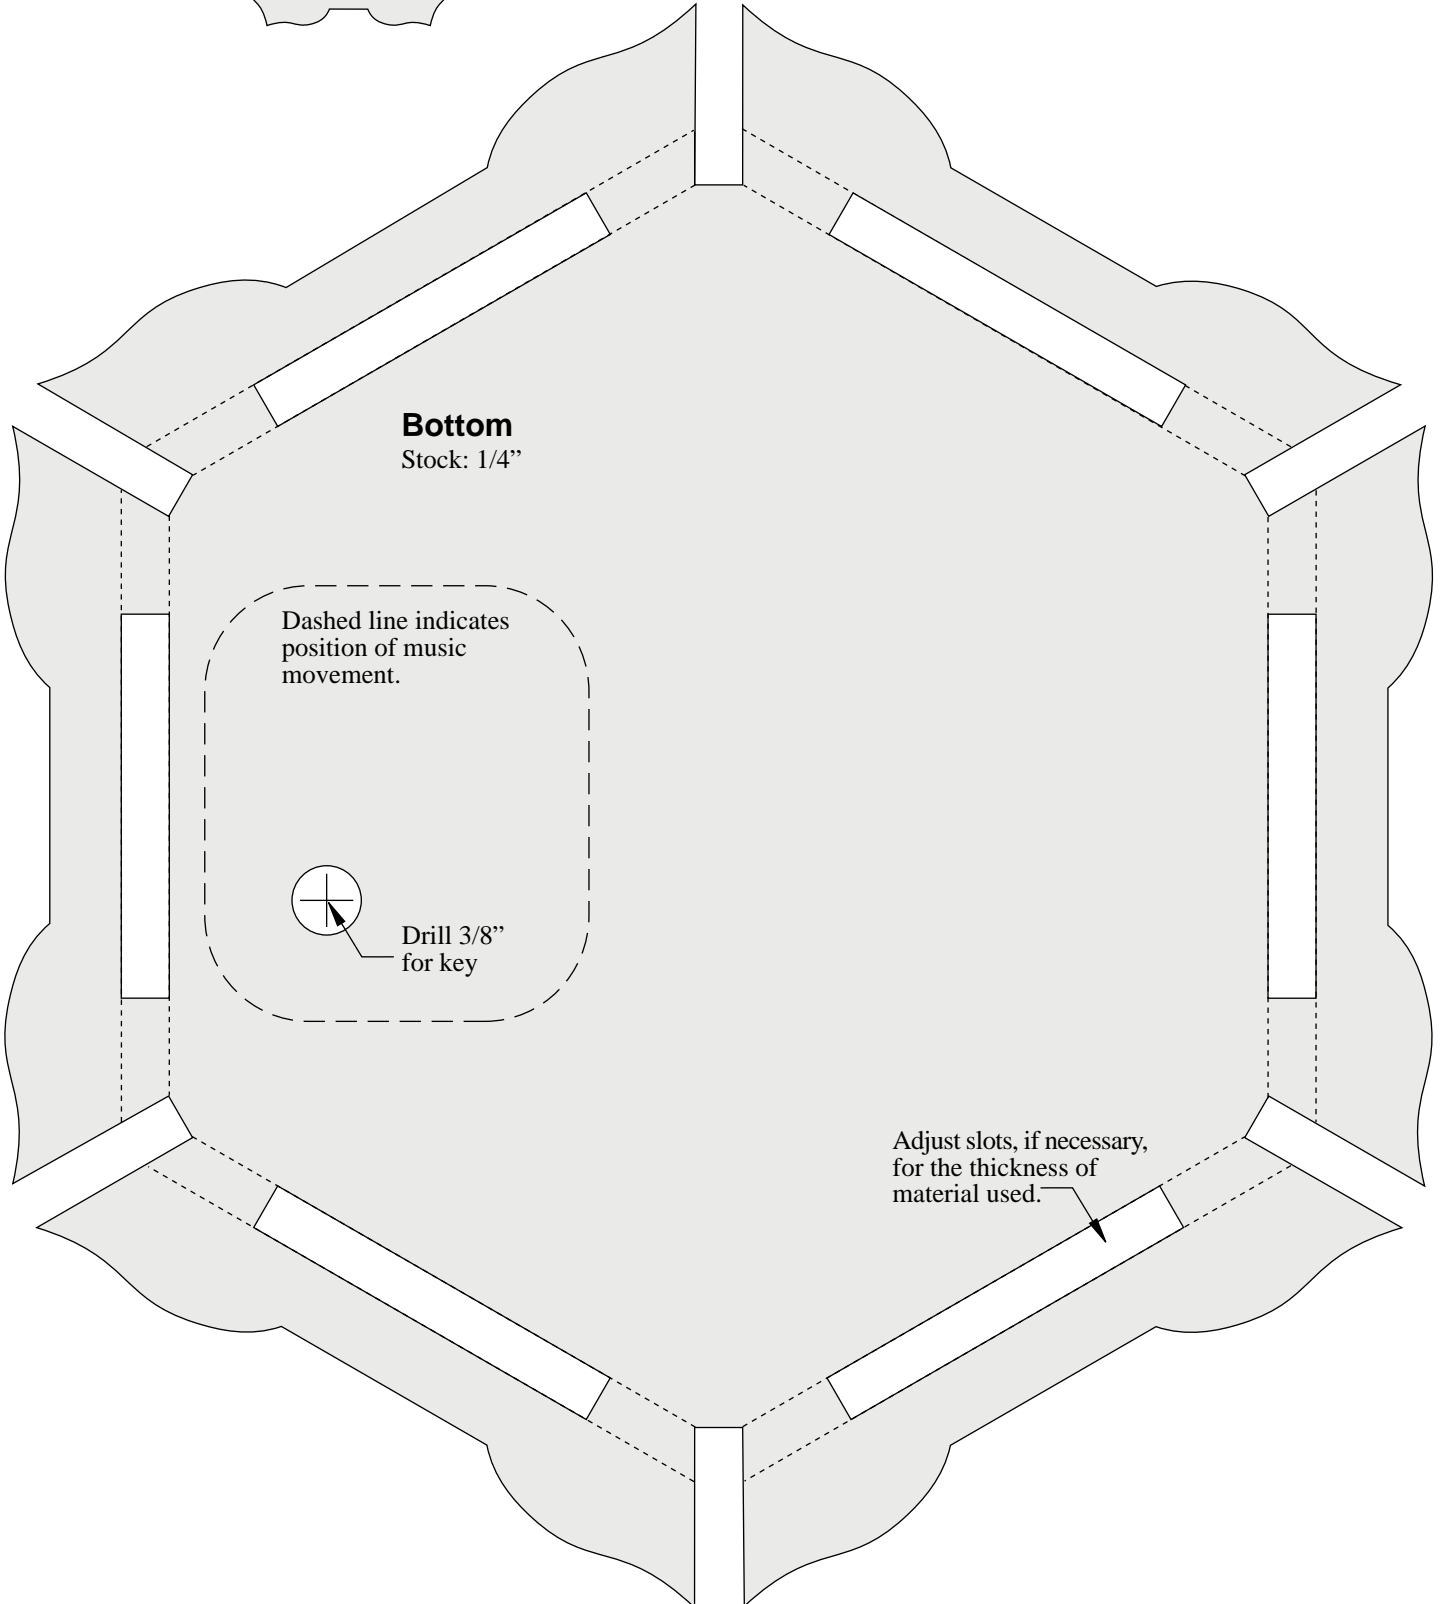

Bottom
Stock: 1/4"

 
 
 
 
Dashed line indicates
position of music
movement.

 
 
 
 
 


Drill 3/8"
for key


Adjust slots, if necessary,
for the thickness of
material used.

Project #9

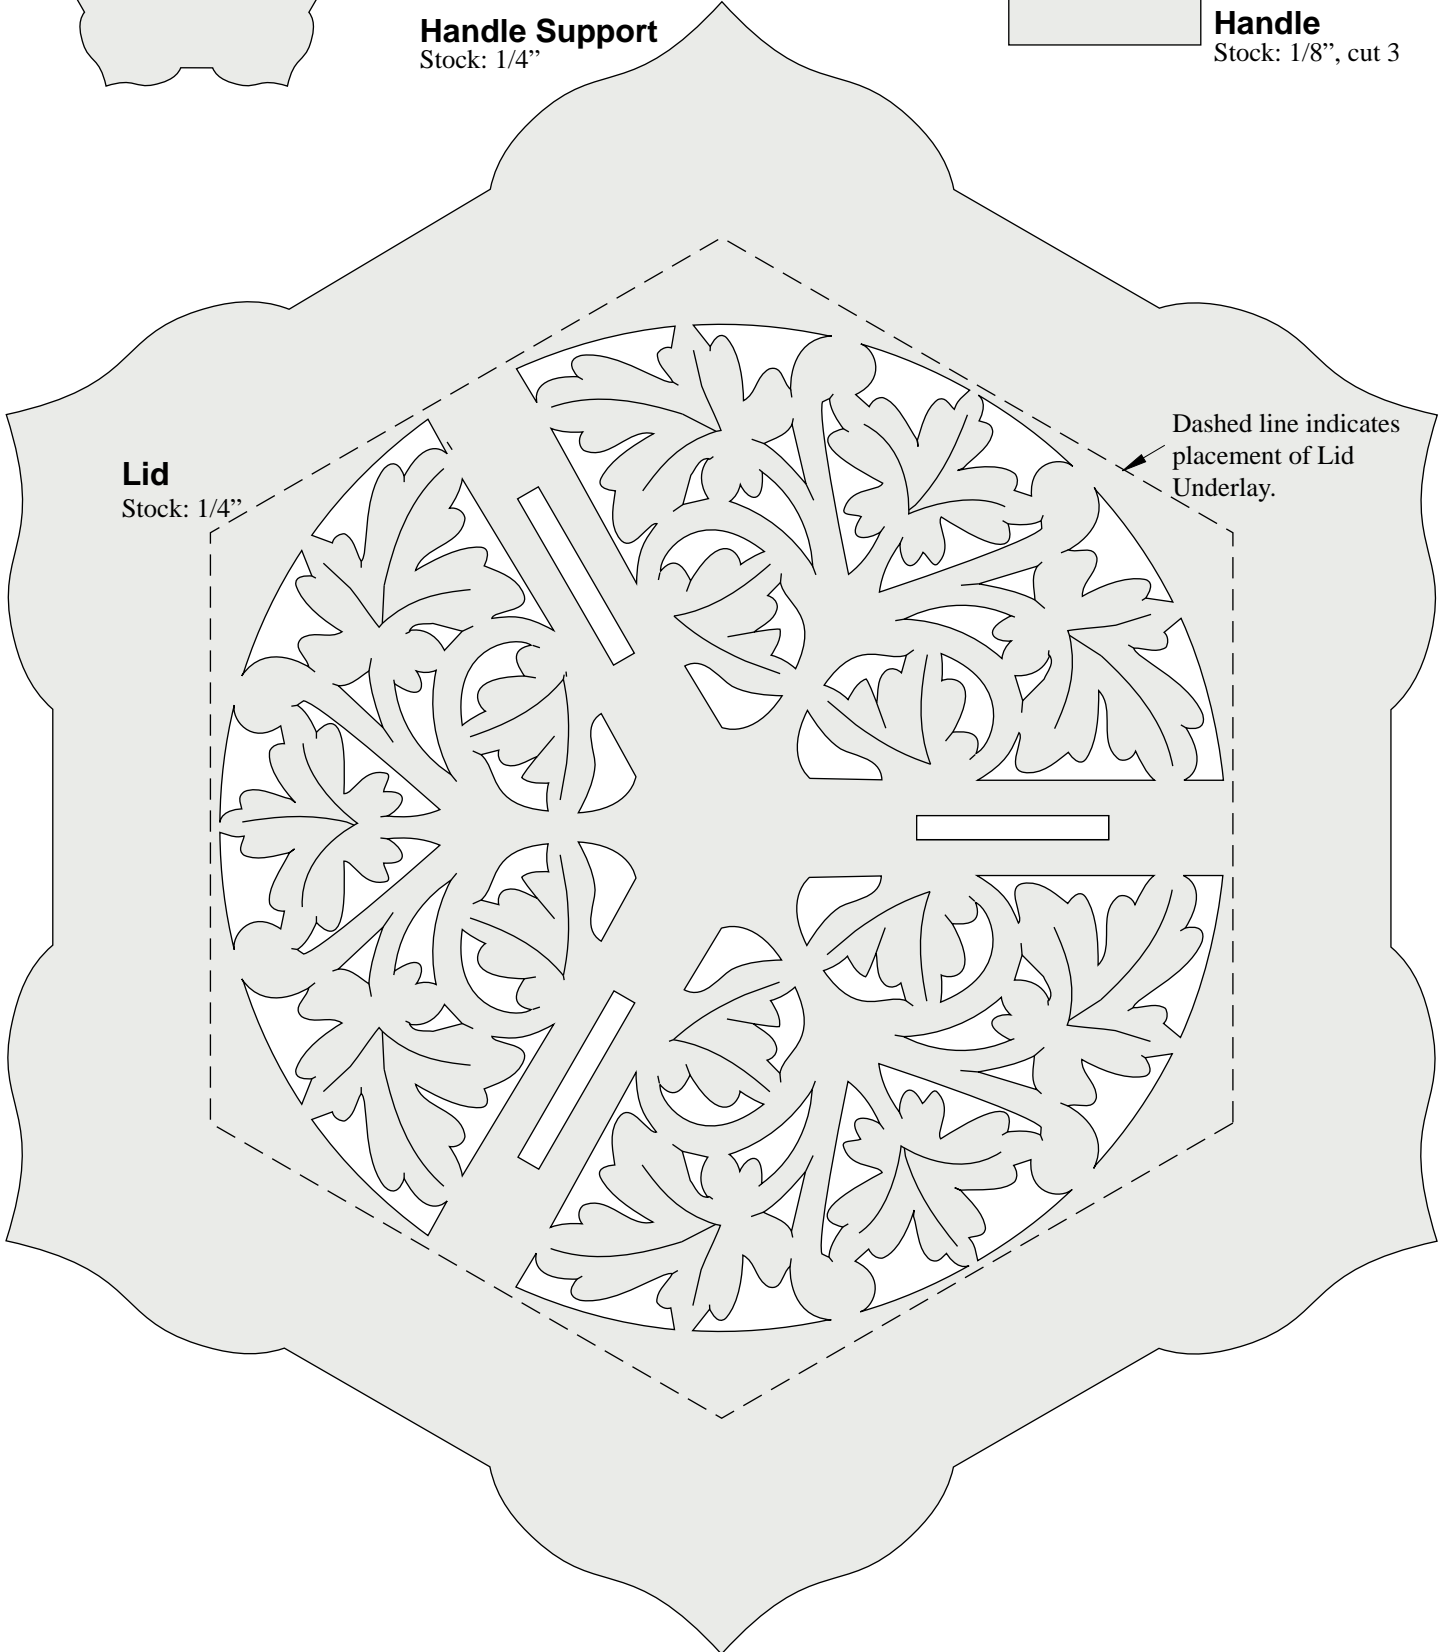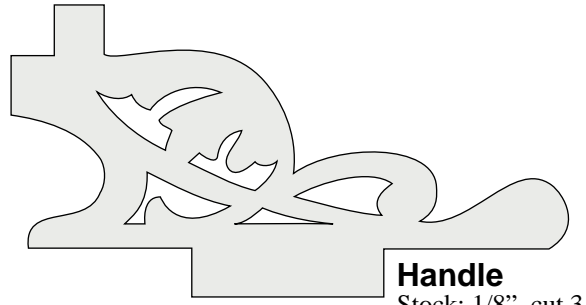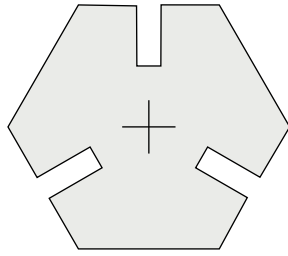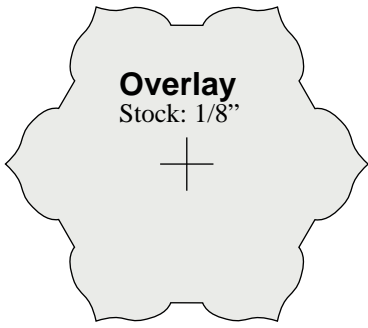

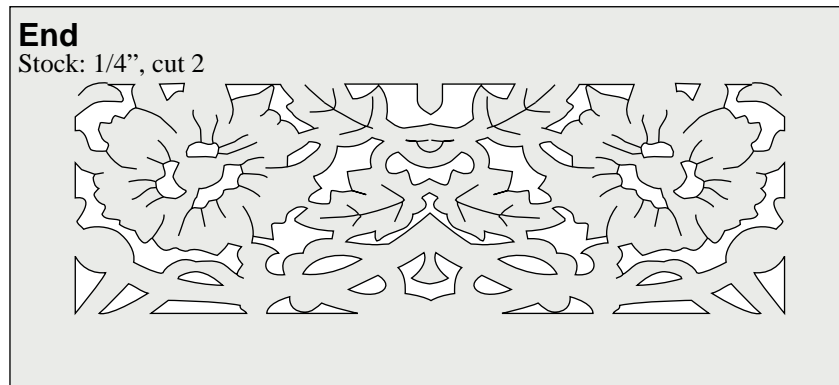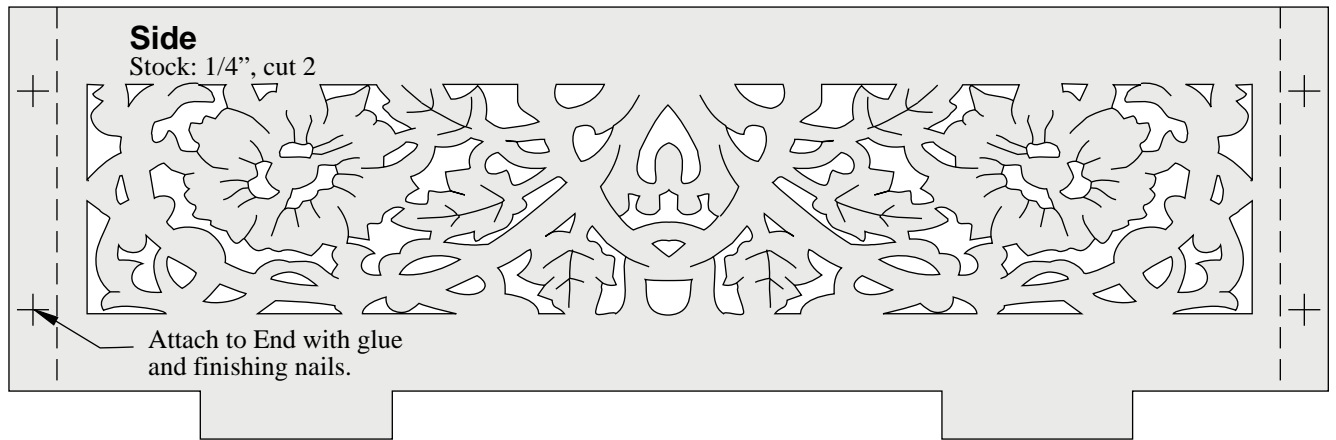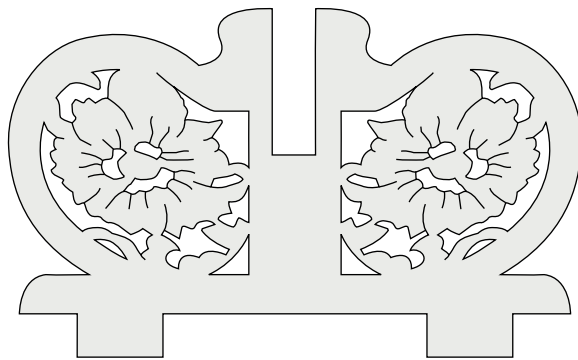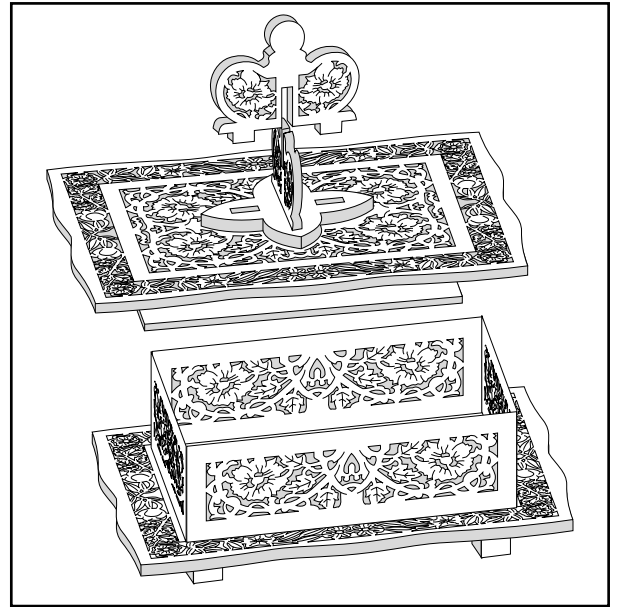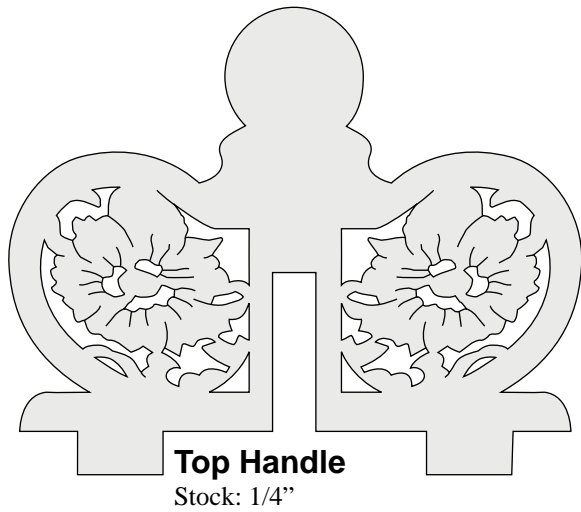


Project #10

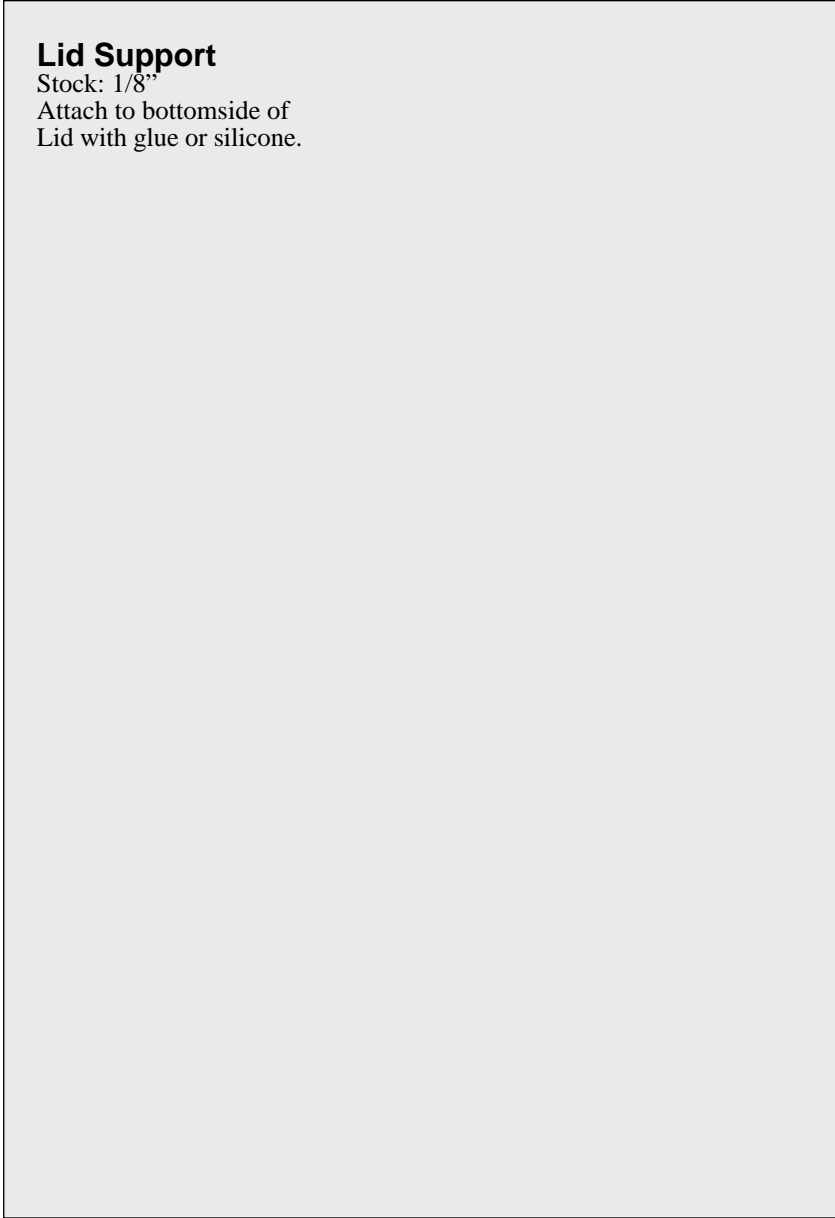 


Lid Support

 Stock: 1/8"
Attach to bottomside of
Lid with glue or silicone.

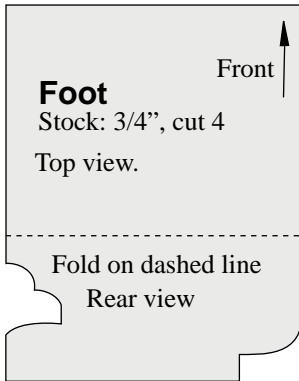

Foot
Stock: 3/4", cut 4
Top view.

 Fold on dashed line
Rear view

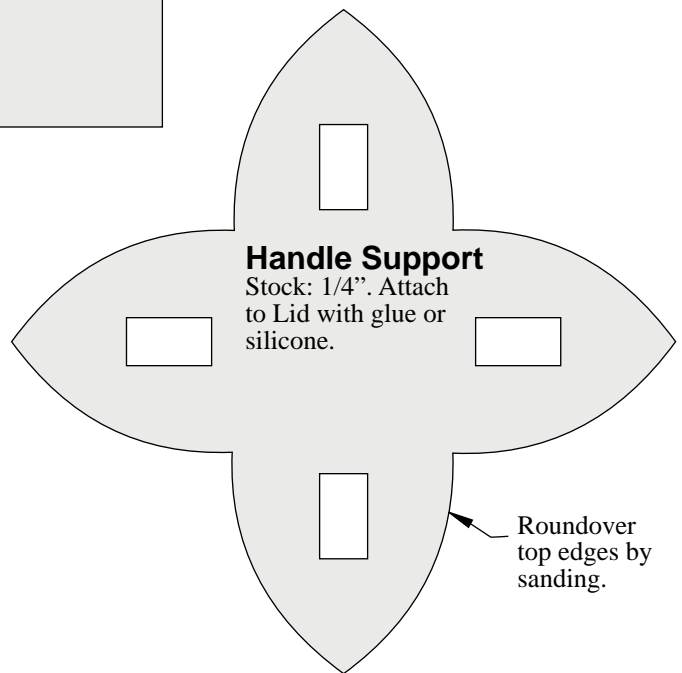


Handle Support
Stock: 1/4". Attach
to Lid with glue or
silicone.

Roundover
top edges by
sanding.

Bottom

 Stock: 1/4"

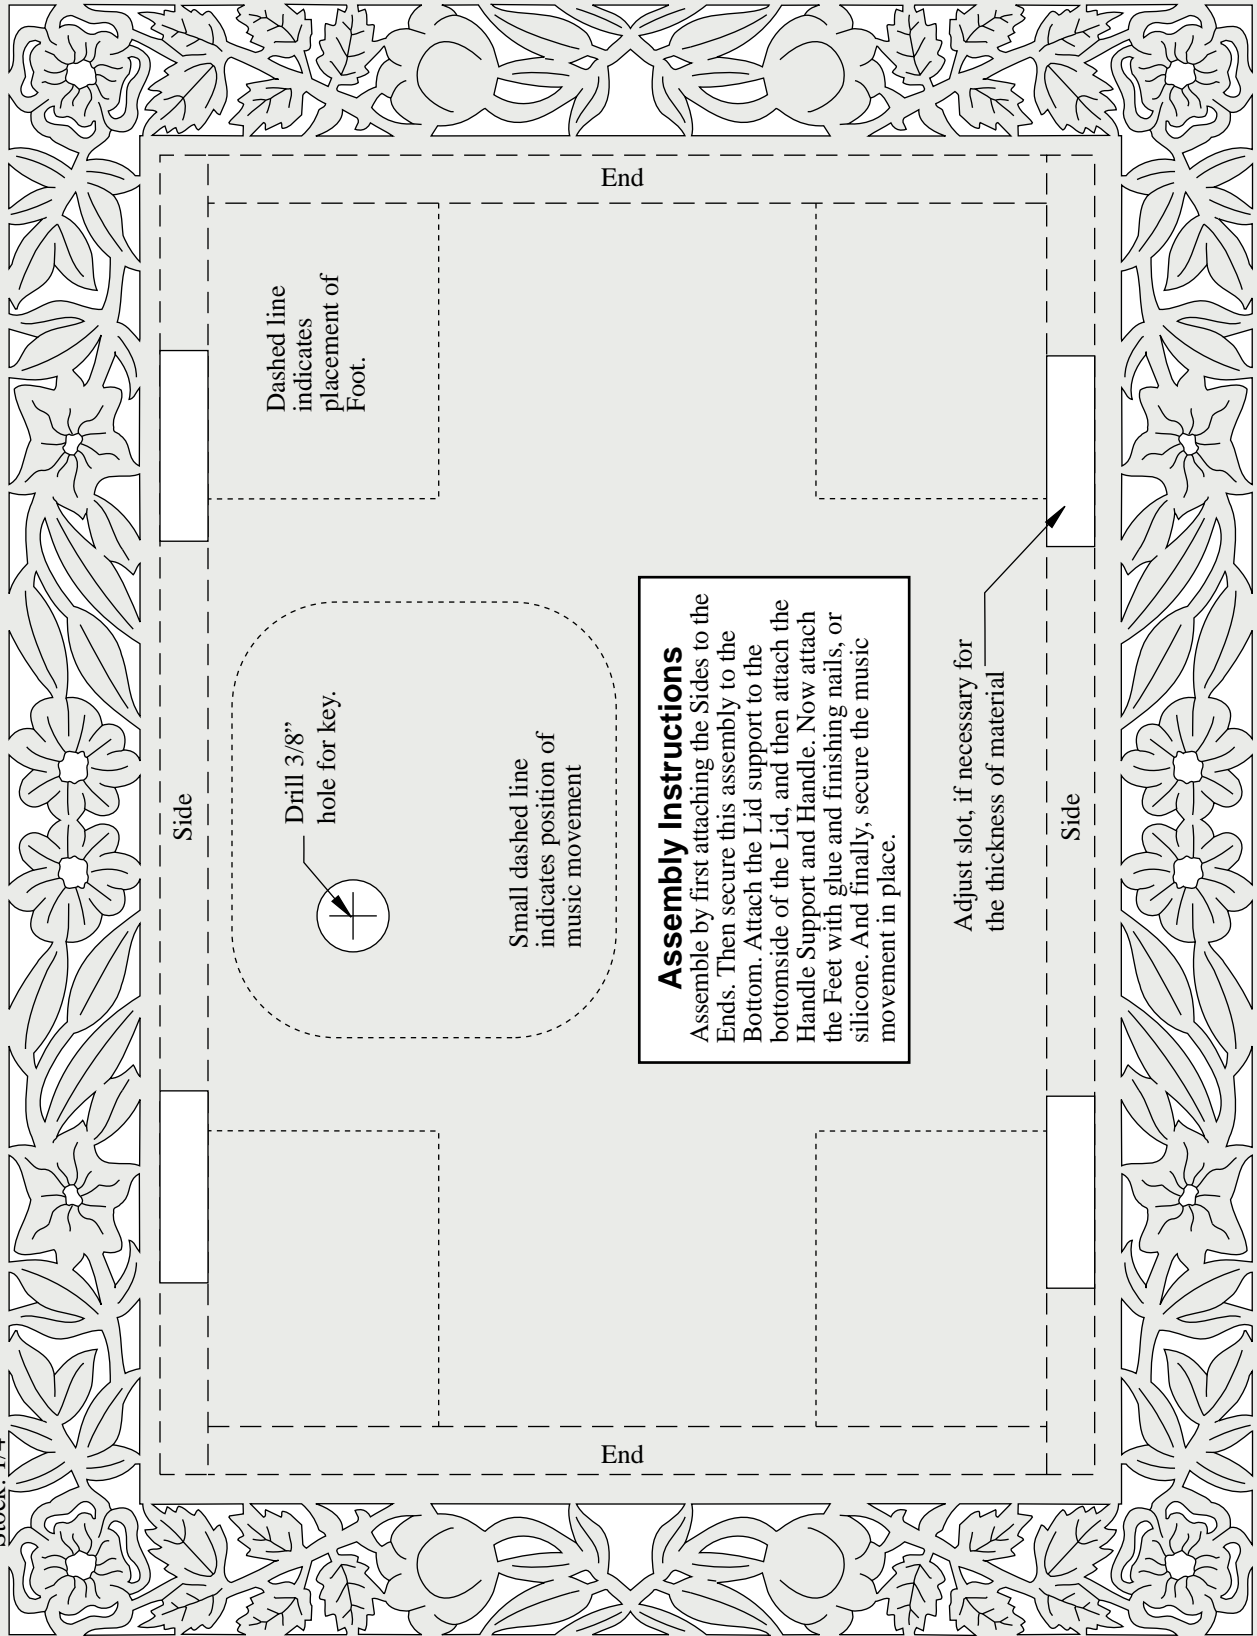

Dashed line indicates placement of Foot.

Side

Drill 3/8" hole for key.

Small dashed line indicates position of music movement

Assembly Instructions

Assemble by first attaching the Sides to the Ends. Then secure this assembly to the Bottom. Attach the Lid support to the bottomside of the Lid, and then attach the Handle Support and Handle. Now attach the Feet with glue and finishing nails, or silicone. And finally, secure the music movement in place.

Adjust slot, if necessary for the thickness of material

Side

End

End



End

 
 
 
 
Small dashed line indicates placement of Handle Support

Side

Side


End


Lid
Stock: 1/4"

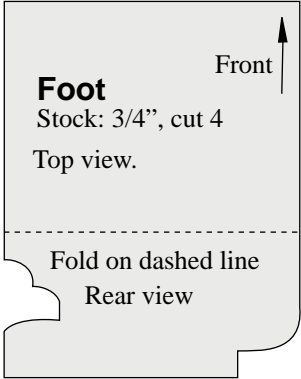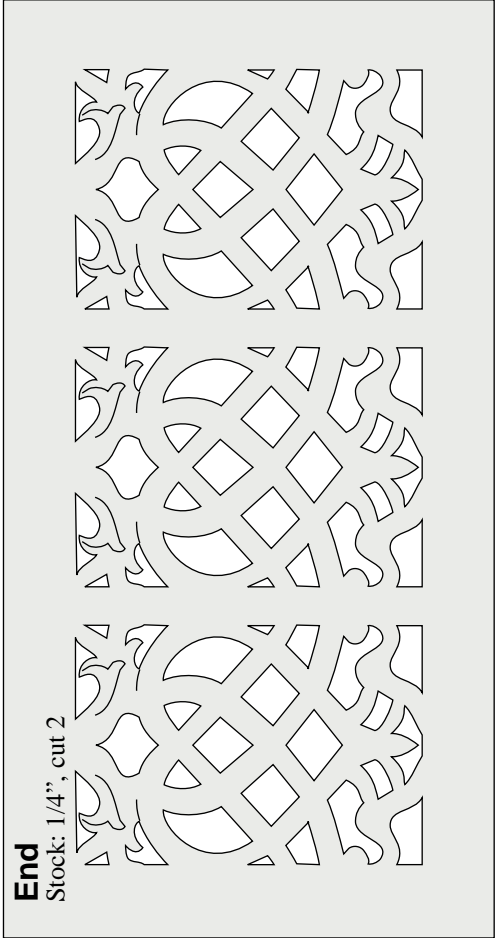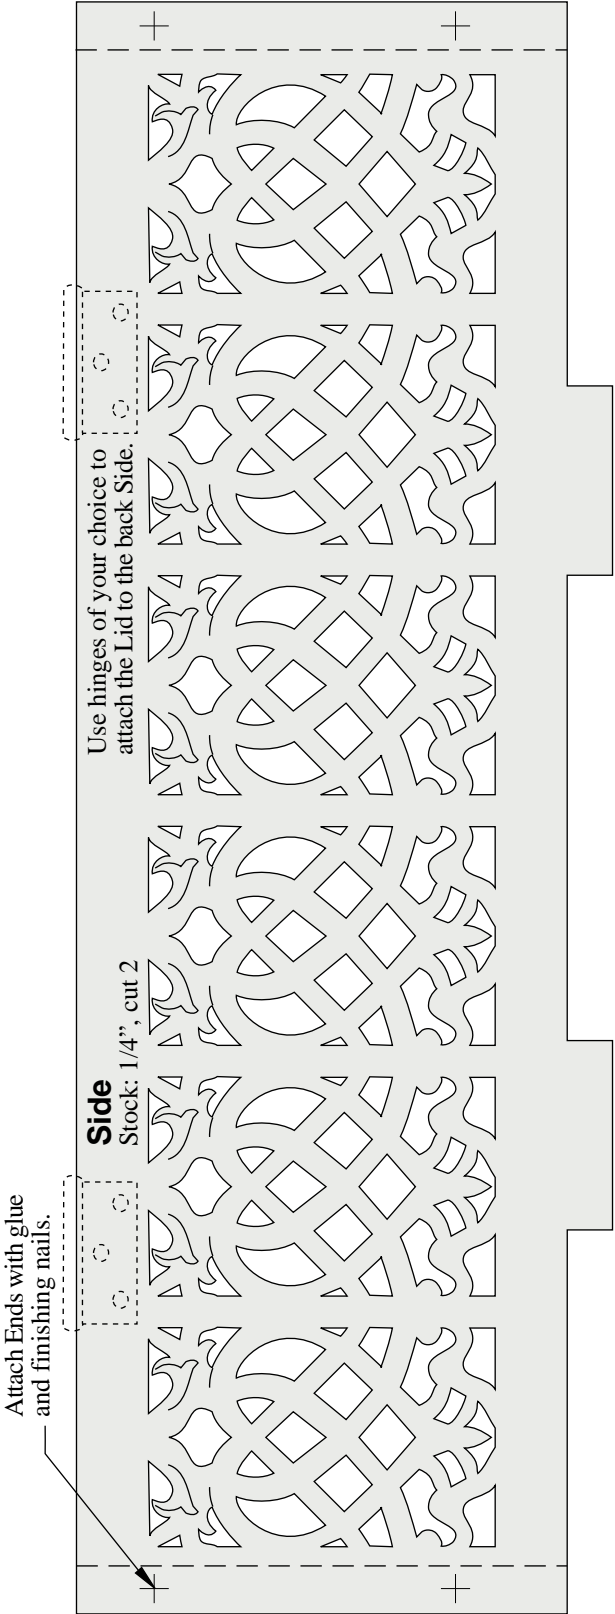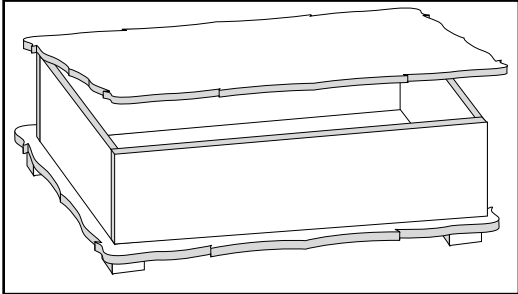

Use hinges of your choice to attach the Lid to the back Side.

  Lid
Stock: 1/4

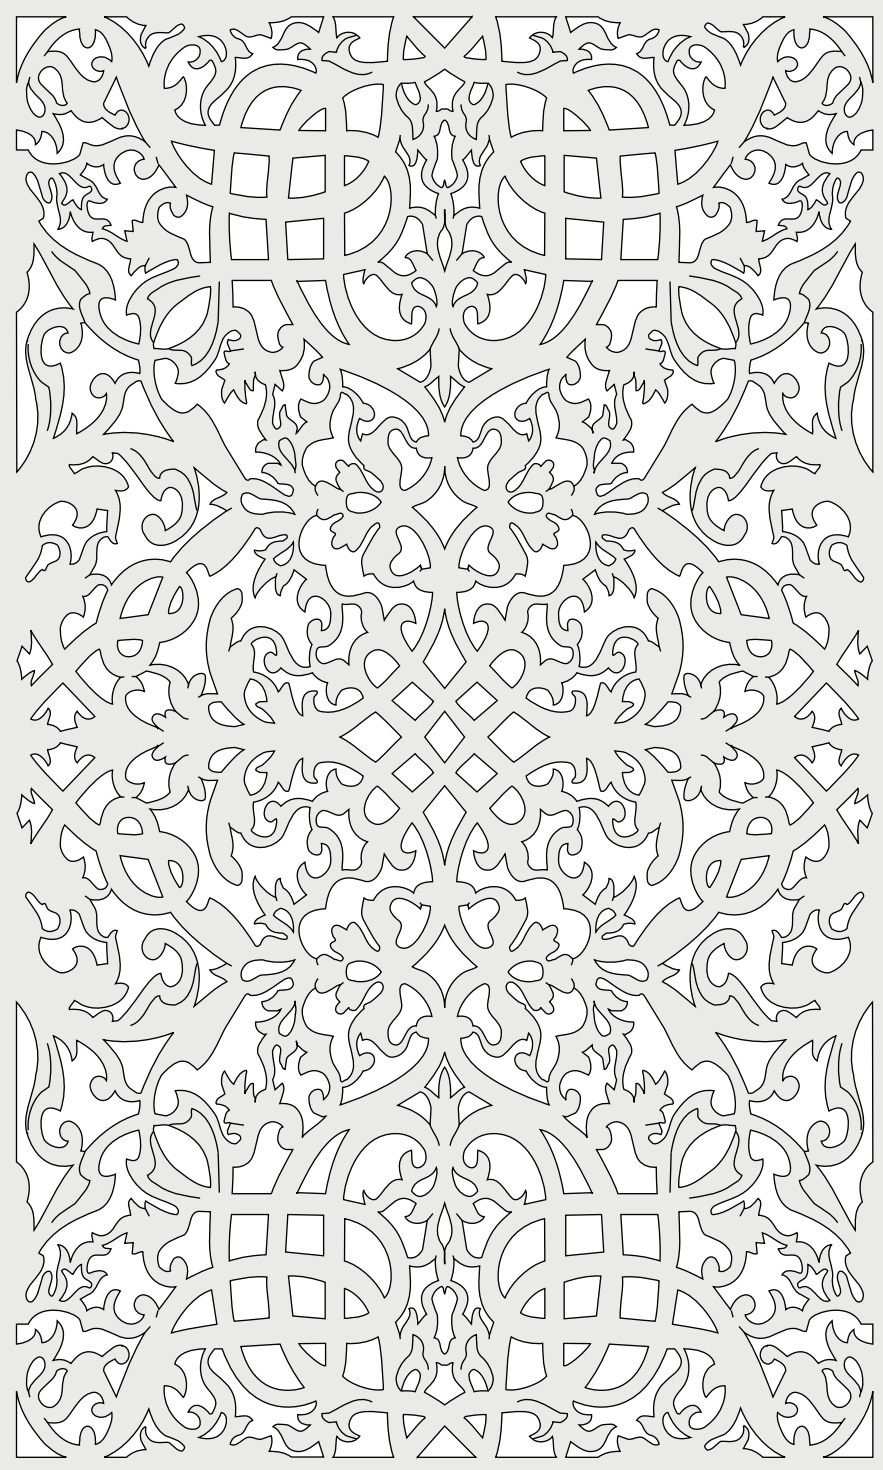

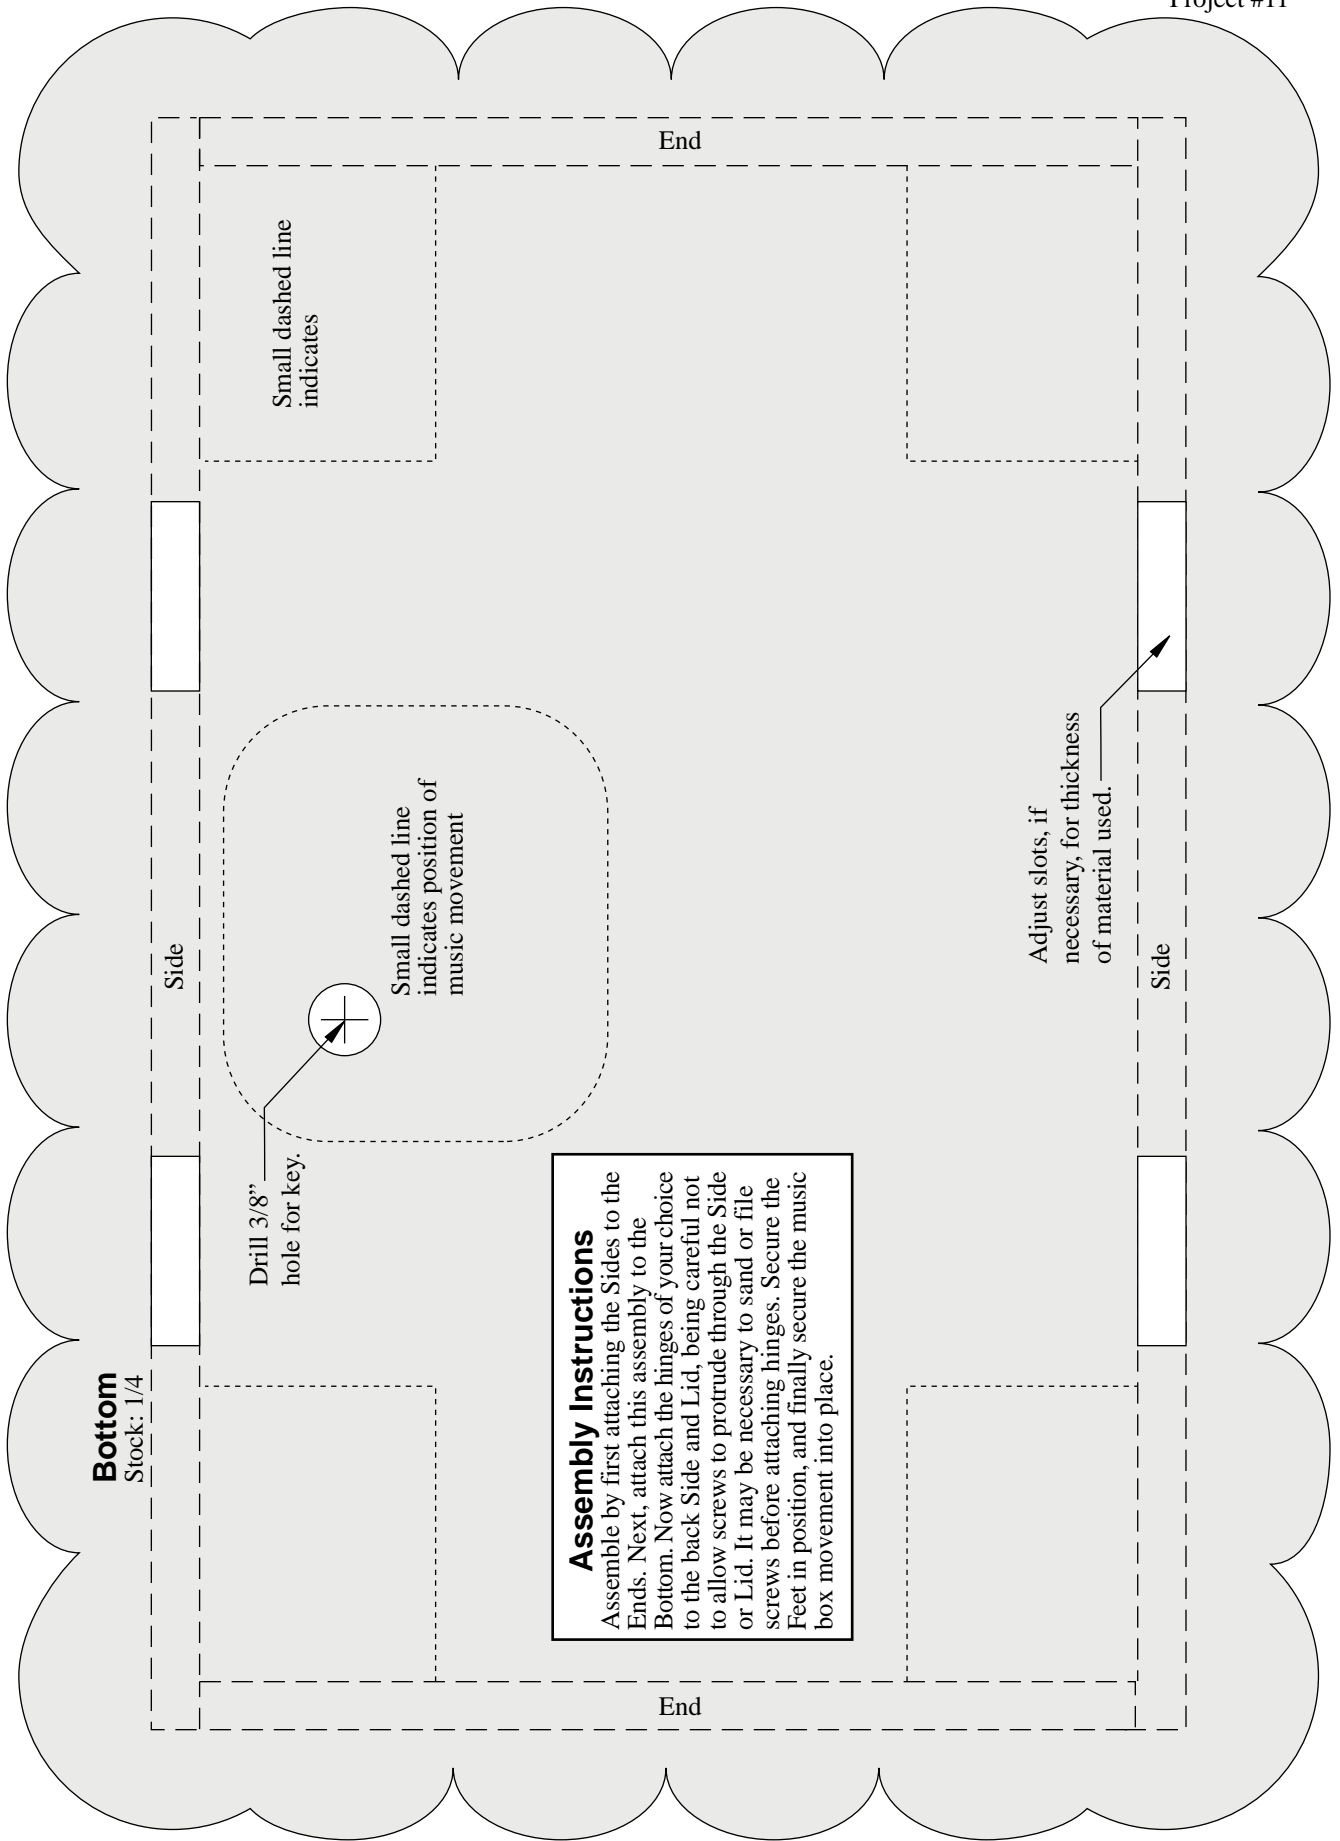

Bottom
Stock: 1/4

Side

End

Drill 3/8"
hole for key.

Small dashed line
indicates

Small dashed line
indicates position of
music movement

 
 
 
 
Assembly Instructions
Assemble by first attaching the Sides to the Ends. Next, attach this assembly to the Bottom. Now attach the hinges of your choice to the back Side and Lid, being careful not to allow screws to protrude through the Side or Lid. It may be necessary to sand or file screws before attaching hinges. Secure the Feet in position, and finally secure the music box movement into place.

 
Adjust slots, if
necessary, for thickness
of material used.

 
 
 
 
Side

 
End



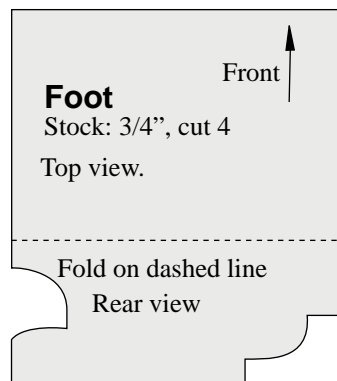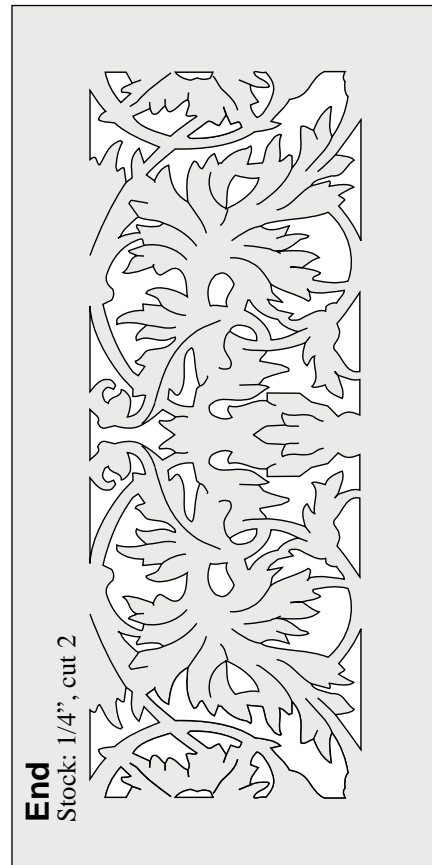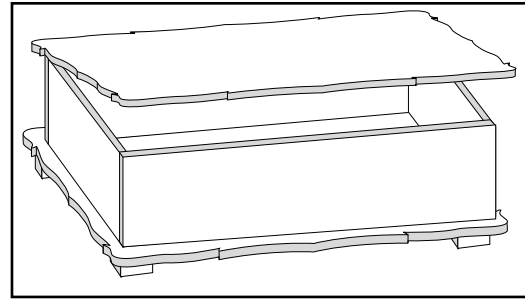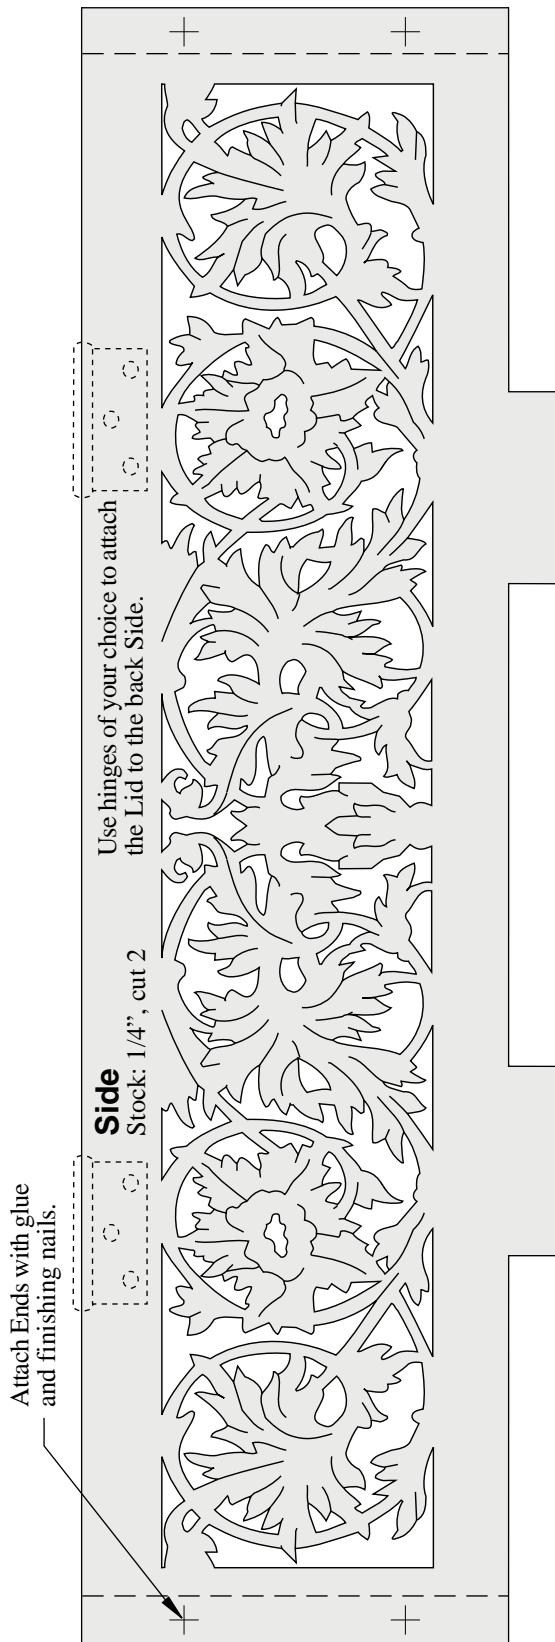

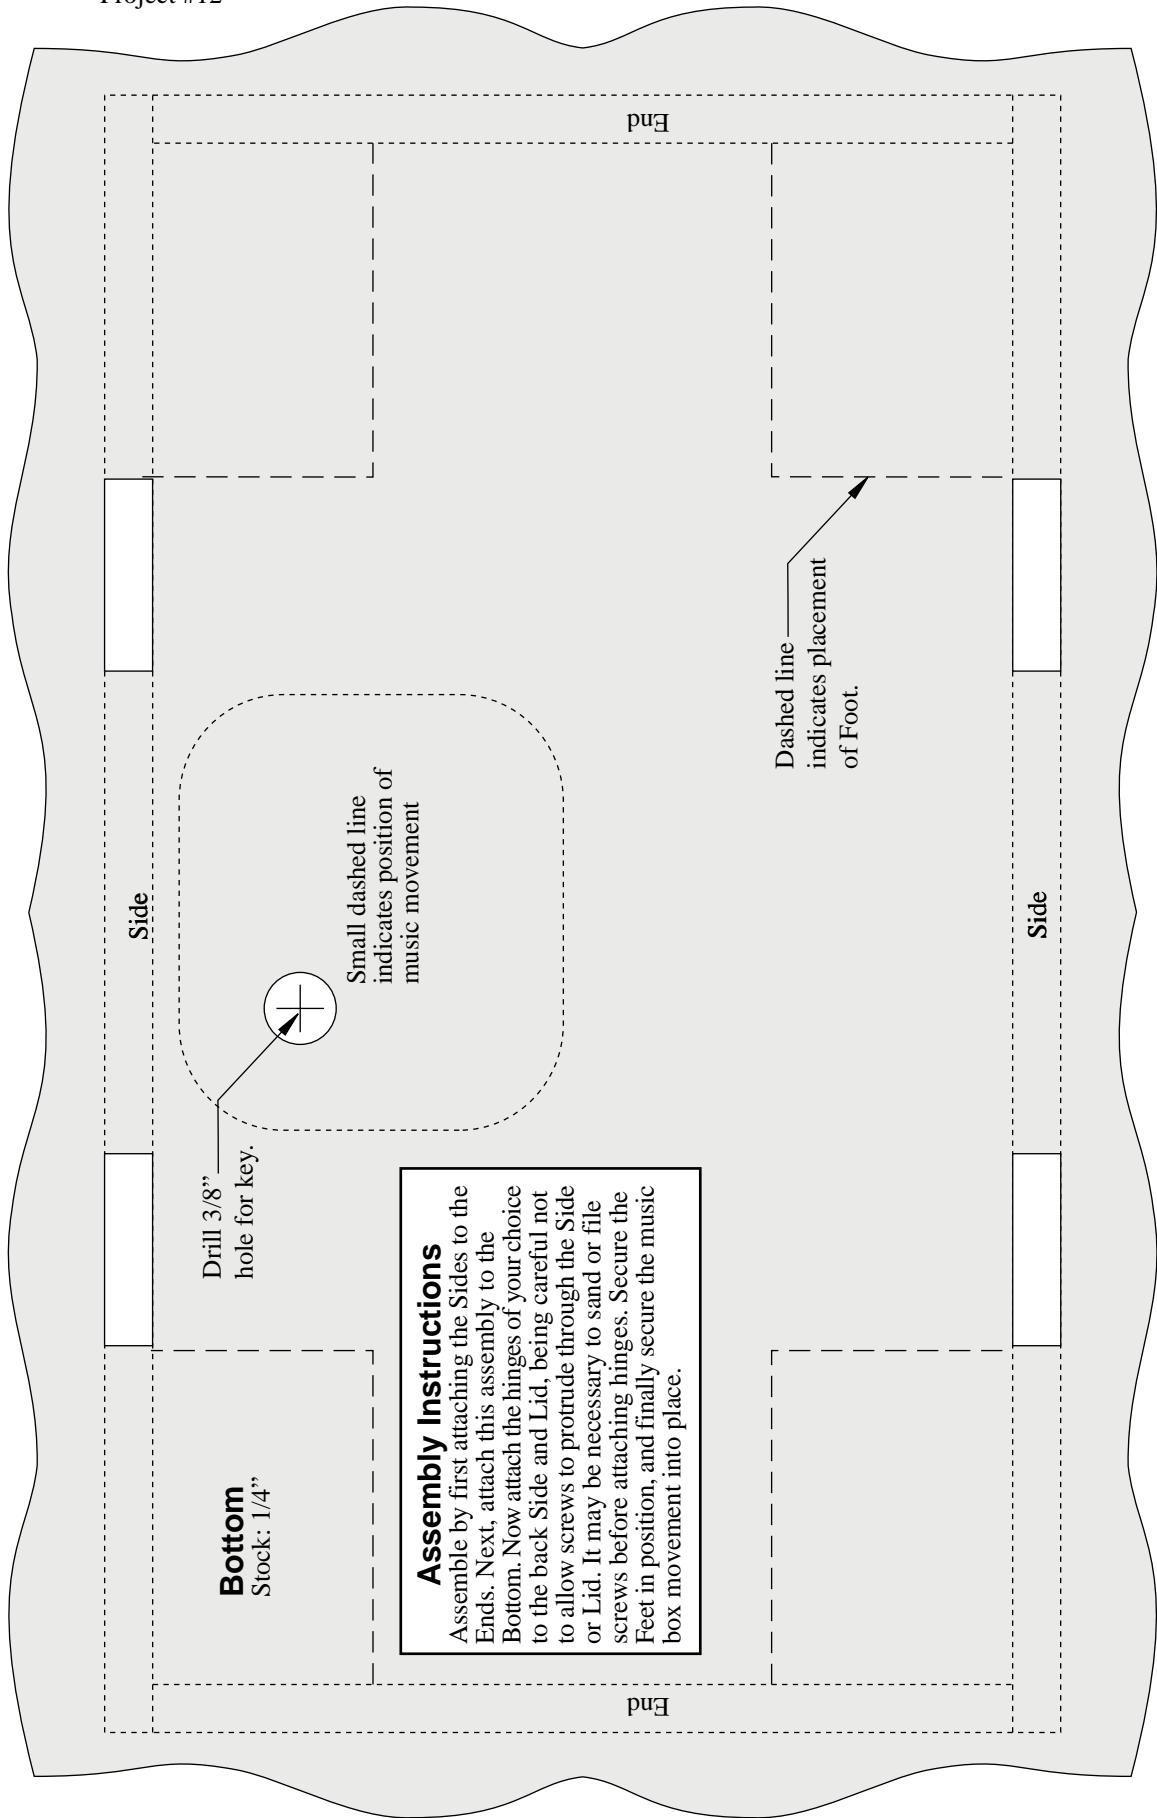

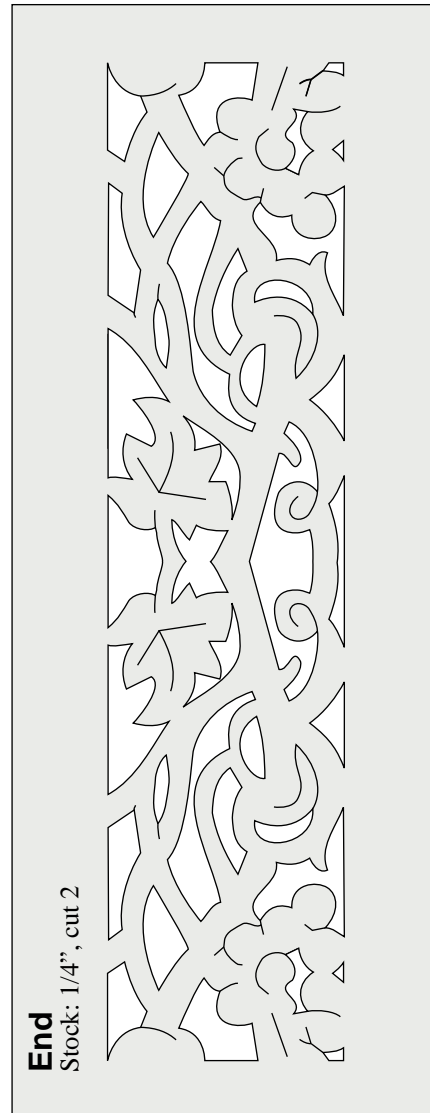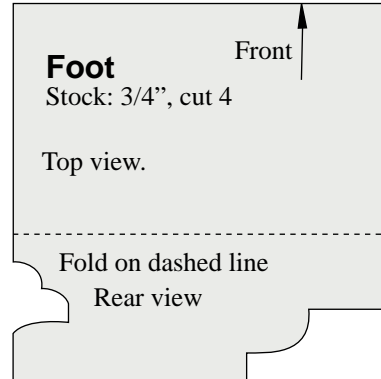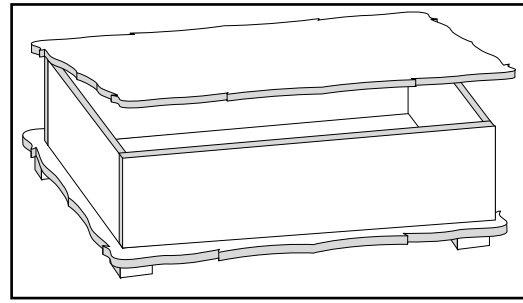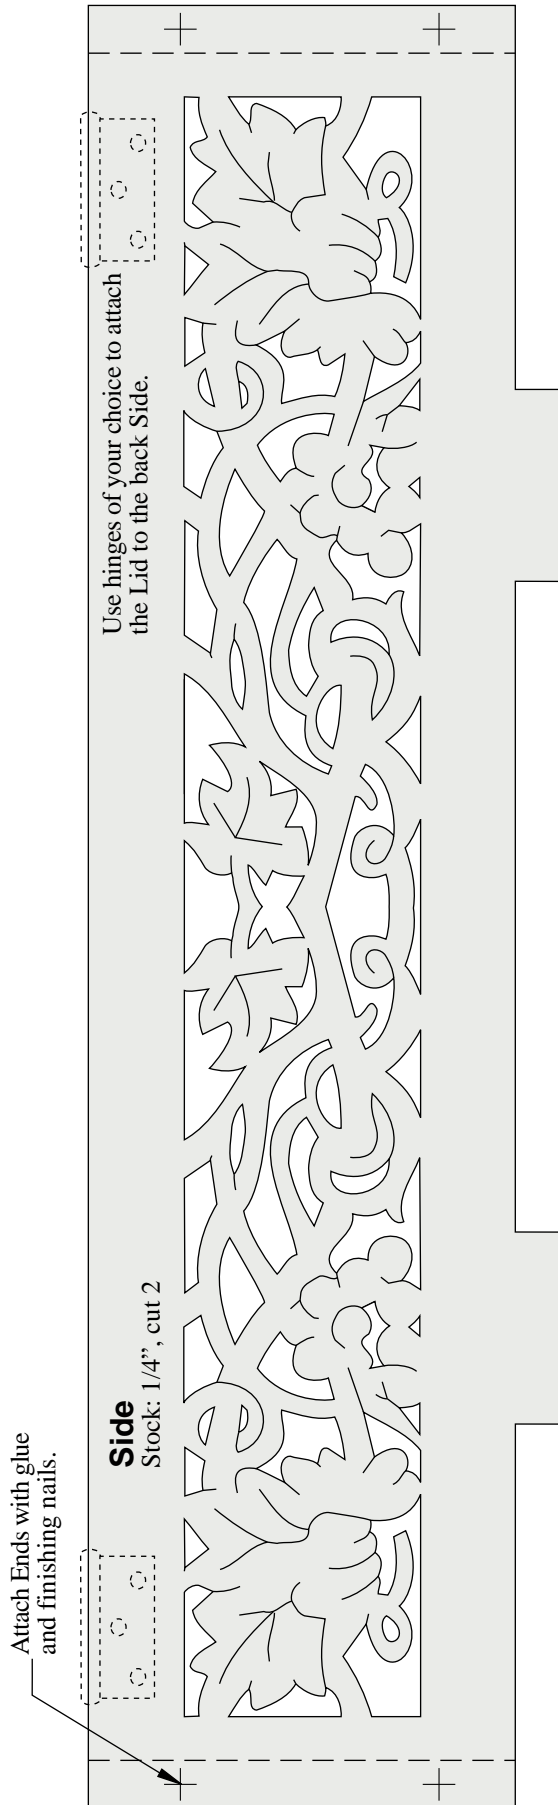

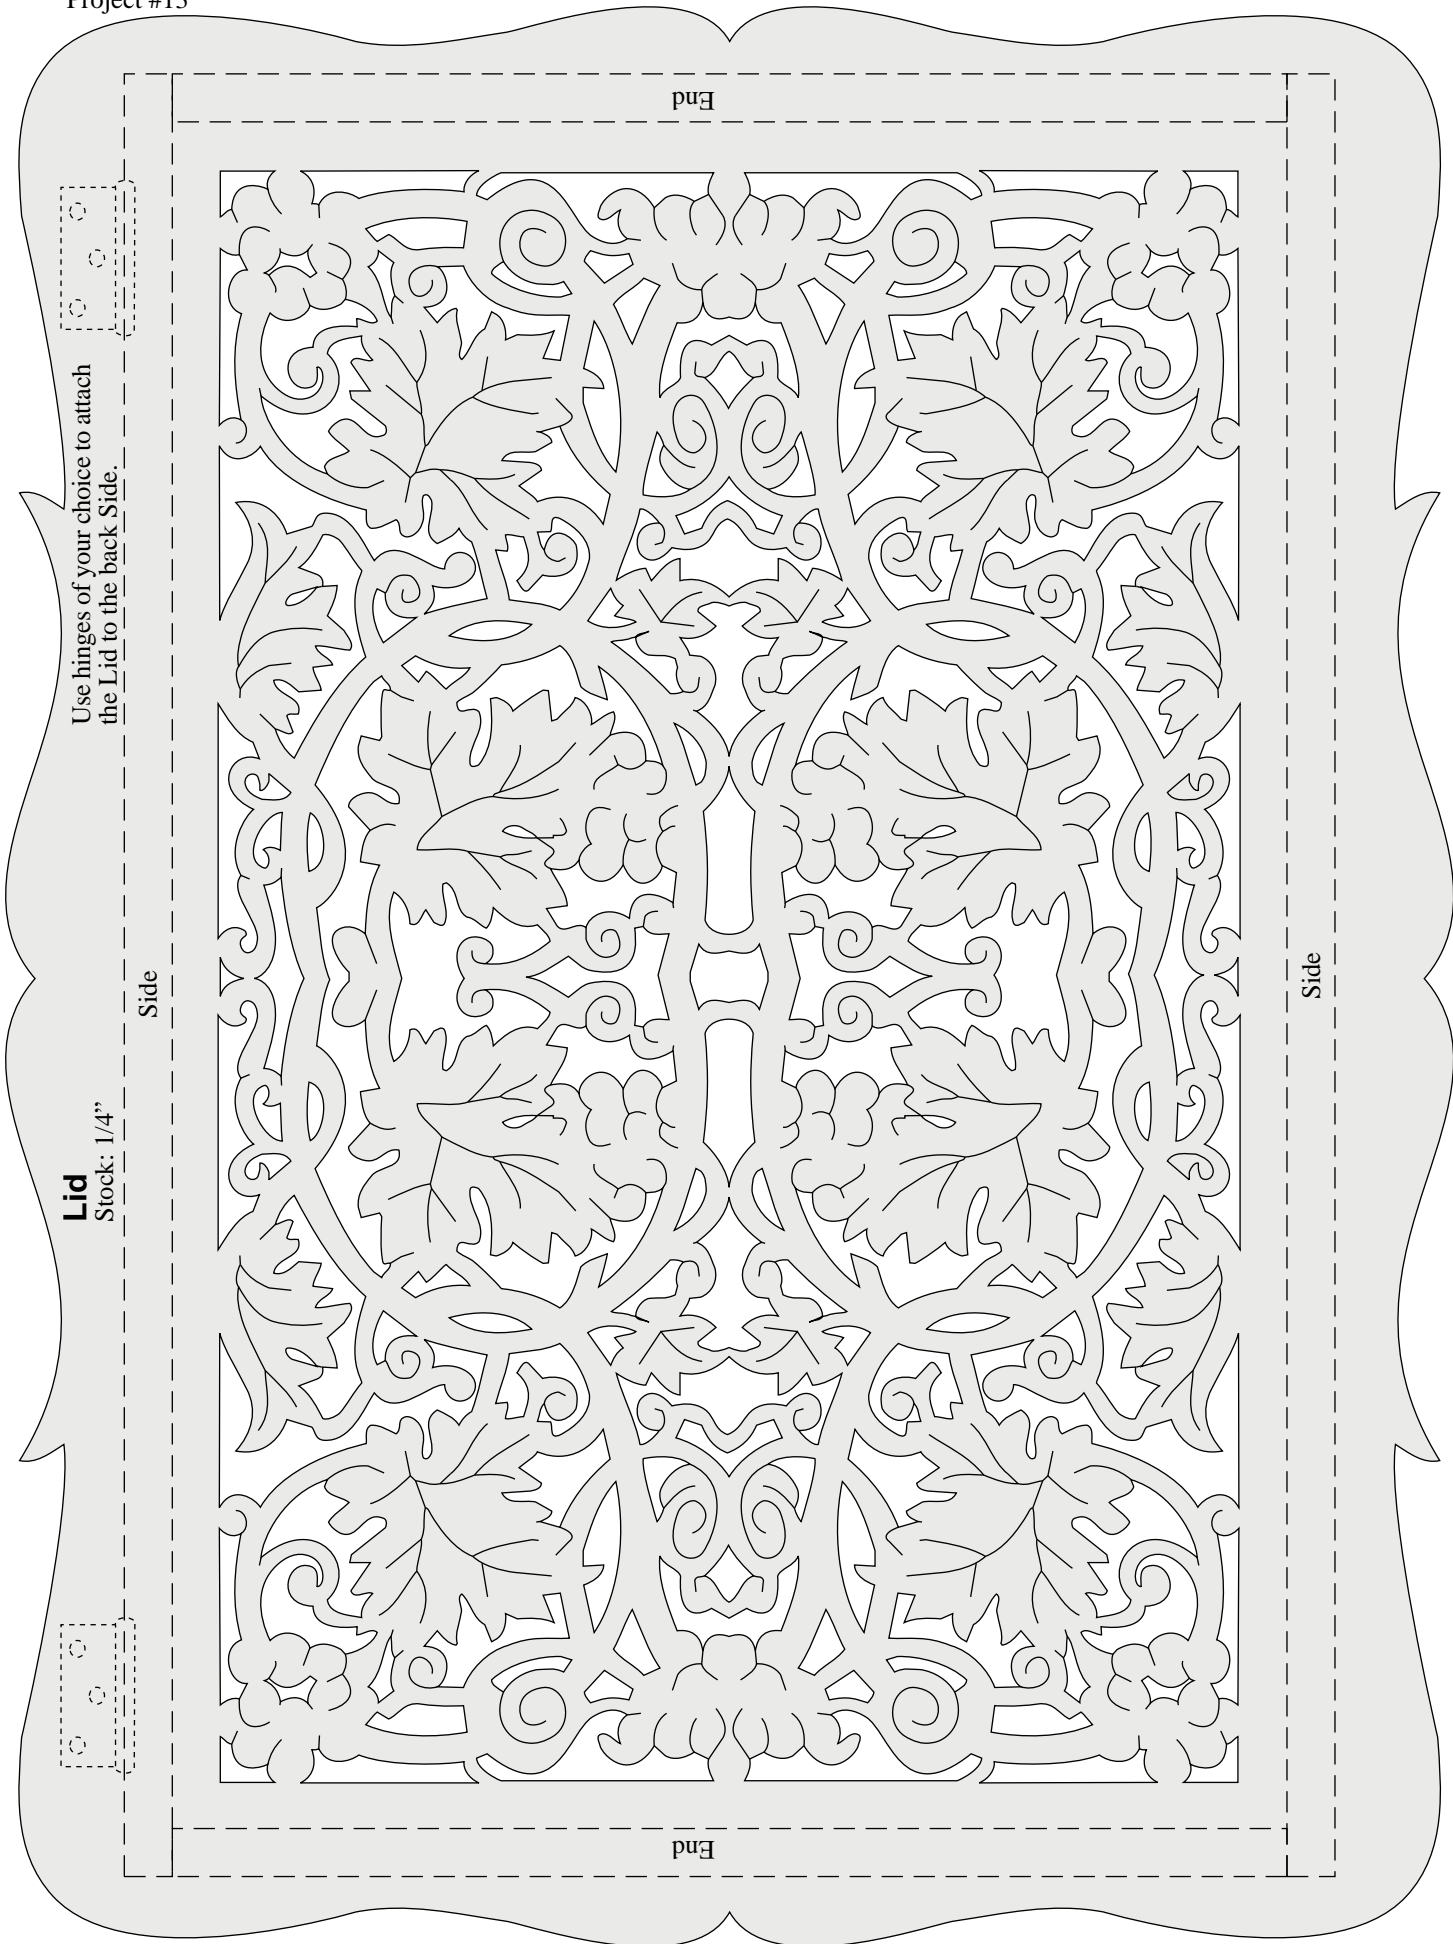

Use hinges of your choice to attach the Lid to the back Side.

Lid
Stock: 1/4"

 
Side

Side

End

End

Bottom
Stock: 1/4"

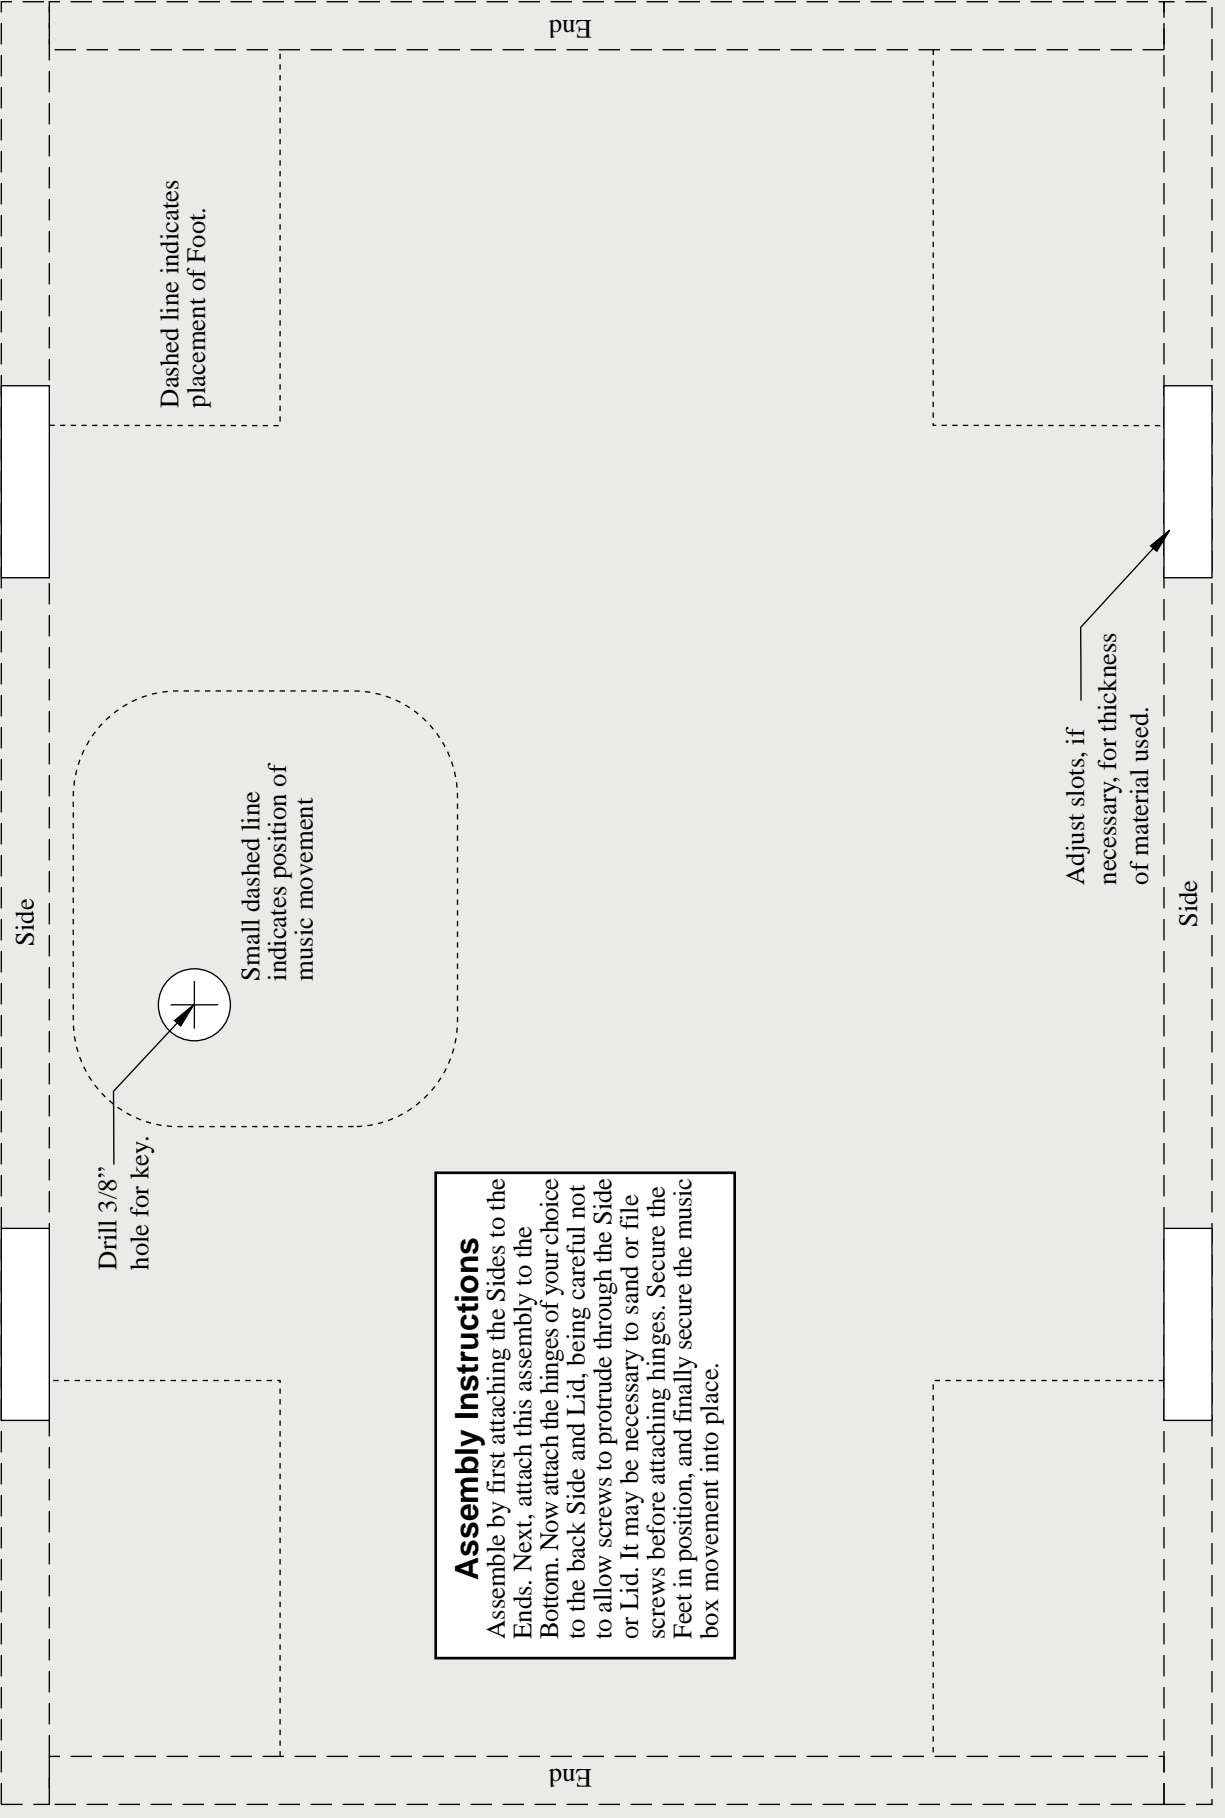

Dashed line indicates placement of Foot.

Small dashed line indicates position of music movement

Drill 3/8" hole for key.

Side

Side

End

 
End

Adjust slots, if necessary, for thickness of material used.


Assembly Instructions

Assemble by first attaching the Sides to the Ends. Next, attach this assembly to the Bottom. Now attach the hinges of your choice to the back Side and Lid, being careful not to allow screws to protrude through the Side or Lid. It may be necessary to sand or file screws before attaching hinges. Secure the Feet in position, and finally secure the music box movement into place.


Project #14

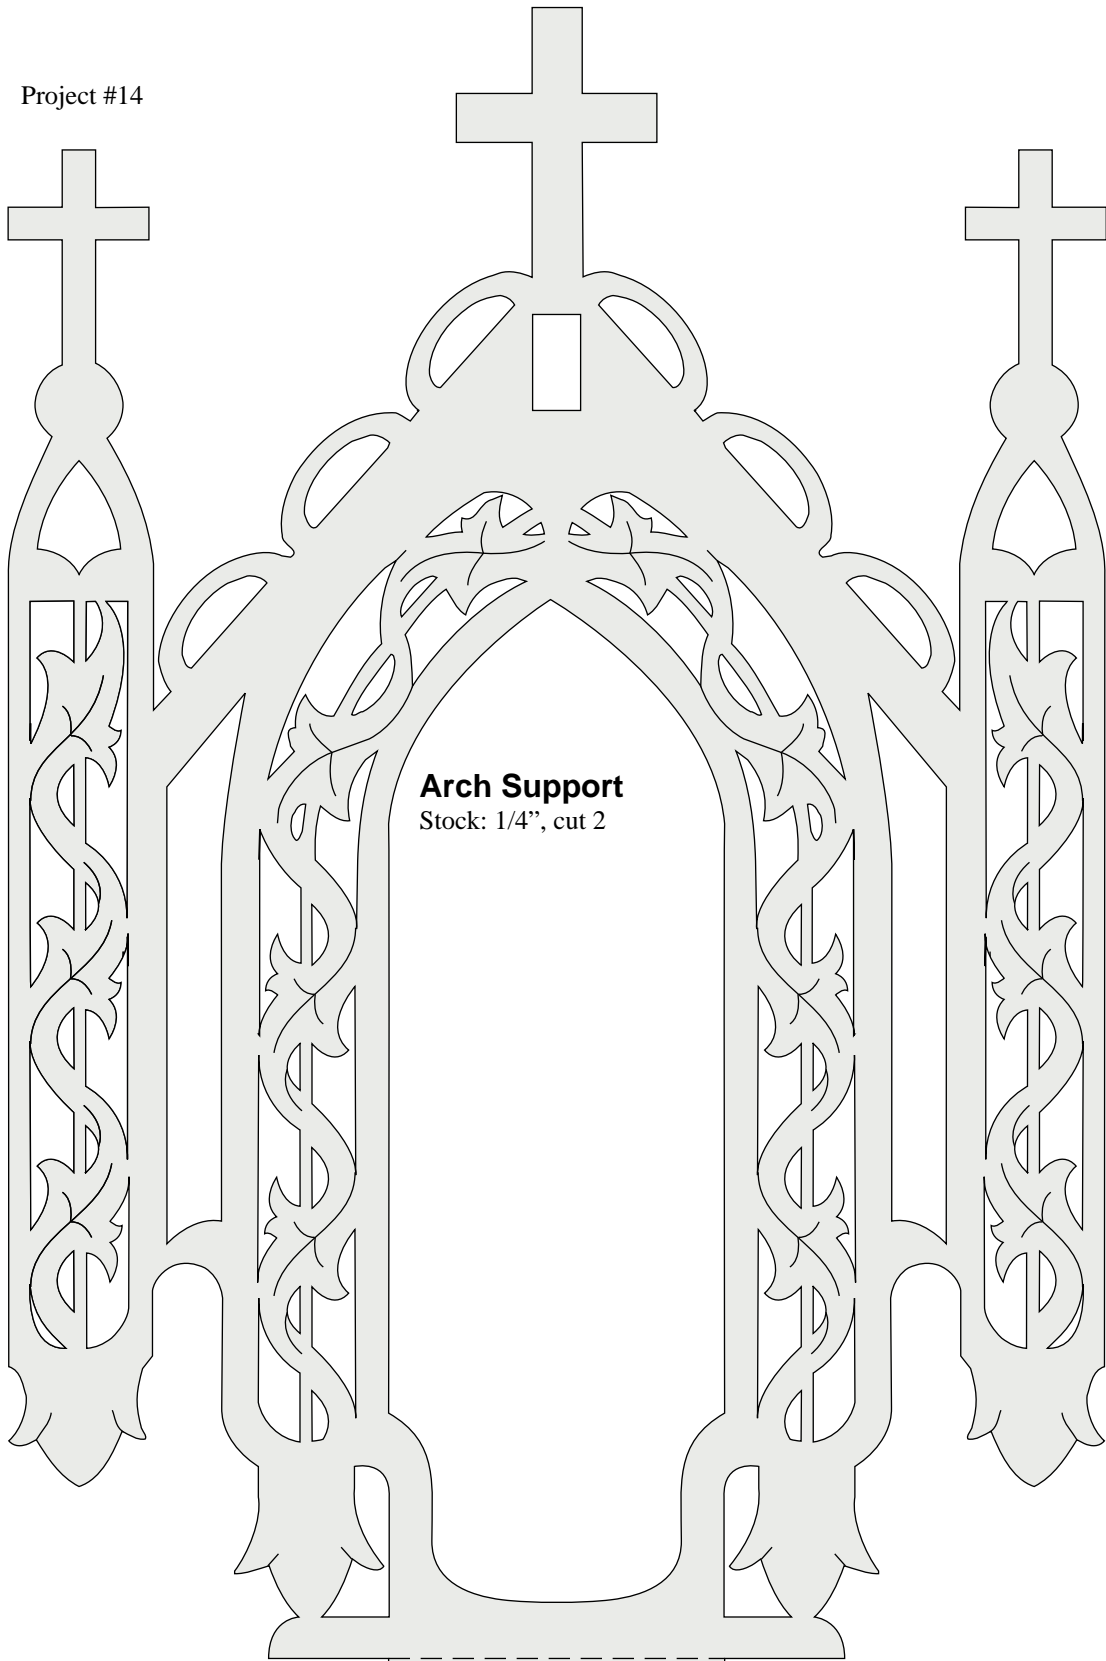



Arch Support
Stock: 1/4", cut 2

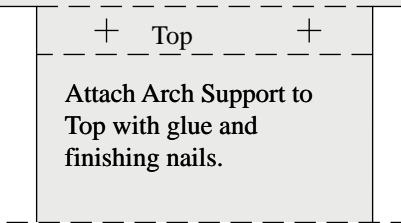 

Pattern overlap line.

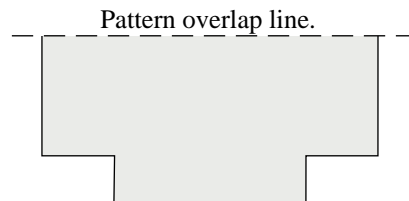 


Pattern overlap line.

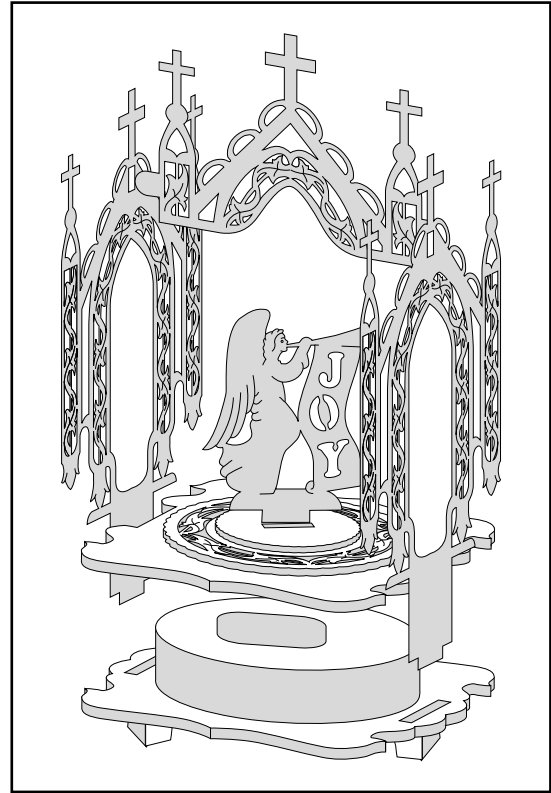 
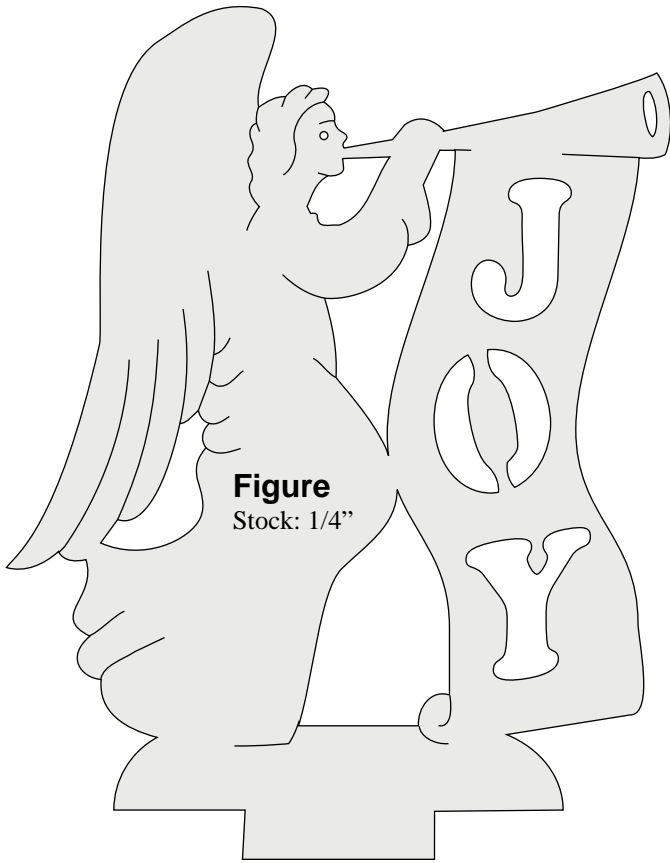 


Turntable

 Stock: 1/4", countersink the bottomsides with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

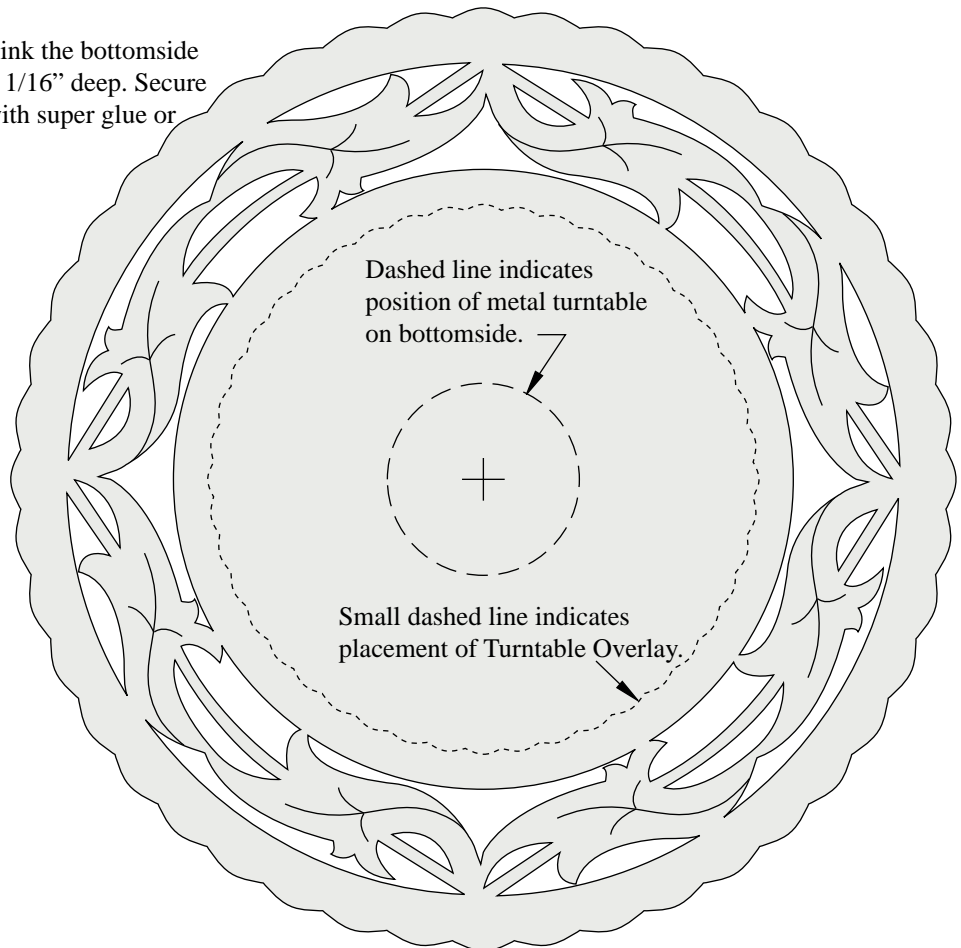

Project #14

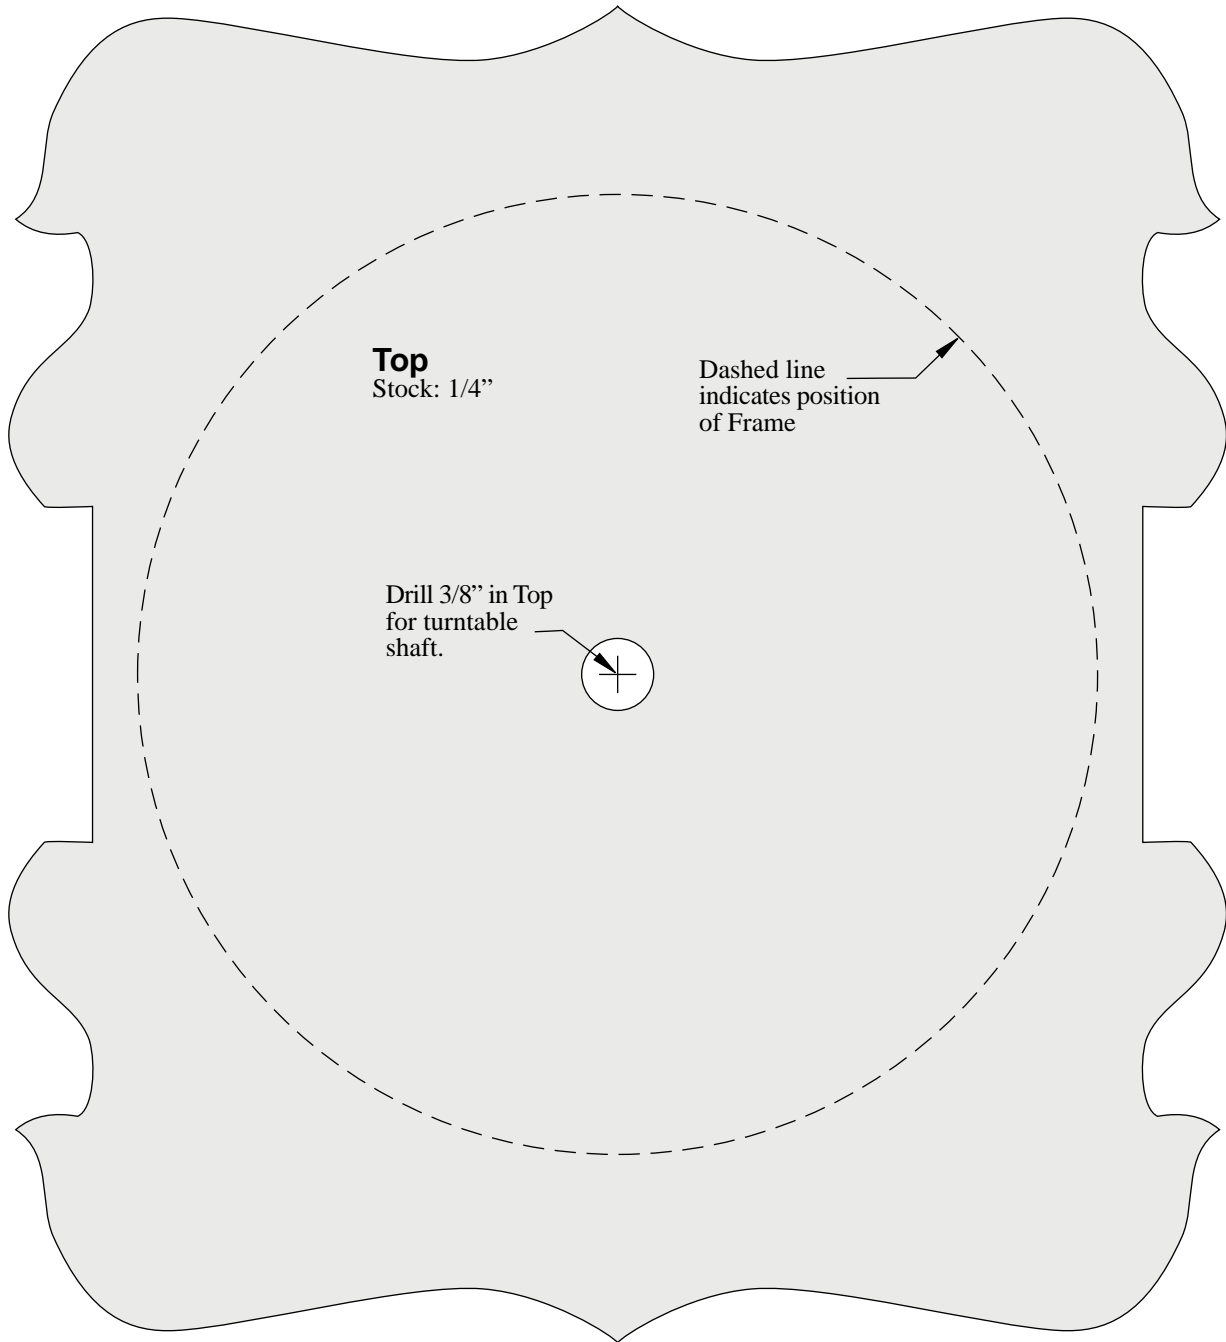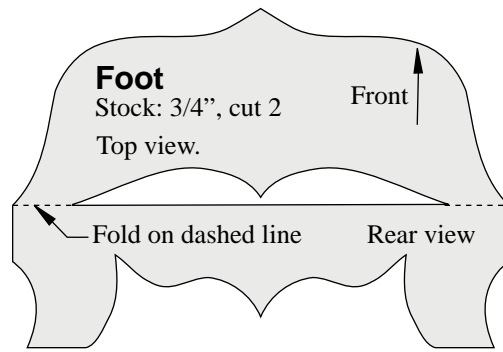  


Turntable Overlay

Stock: 1/4"


Project #14



 Adjust slot, if necessary, for thickness of material used.

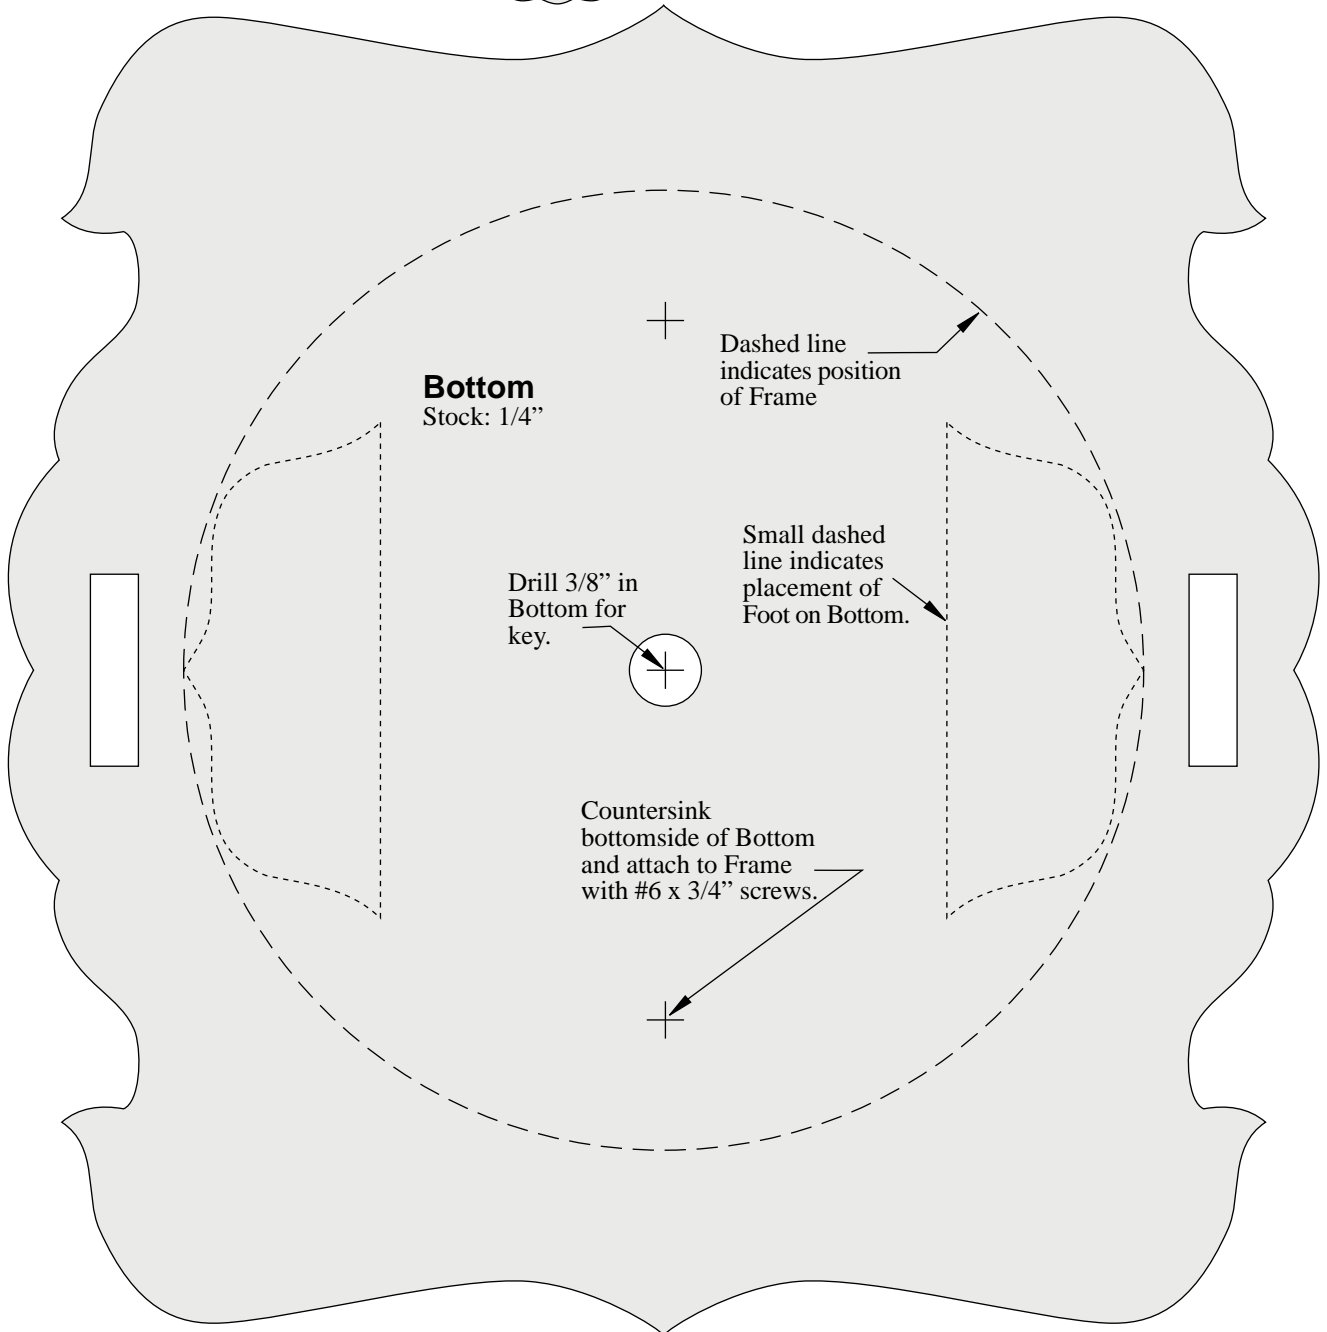

Project #14

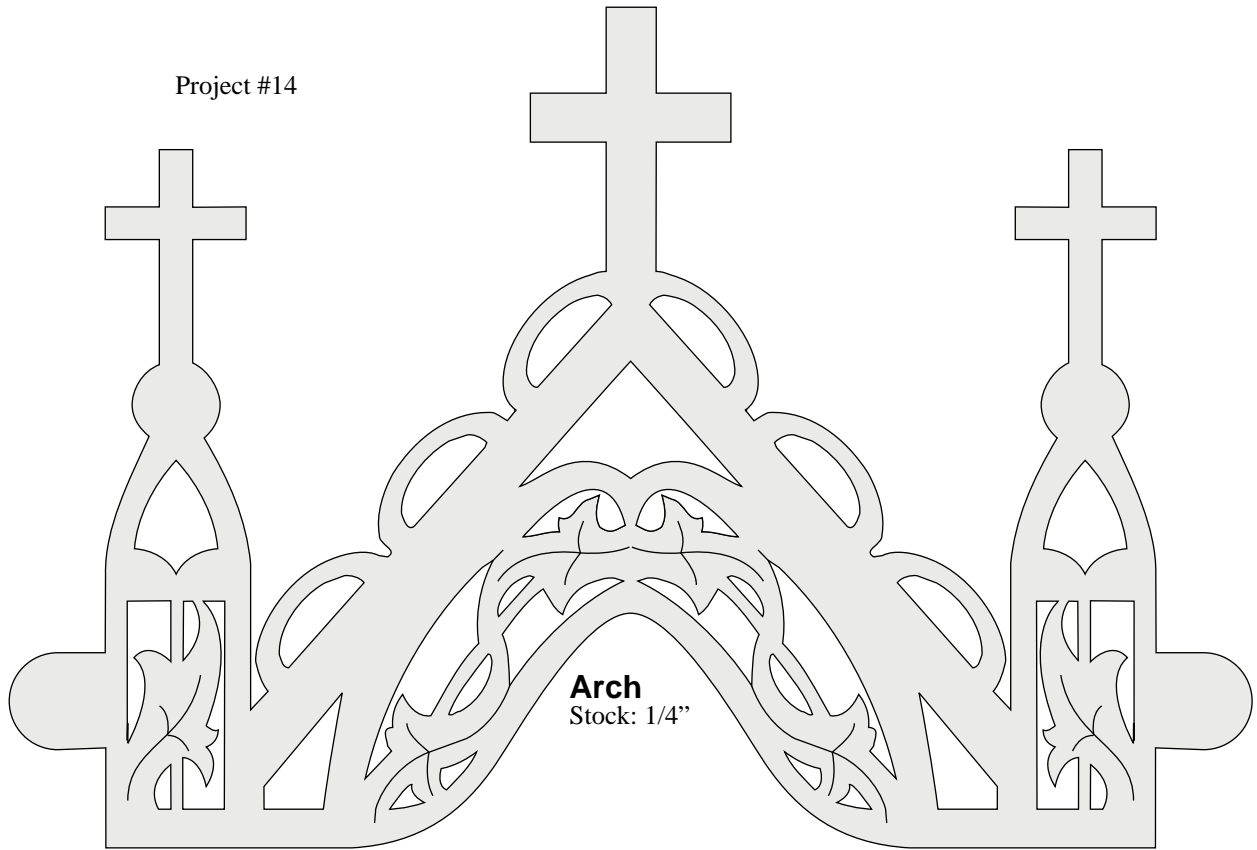 


Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



 Cut out for music box

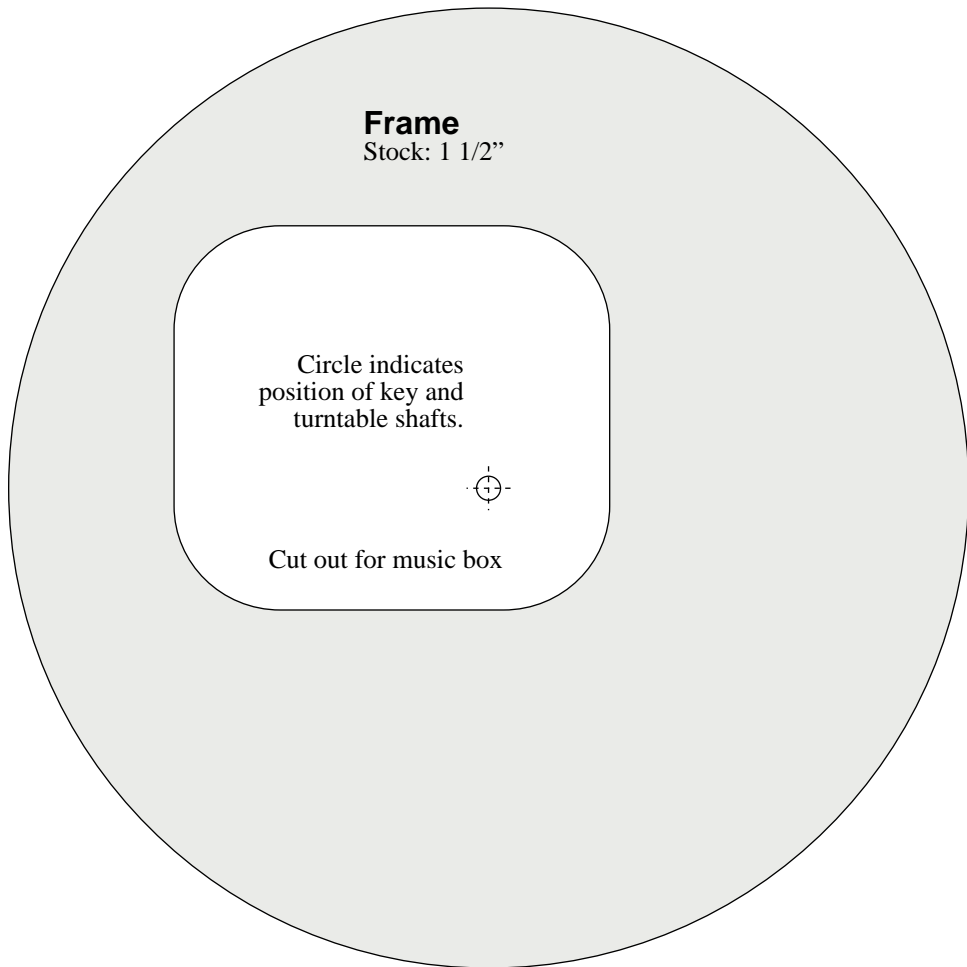

Frame
Stock: 1 1/2"

 
Assembly Instructions
To Assemble, attach Legs to Apron Support with glue. Next, attach the Aprons. Then clamp this assembly to the bottomsink of the Bottom and countersink to attach the assembly to the Frame with #6 x 1" F.H. screws.

Circle indicates position of key and turntable shafts.





Cut out for music box

Project #15



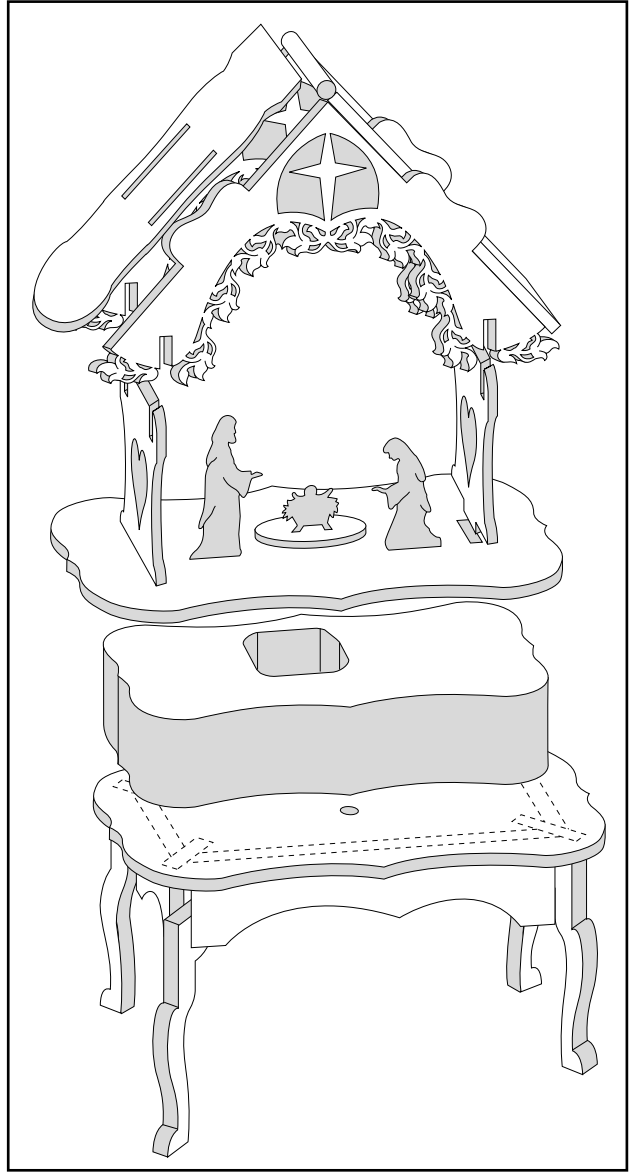




Project #15

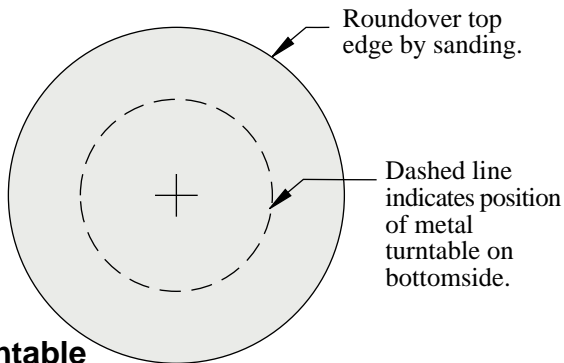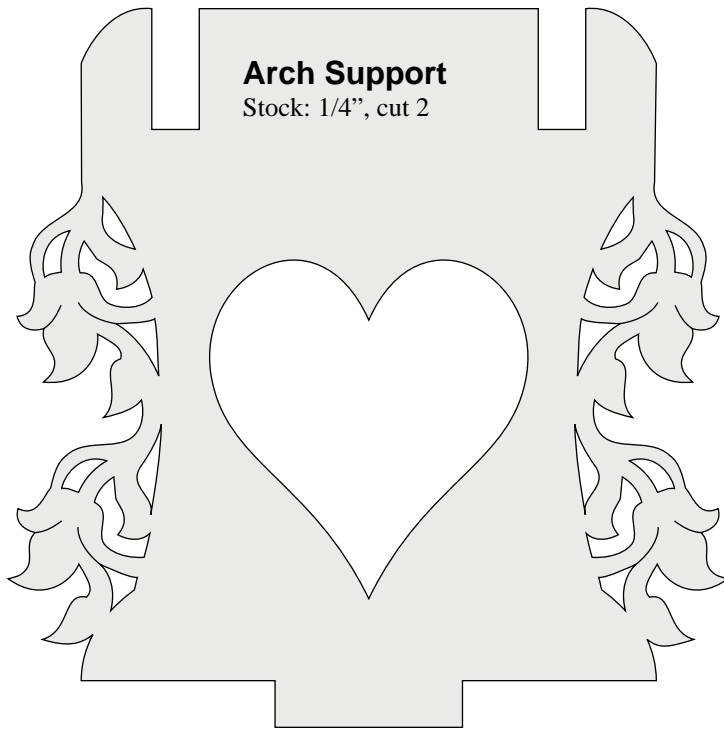  


Turntable

      Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

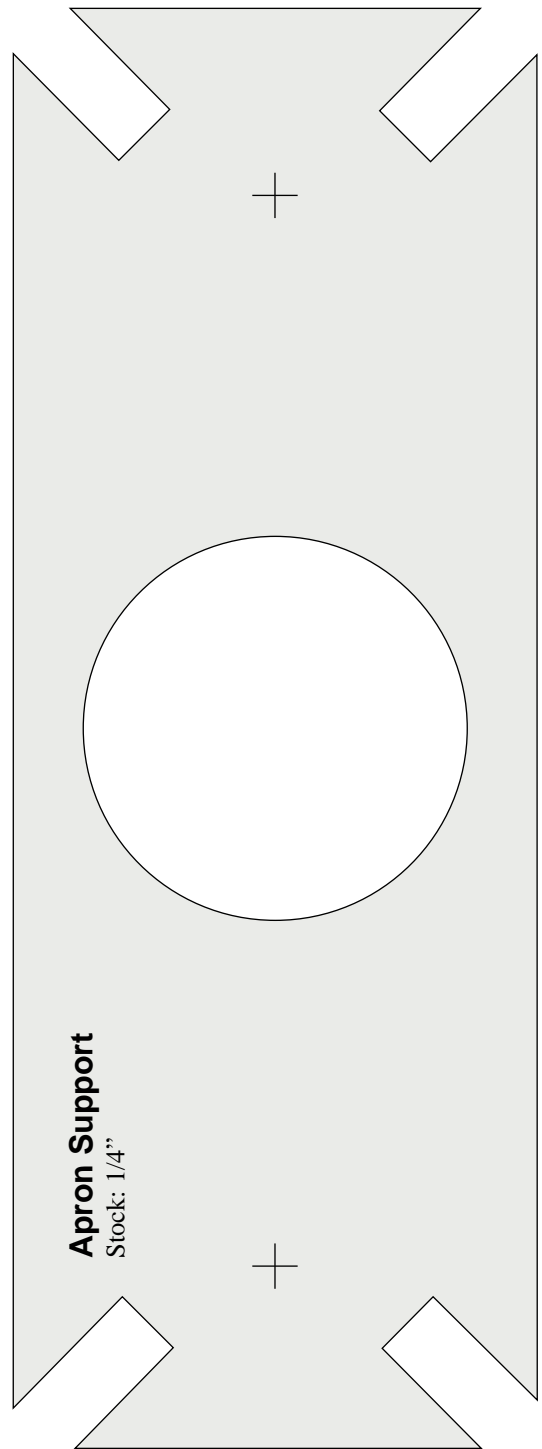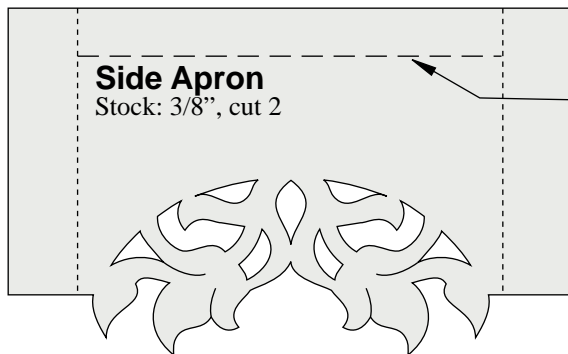

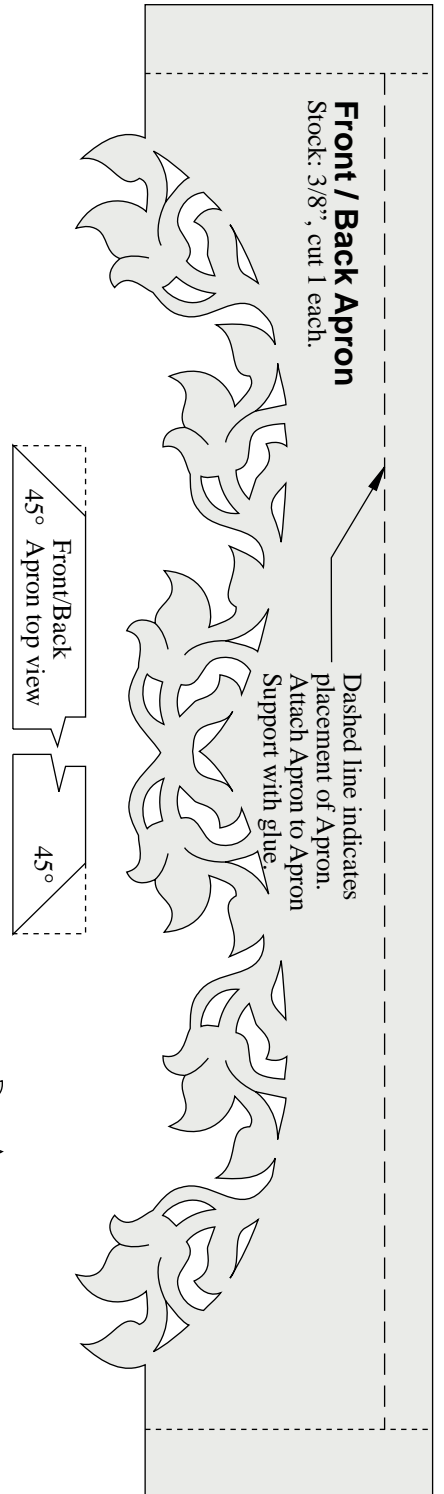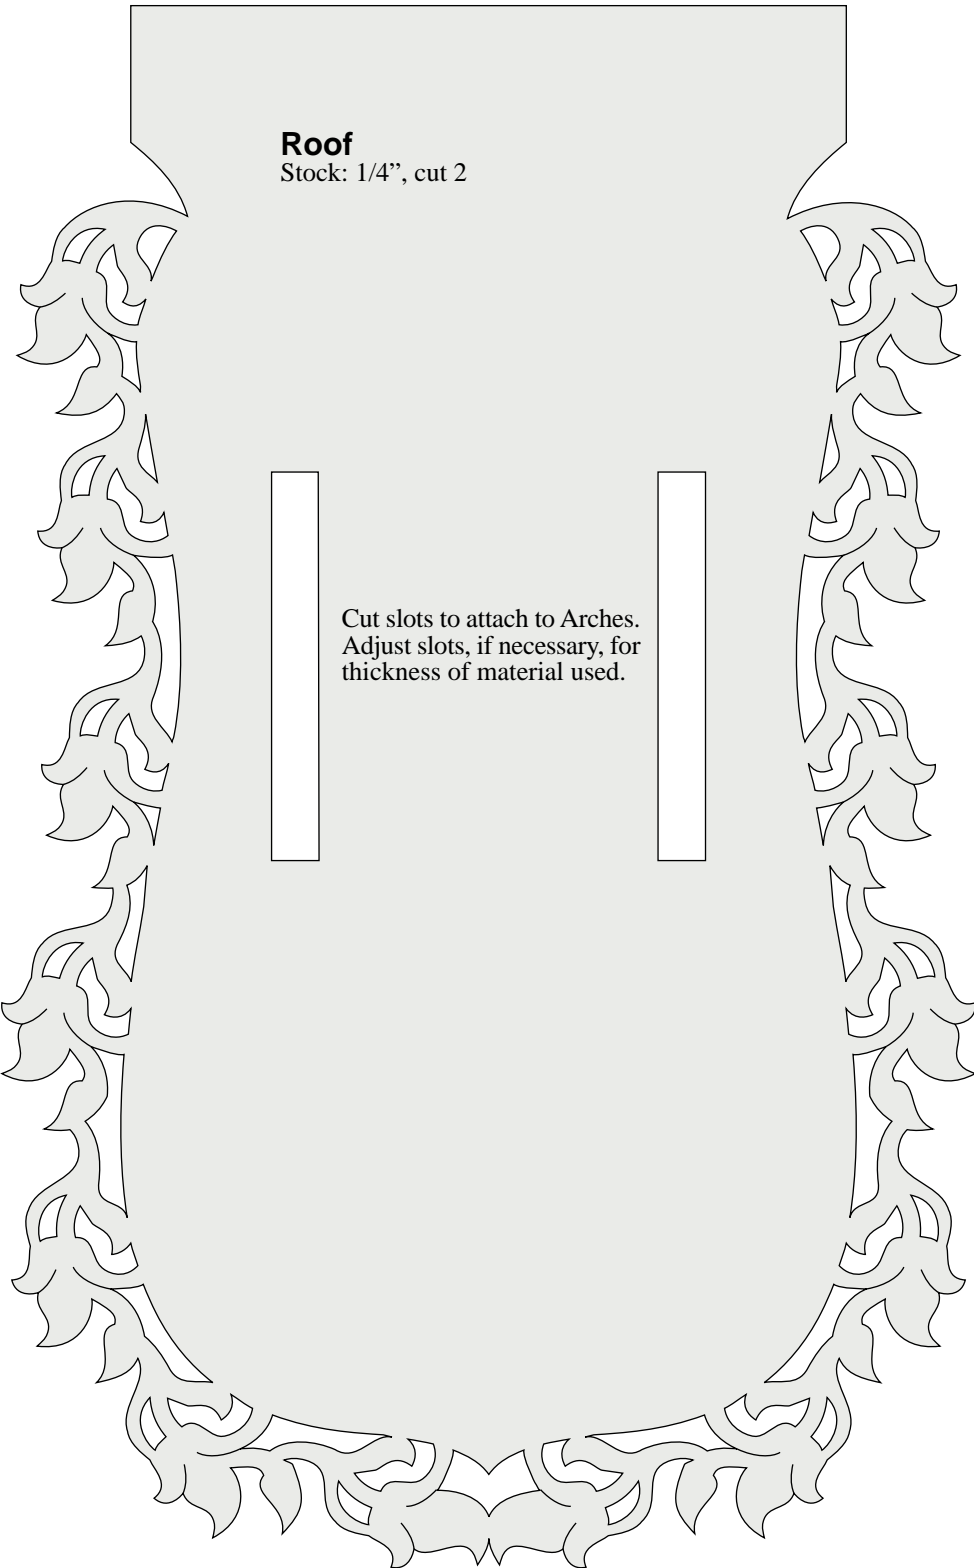

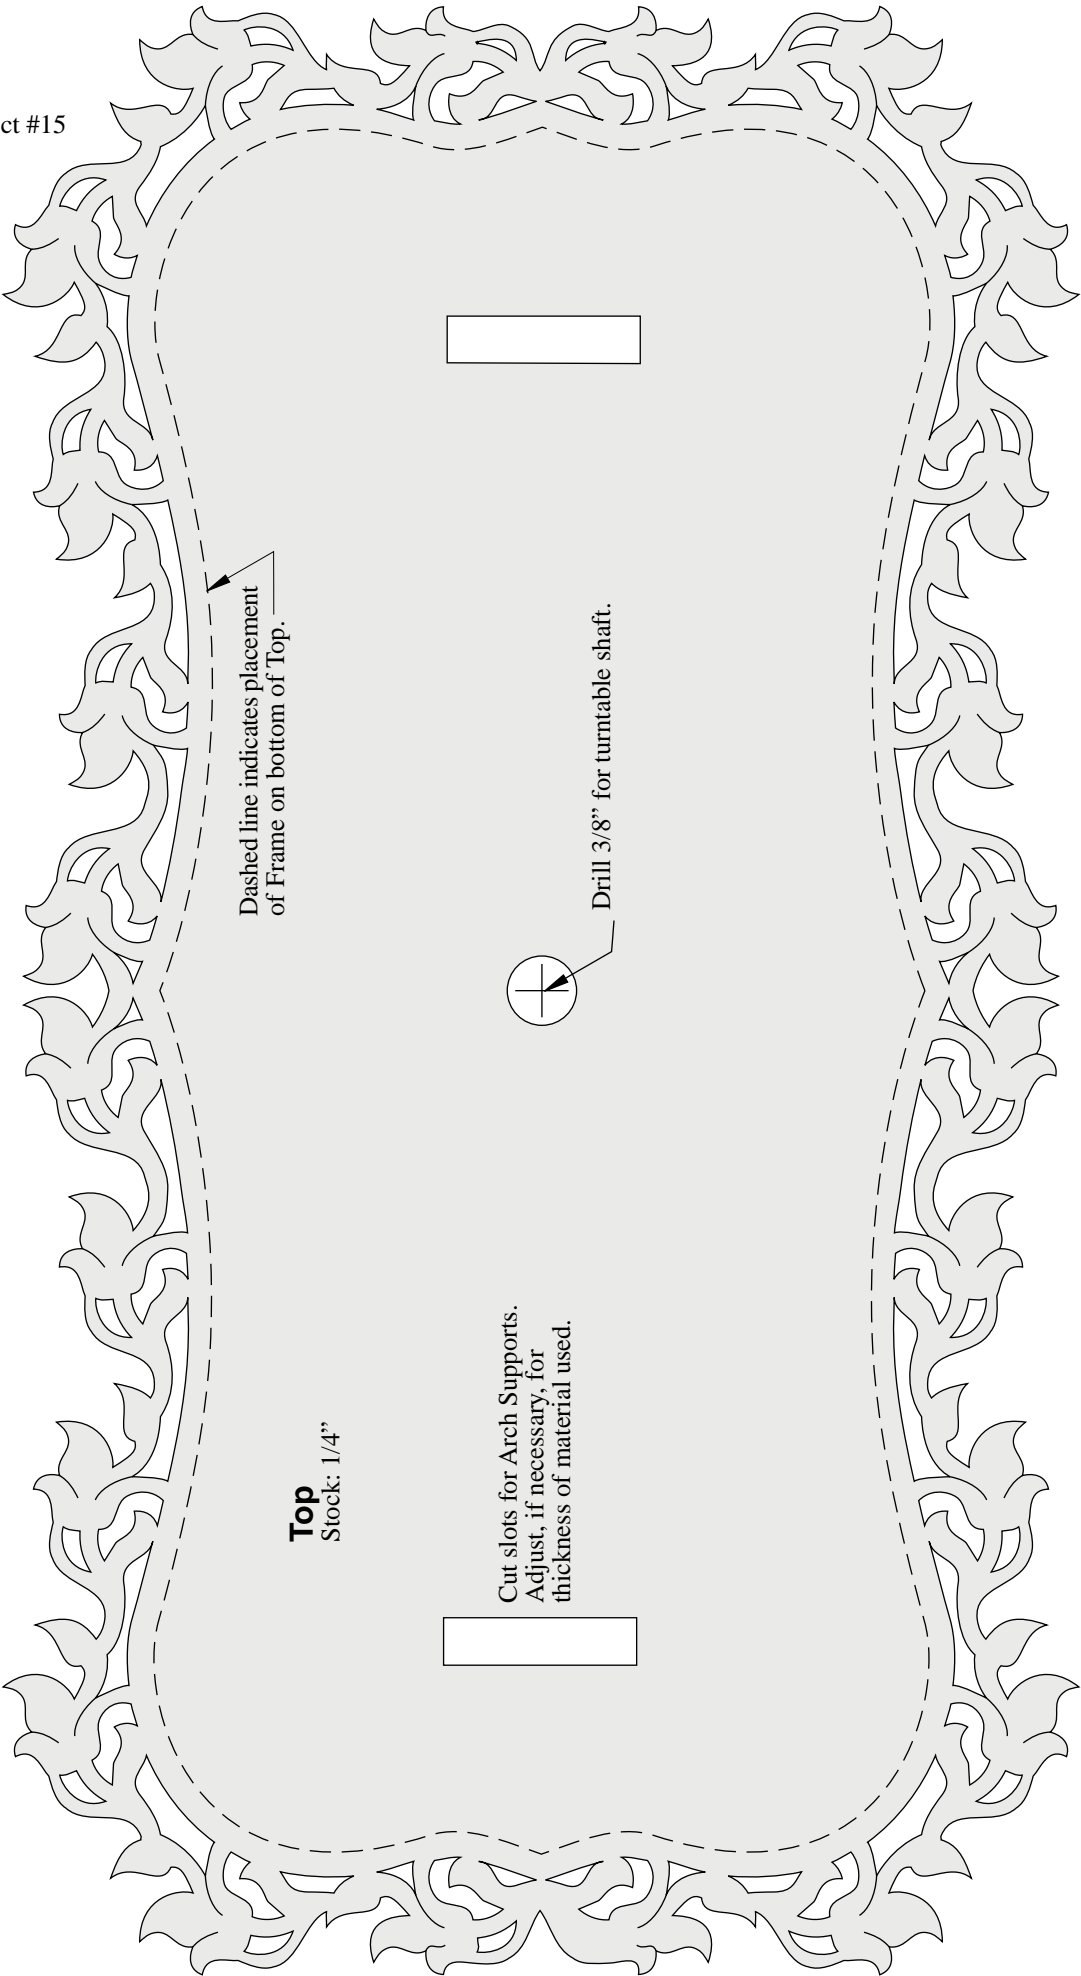


Dashed line indicates placement of Frame on bottom of Top.


Drill 3/8" for turntable shaft.

Cut slots for Arch Supports. Adjust, if necessary, for thickness of material used.

 
Top
Stock: 1/4"



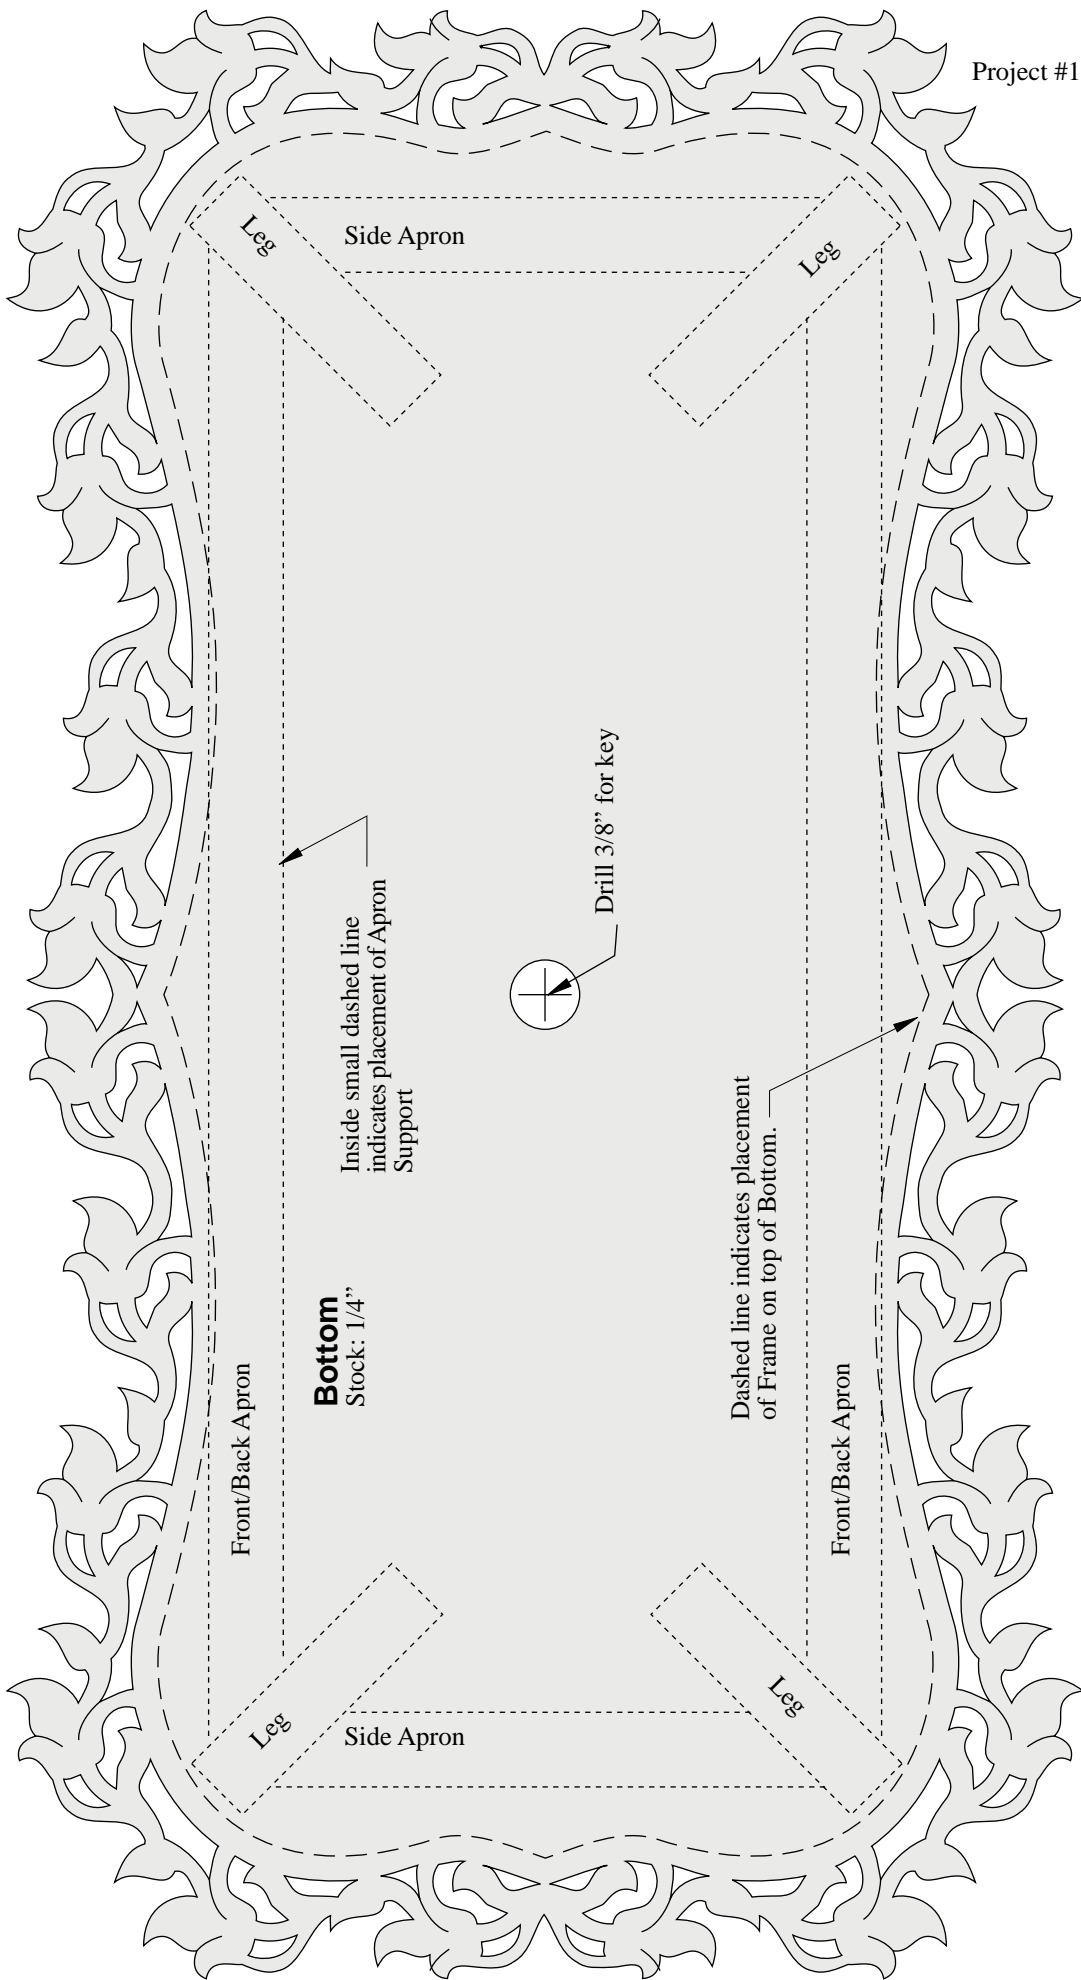


Project #15

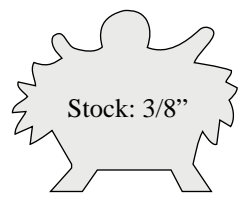 

Fill gap with 3/8" dowel.


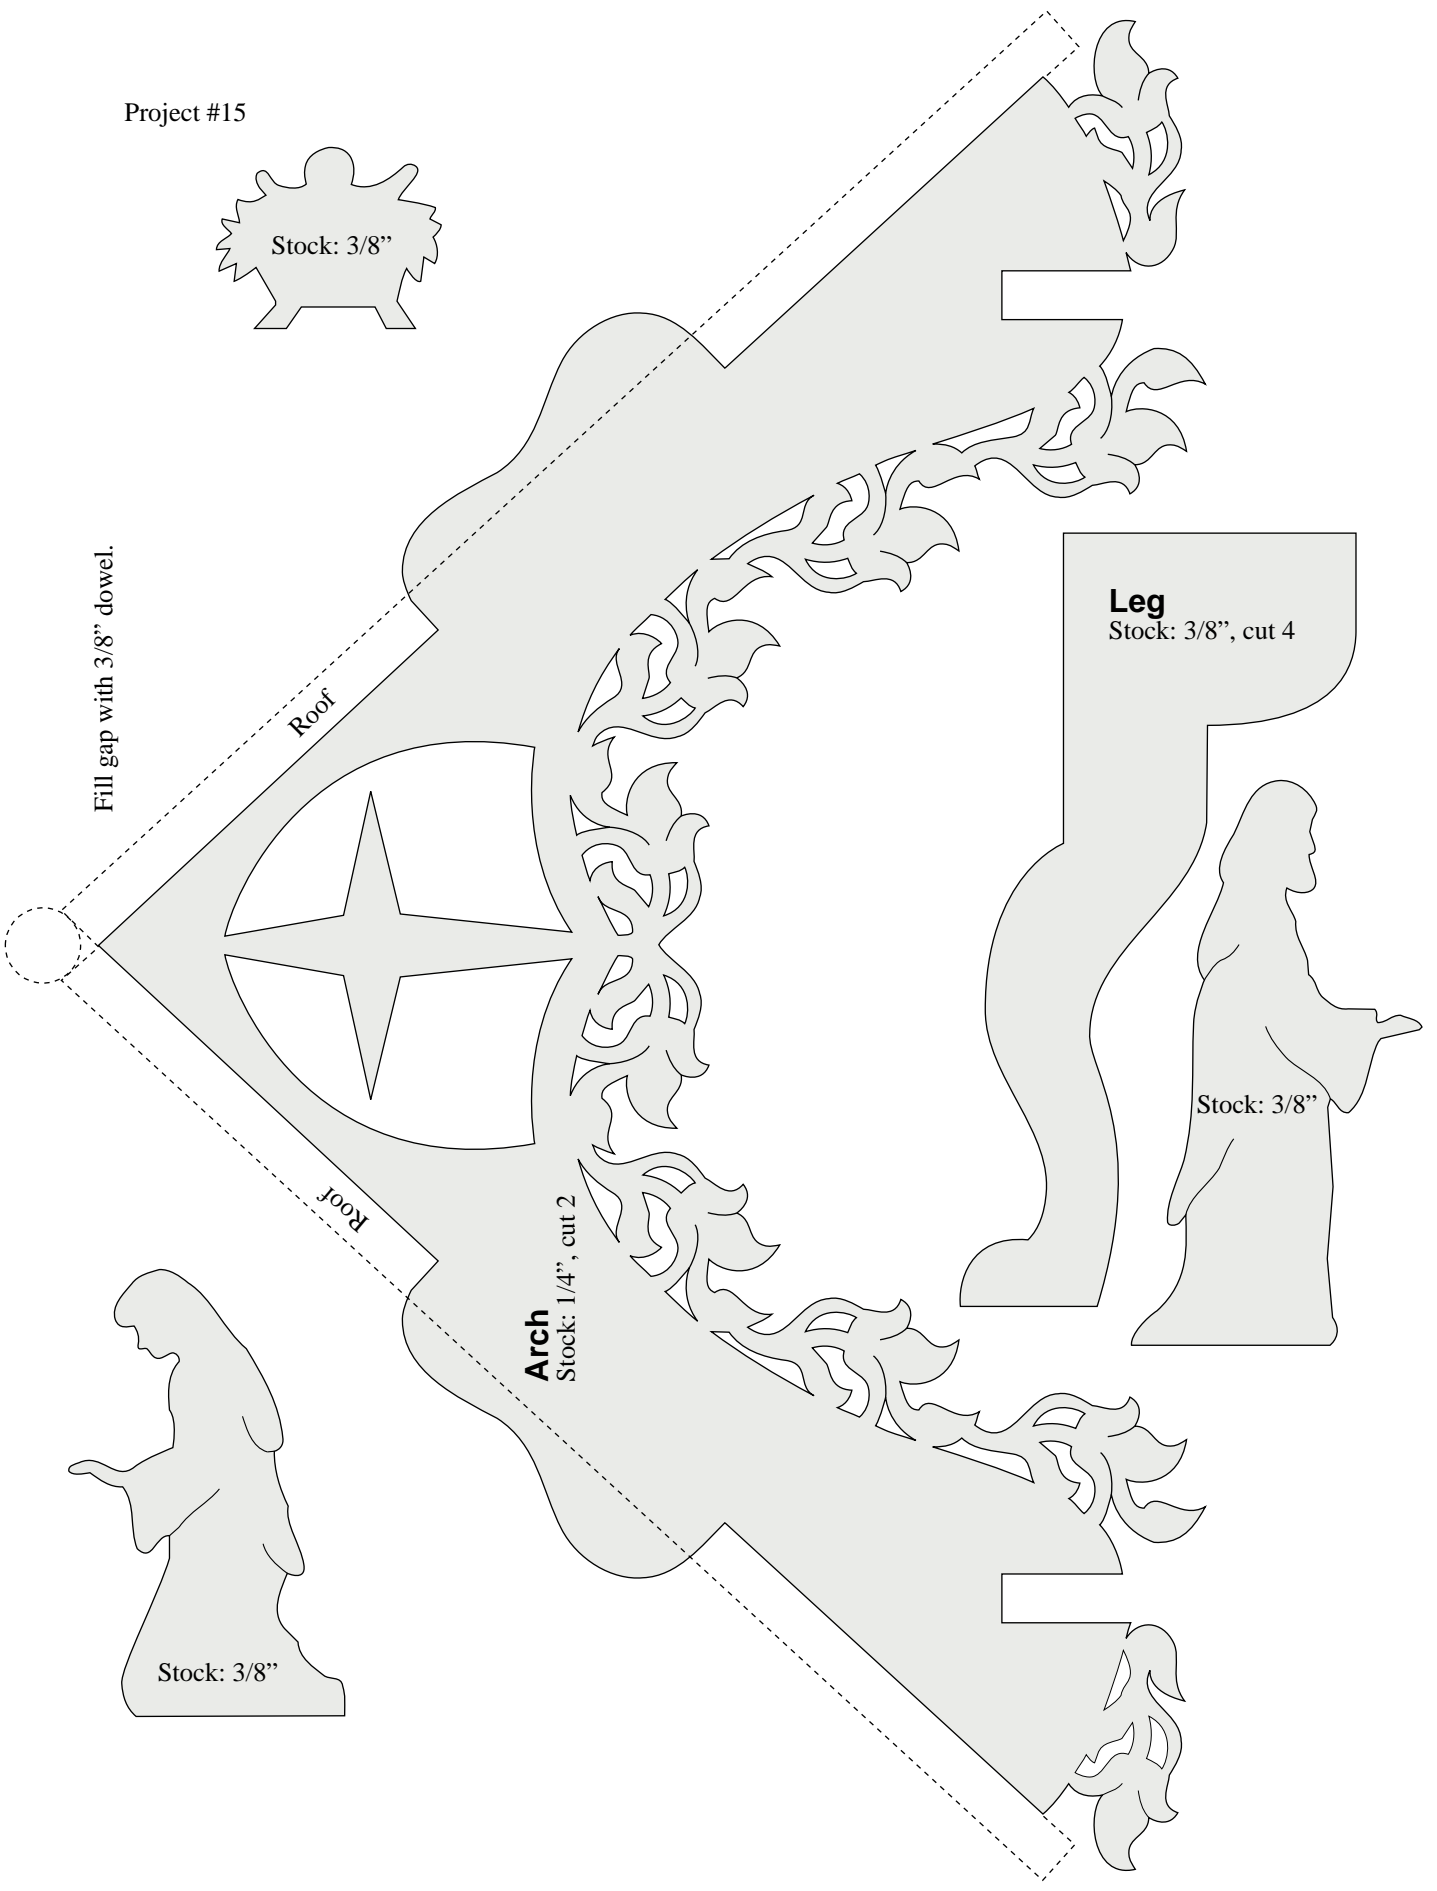 


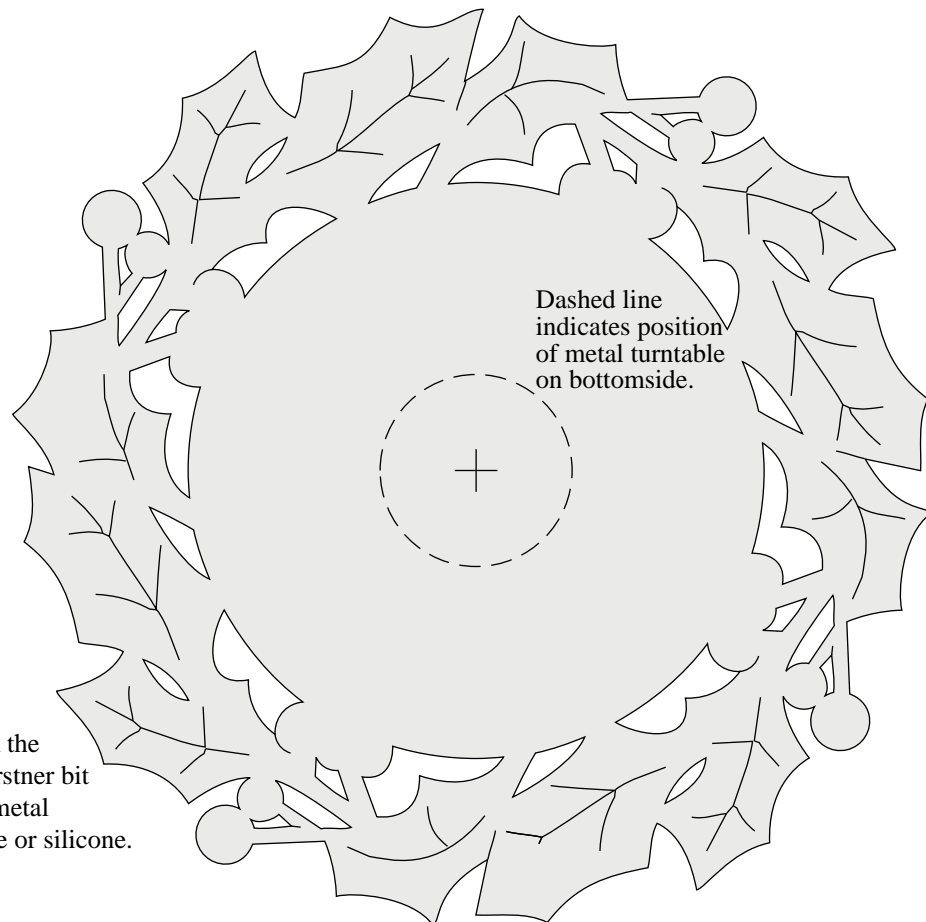 
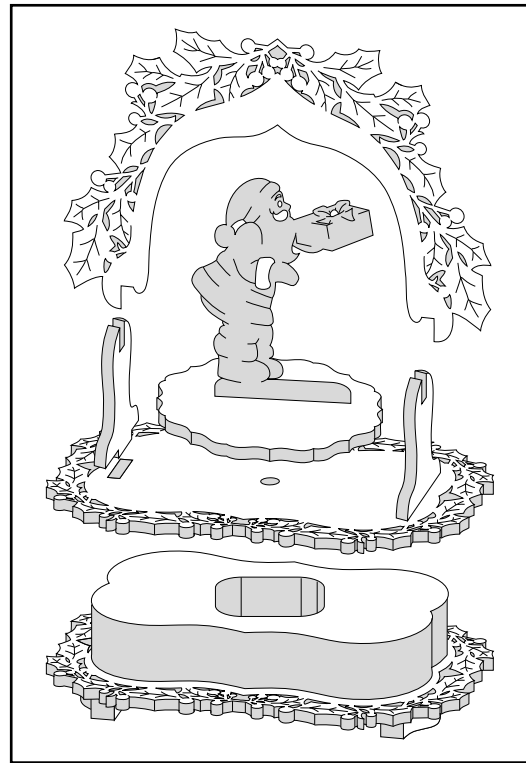 
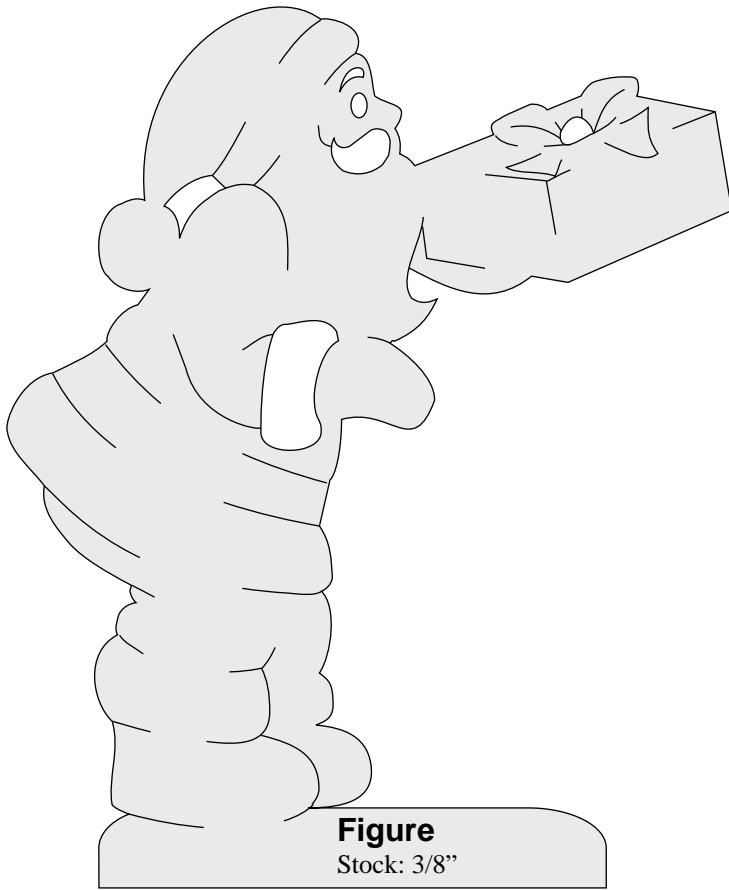 


Dashed line
indicates position
of metal turntable
on bottomside.


Turntable

     Stock: 1/4", countersink the
bottomside with a 1" forstner bit
1/16" deep. Secure the metal
turntable with super glue or silicone.

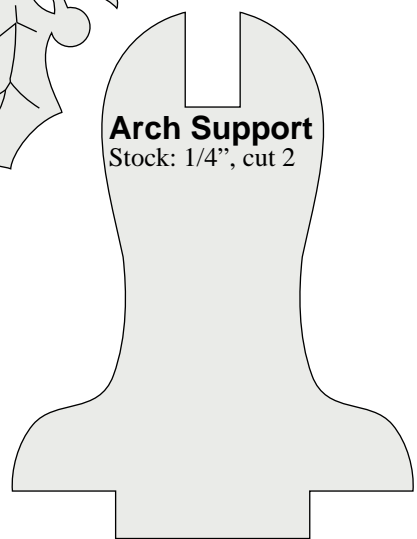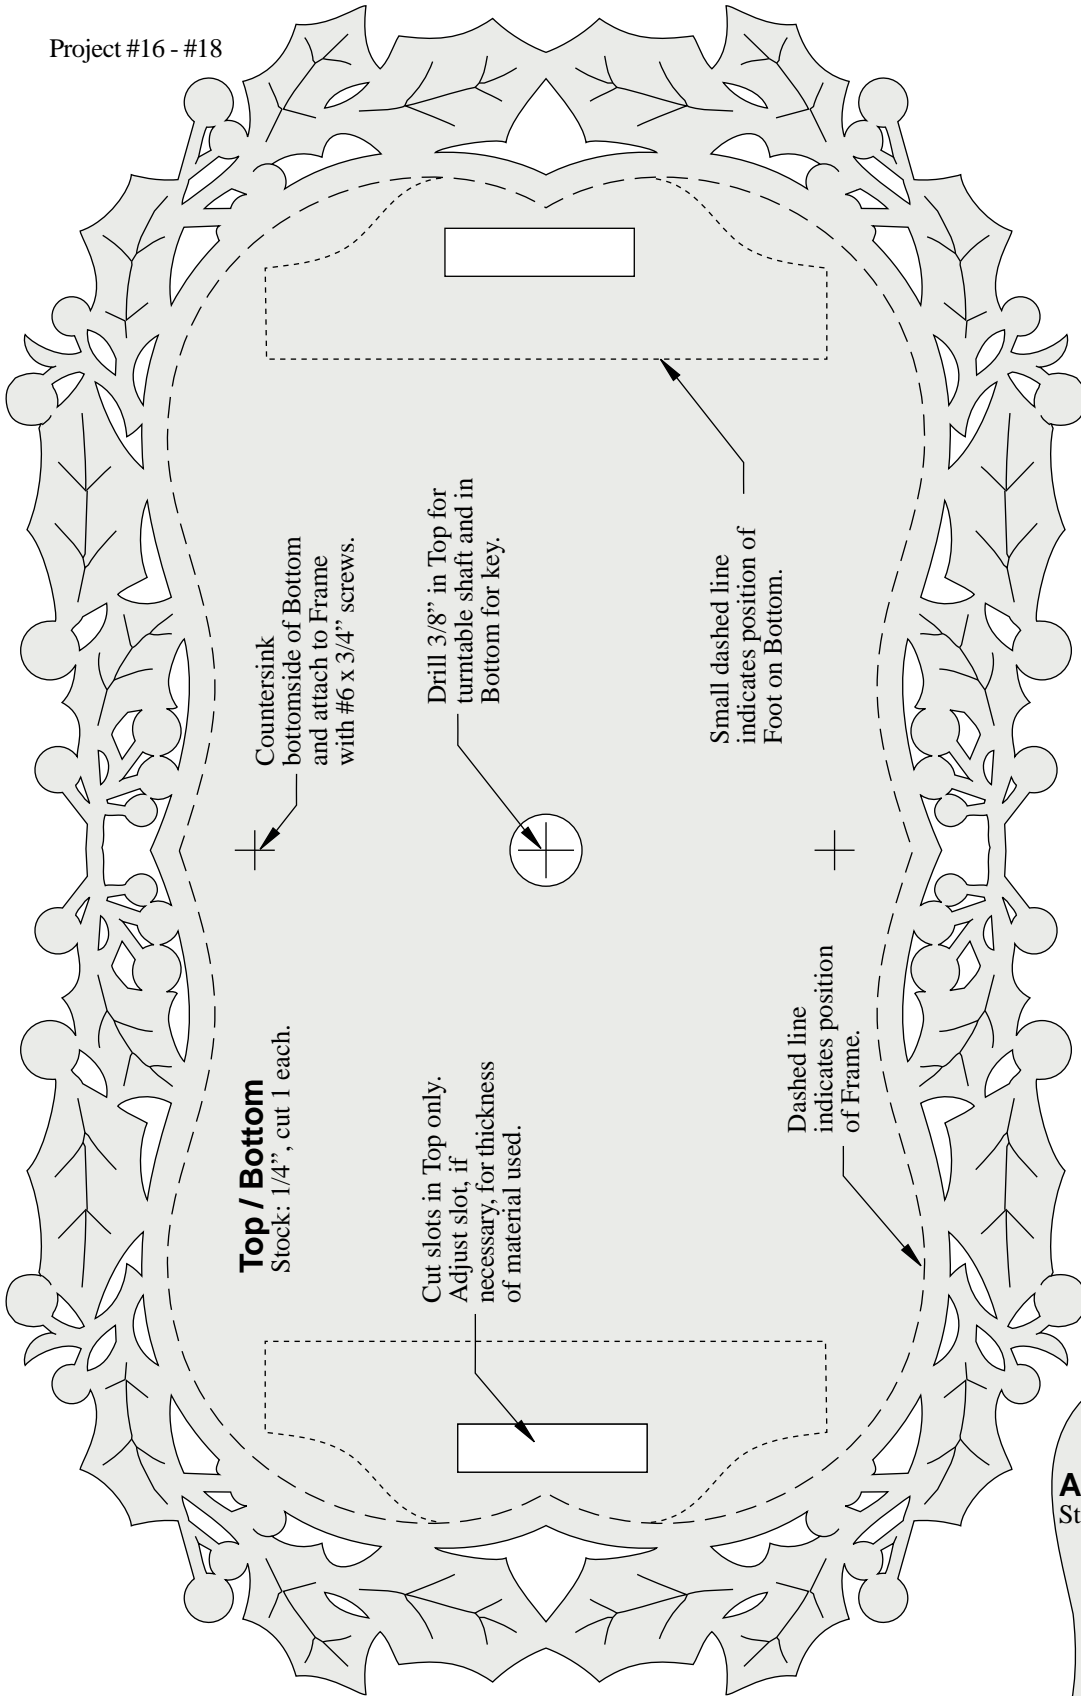

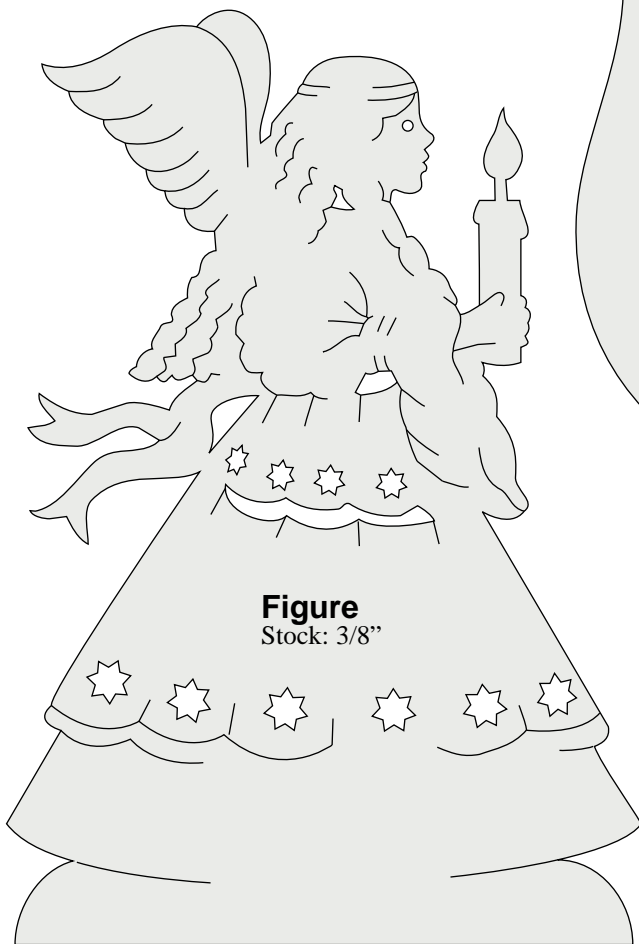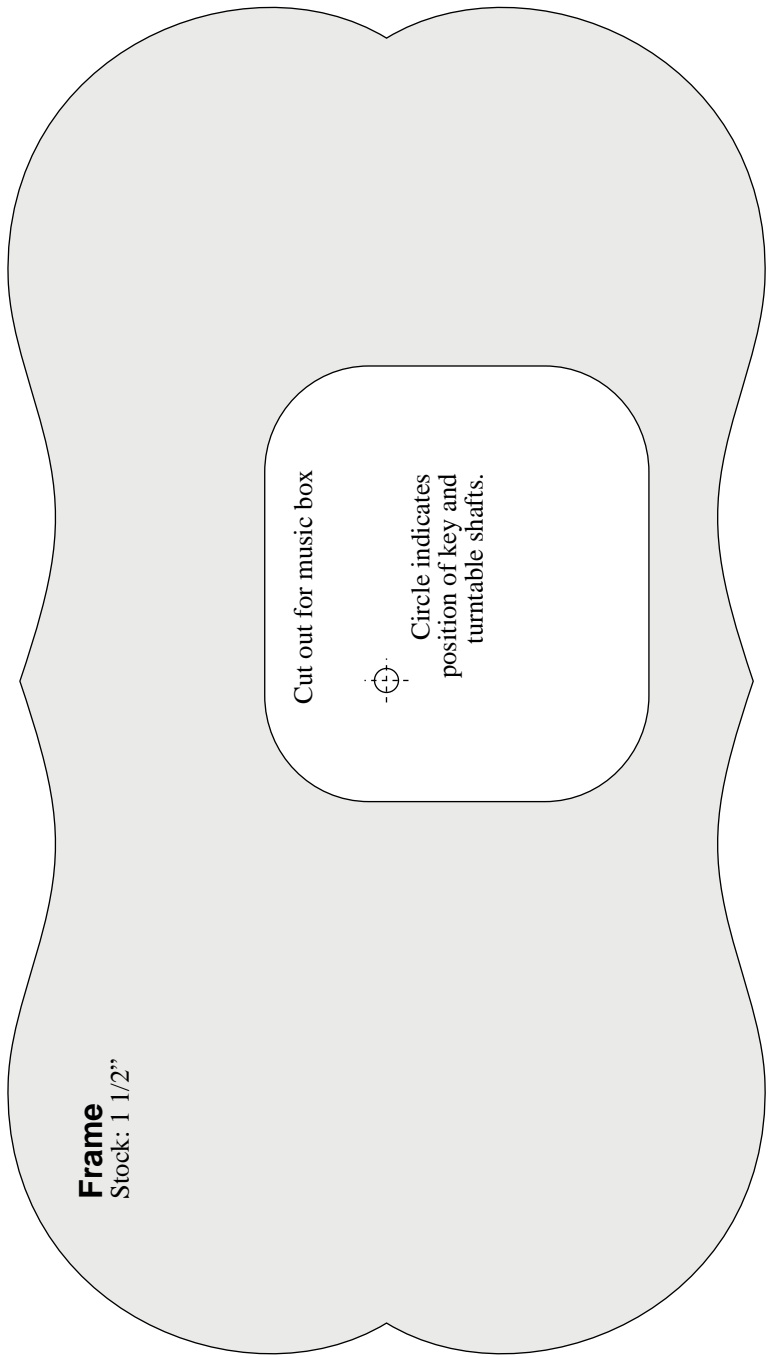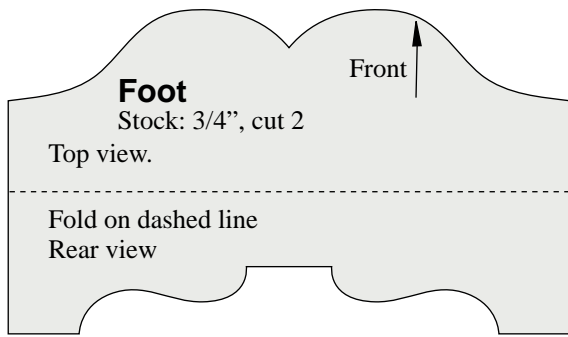

Project #16 - #18

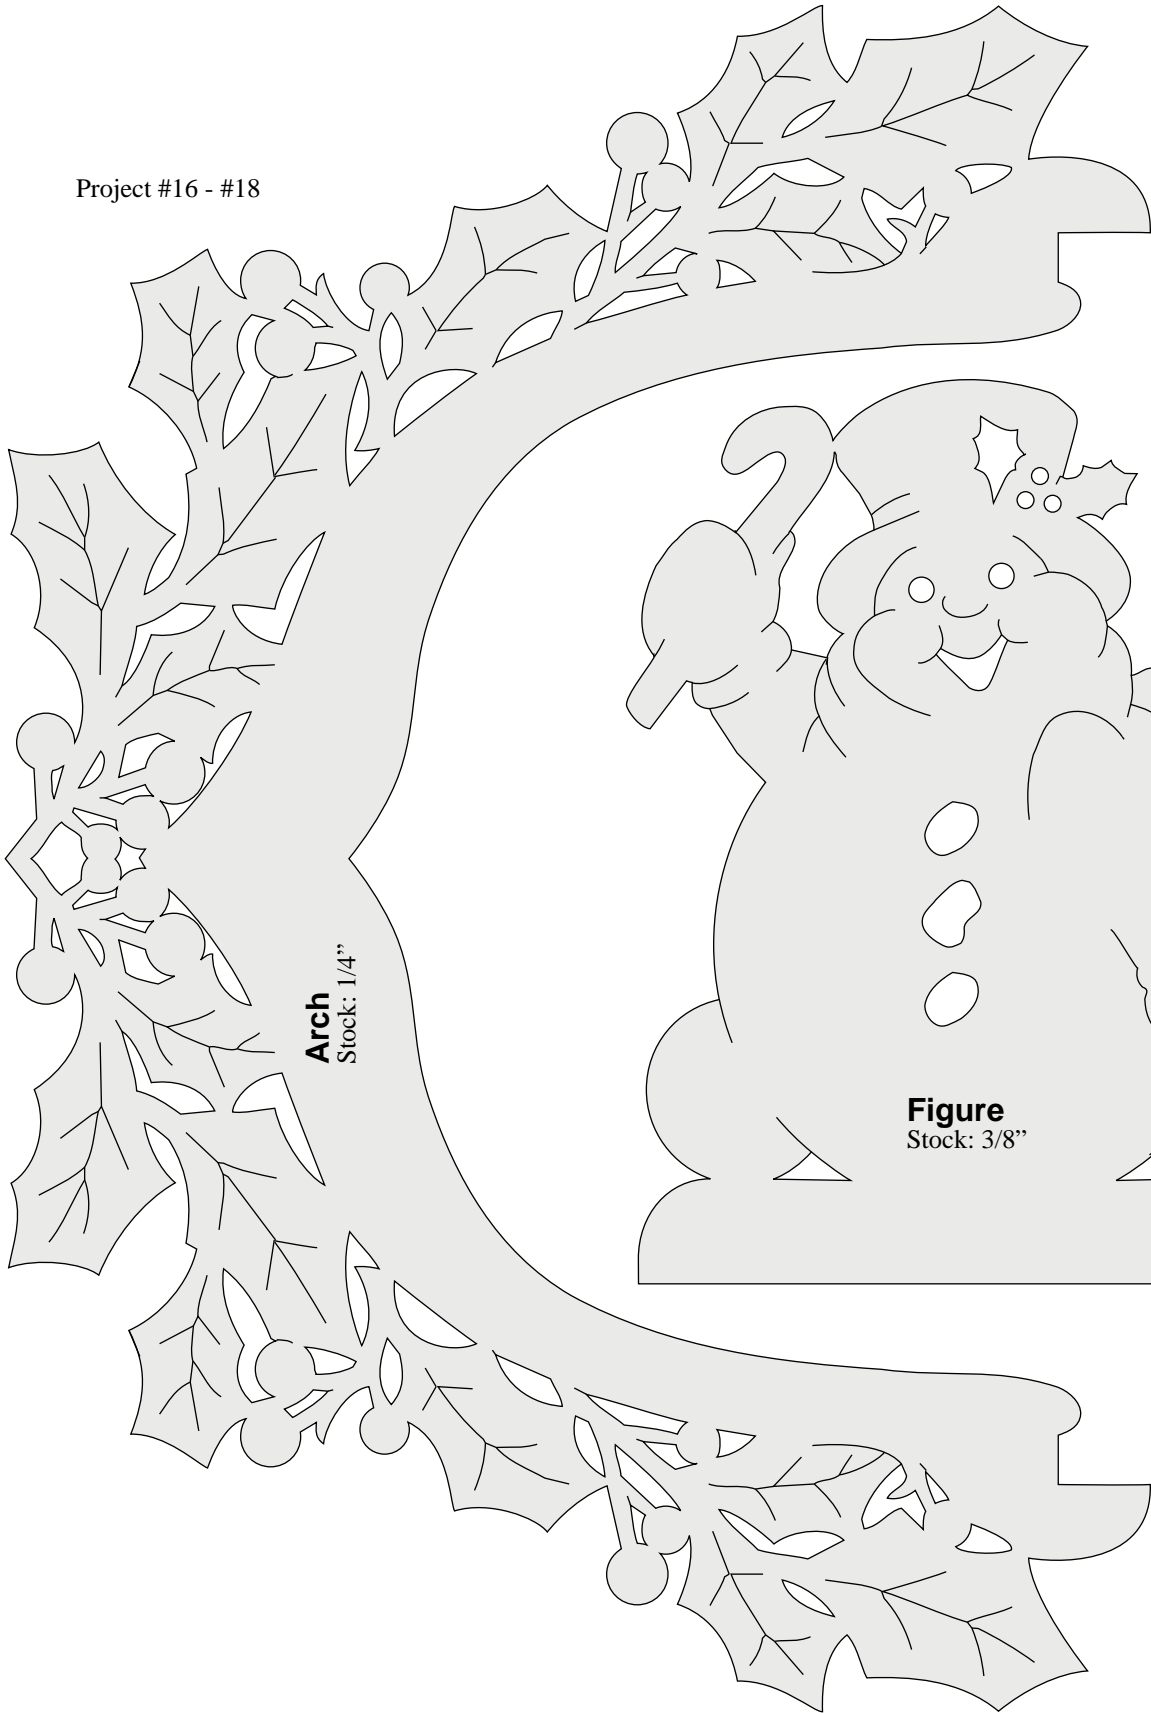 

Arch
Stock: 1/4"



 
 
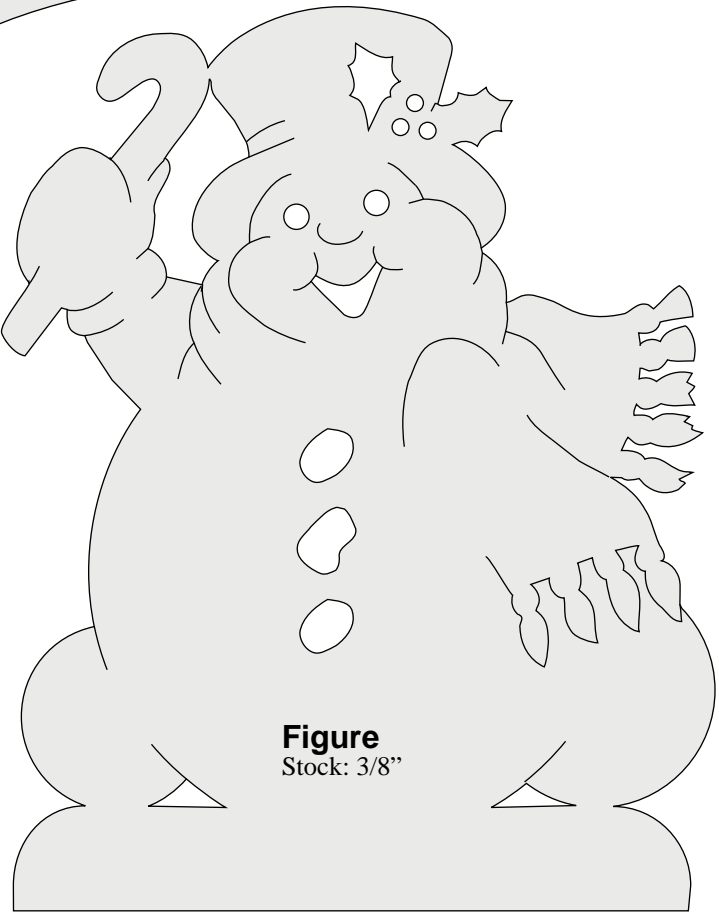 


Figure
Stock: 3/8"

Cathedral Music Box		
Description	item	Qty
Front Wall	A	1
Back Wall	B	1
Wall Anchor	C	4
Side Wall	D	2
Front & Back Base	E	1 each
Base Side	F	2
Front & Back Spire	G	1 each
Spire Side	H	2
Floor	I	1
Bottom Support	J	2
Side Support	K	2
Ceiling	L	1
Turntable	M	1
Turntable Overlay	N	1
Figure	O	1

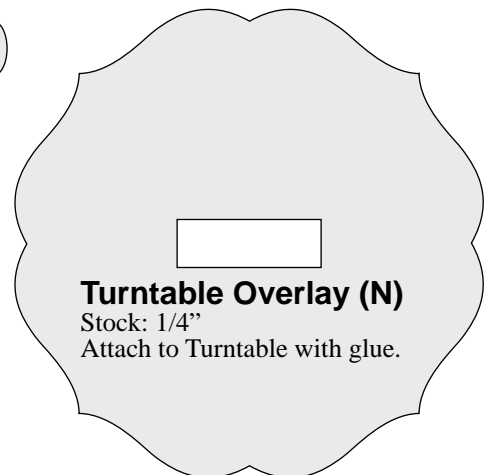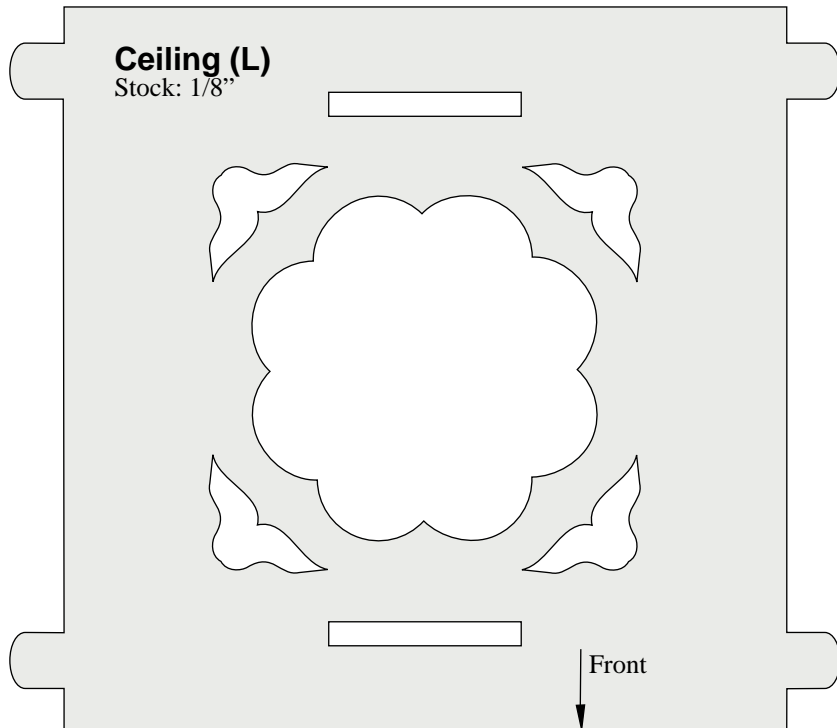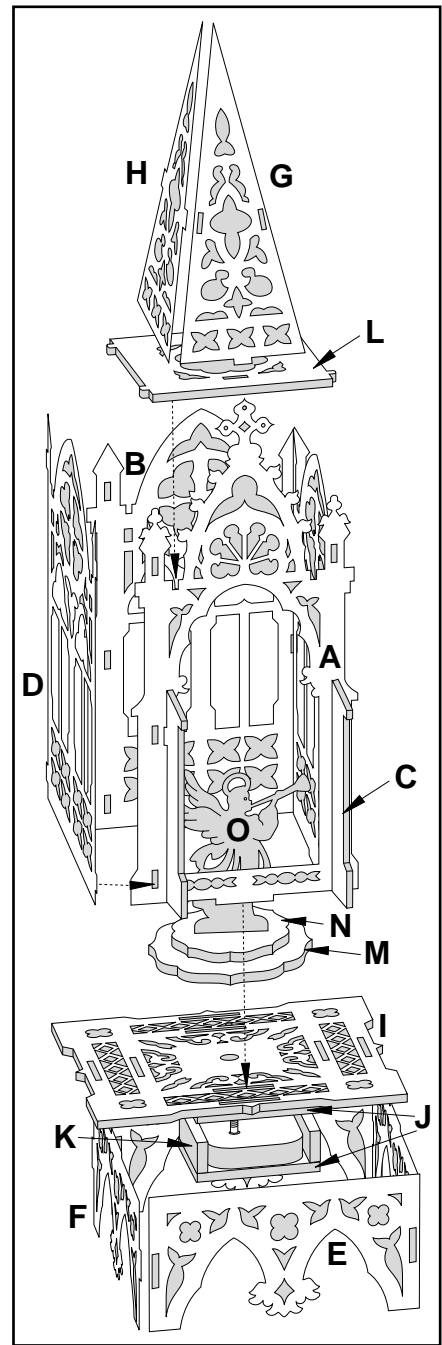 

Project #19

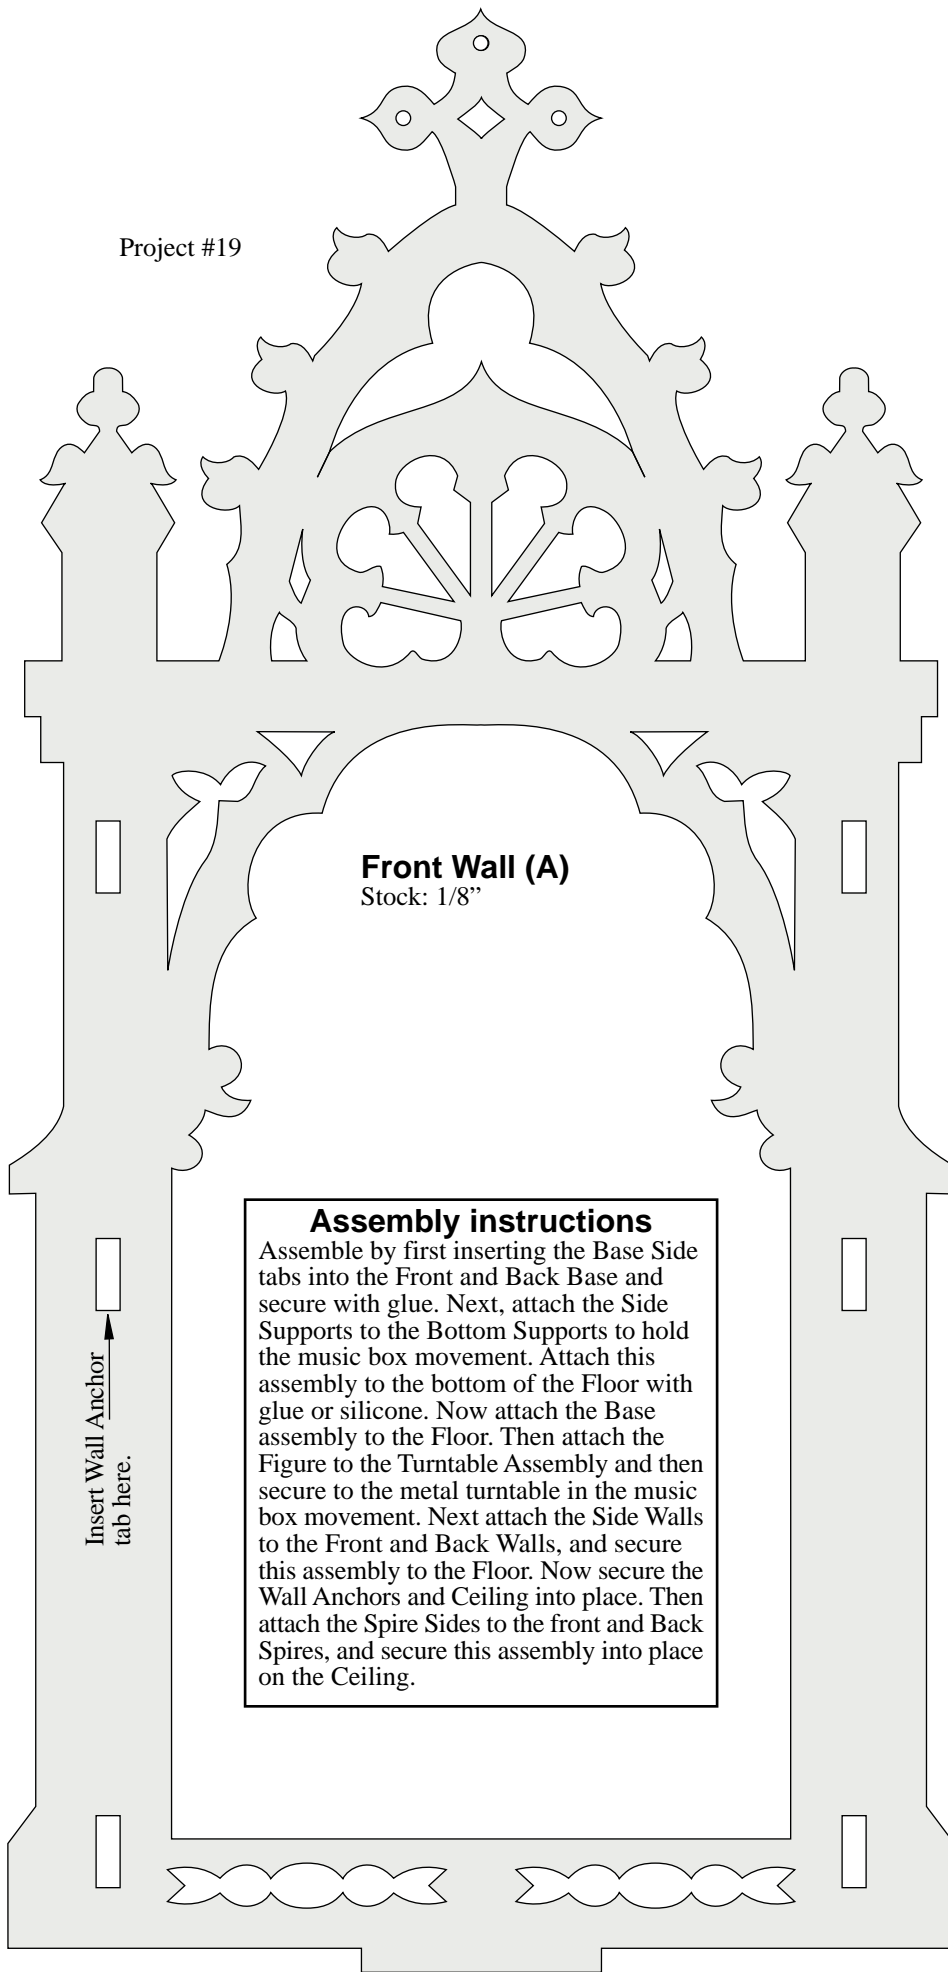 


Front Wall (A)
Stock: 1/8"

Wall Anchor (C)
Stock: 1/8", cut 4

Insert Wall Anchor
tab here.


Assembly instructions

 Assemble by first inserting the Base Side tabs into the Front and Back Base and secure with glue. Next, attach the Side Supports to the Bottom Supports to hold the music box movement. Attach this assembly to the bottom of the Floor with glue or silicone. Now attach the Base assembly to the Floor. Then attach the Figure to the Turntable Assembly and then secure to the metal turntable in the music box movement. Next attach the Side Walls to the Front and Back Walls, and secure this assembly to the Floor. Now secure the Wall Anchors and Ceiling into place. Then attach the Spire Sides to the front and Back Spires, and secure this assembly into place on the Ceiling.

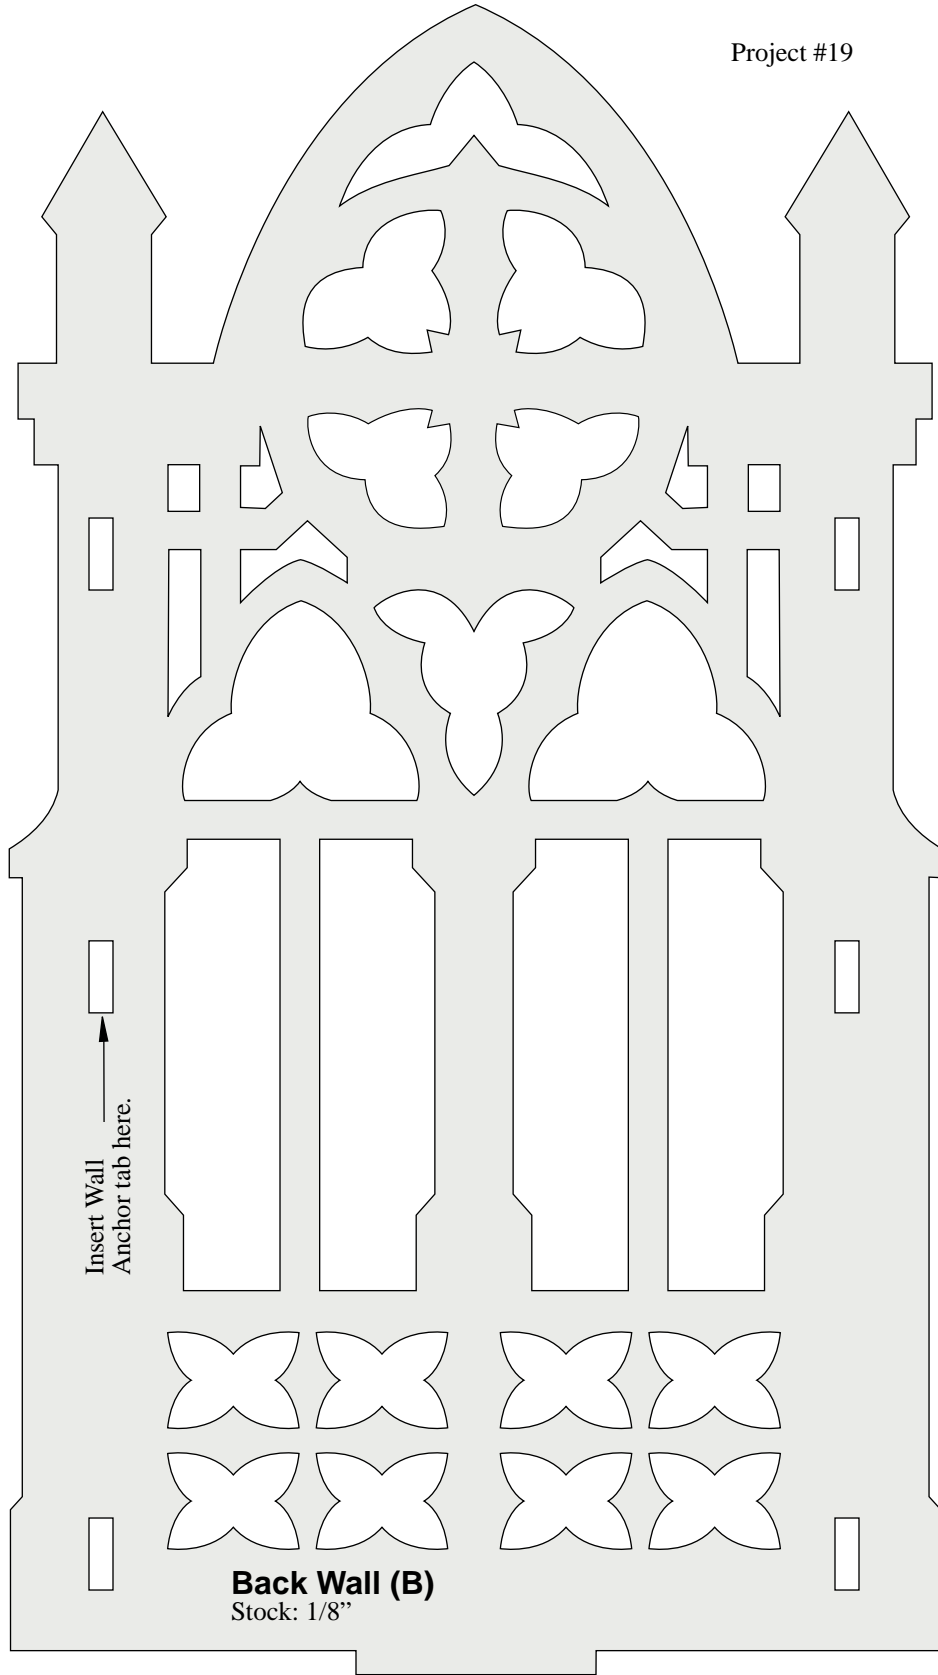


Project #19

 Ceiling tab fits here

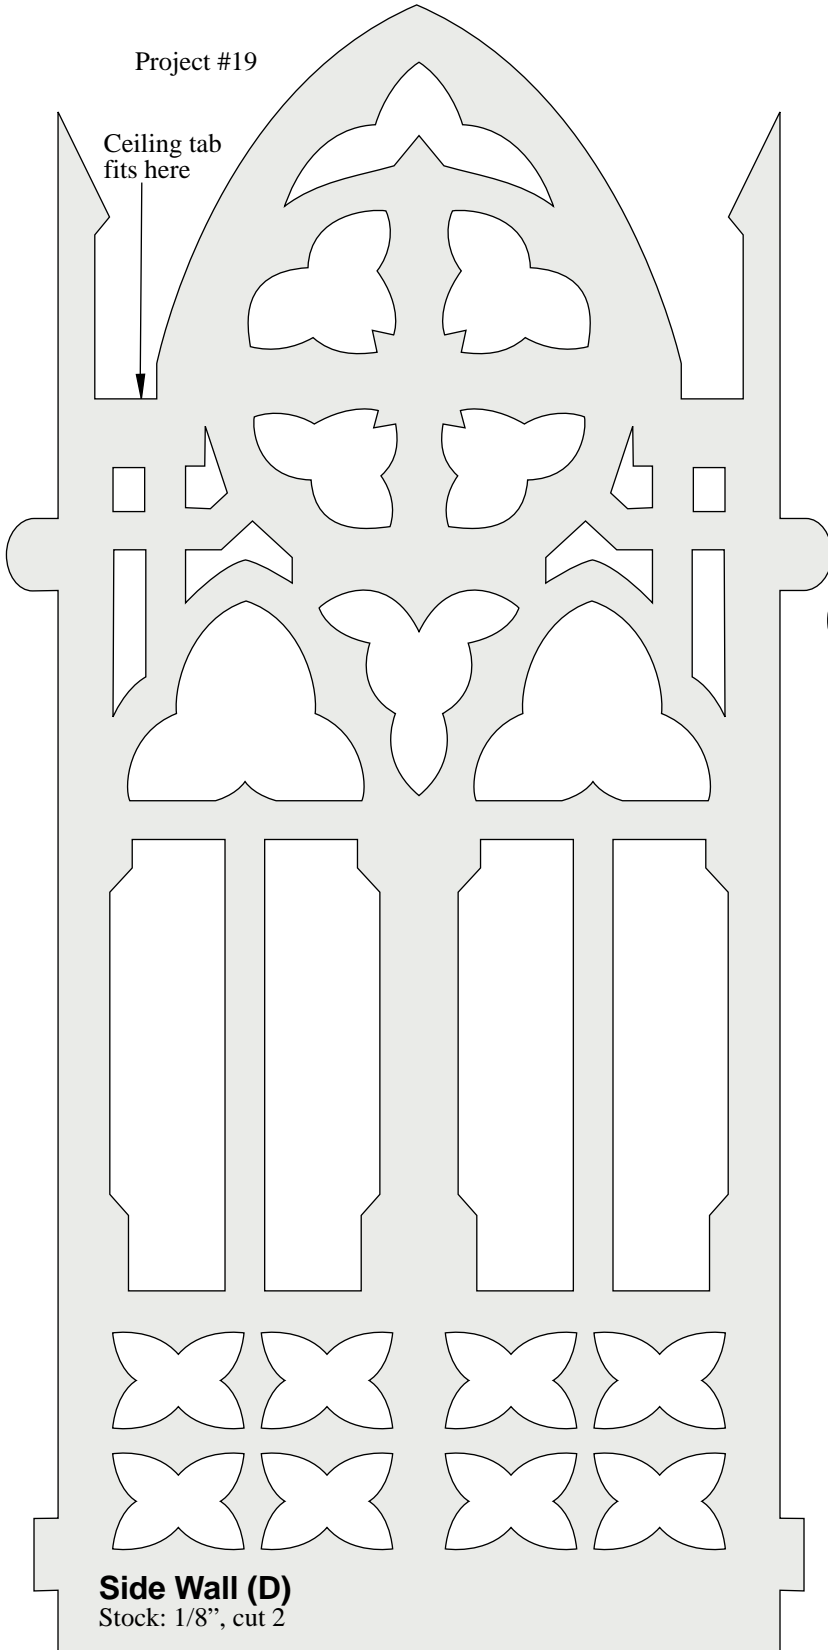

Side Wall (D)
Stock: 1/8", cut 2

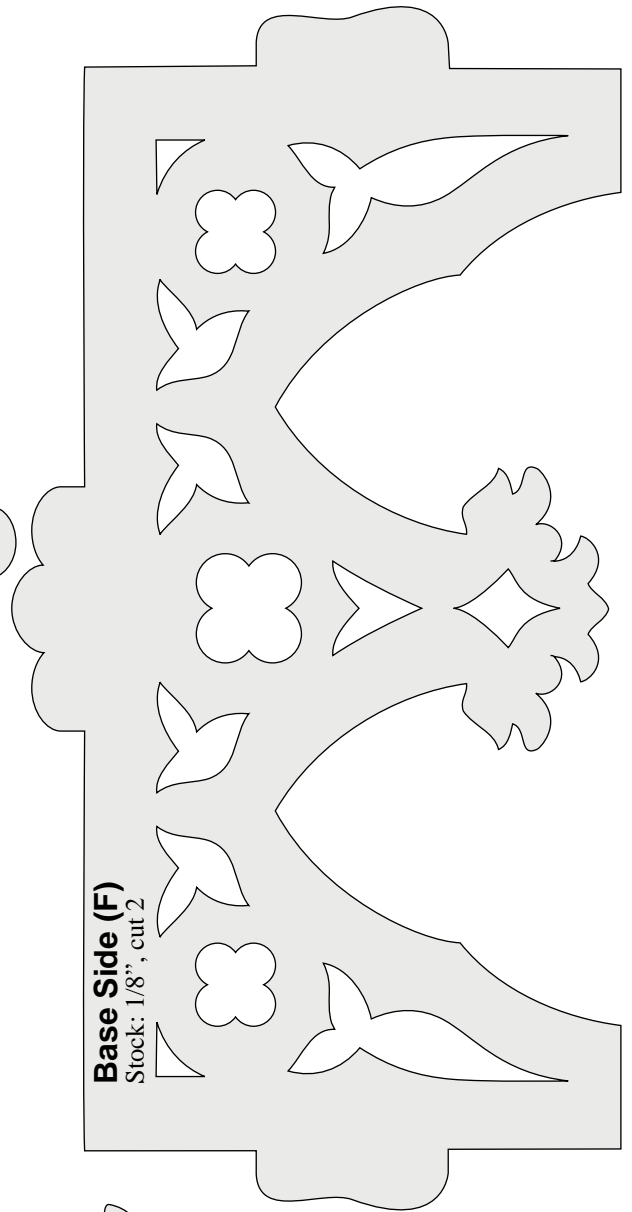 

Base Side (F)
Stock: 1/8", cut 2


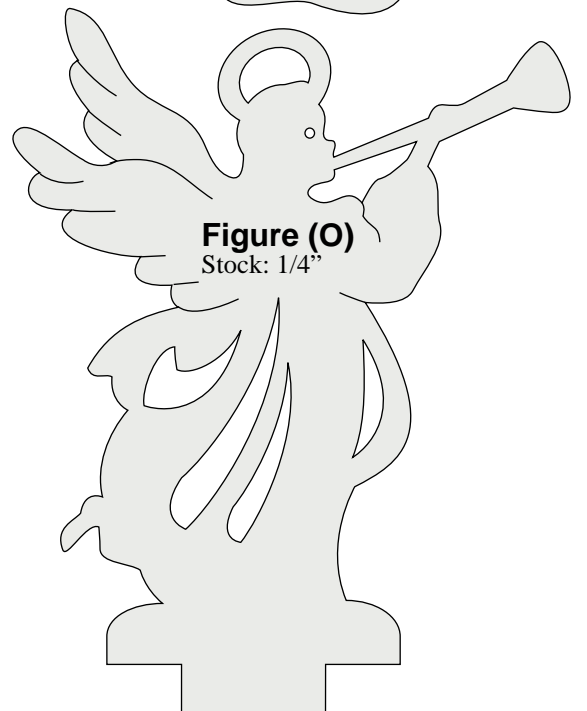 


Figure (O)
Stock: 1/4"


Front & Back Base (E)

 Stock: 1/8", cut 1 each

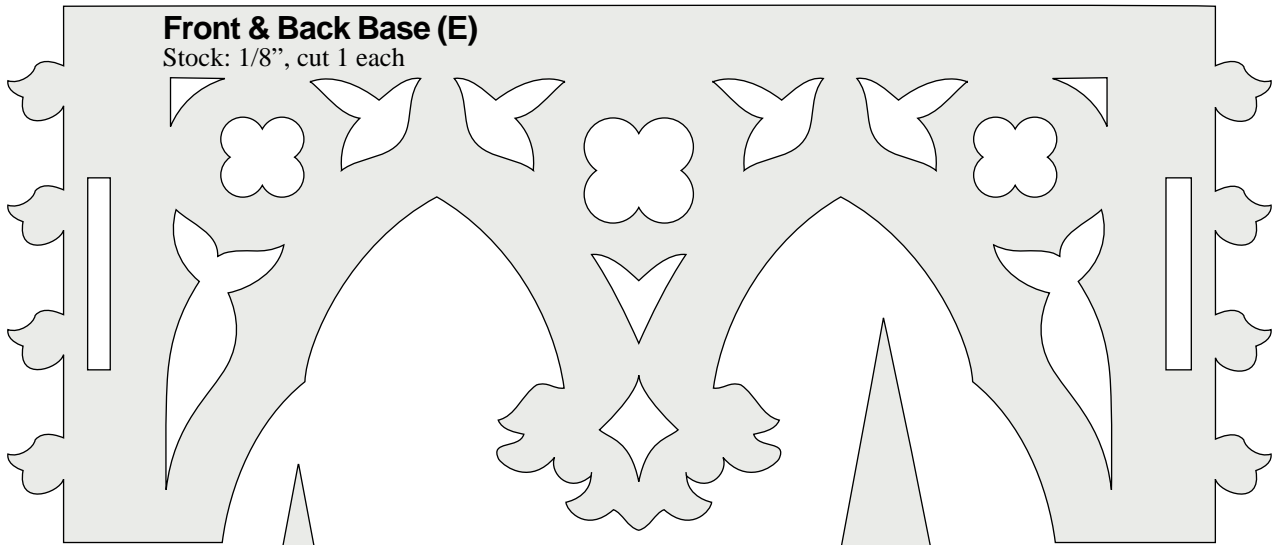


Front & Back Spire (G)

 Stock: 1/8", cut 1 each

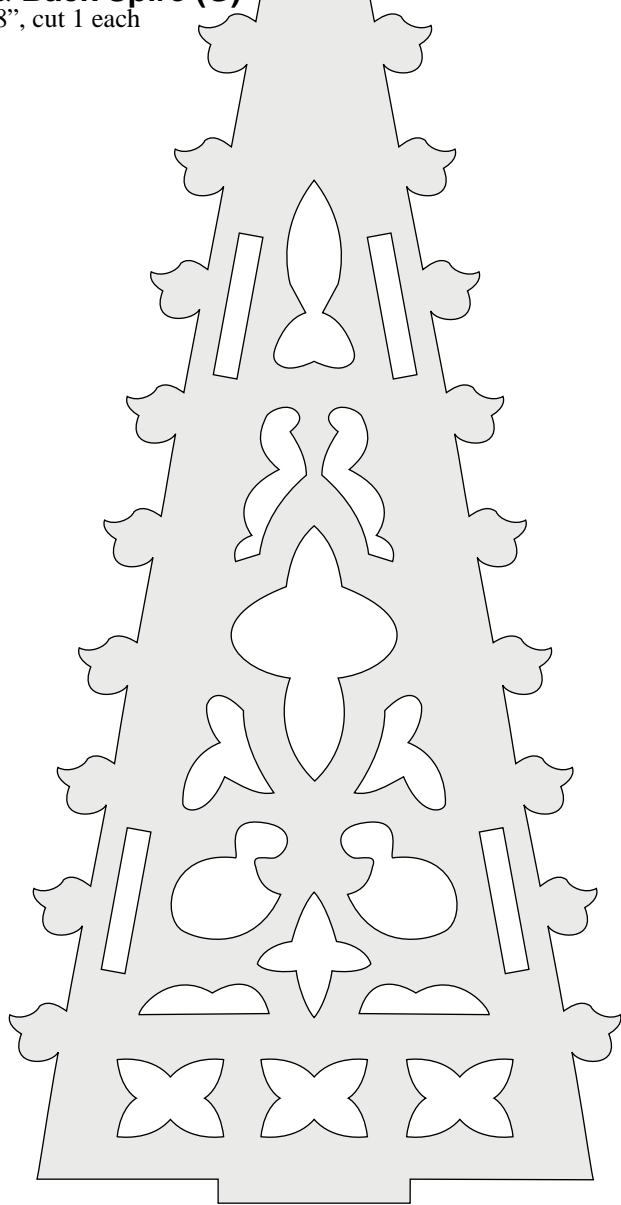


Spire Side (H)

 Stock: 1/8", cut 2

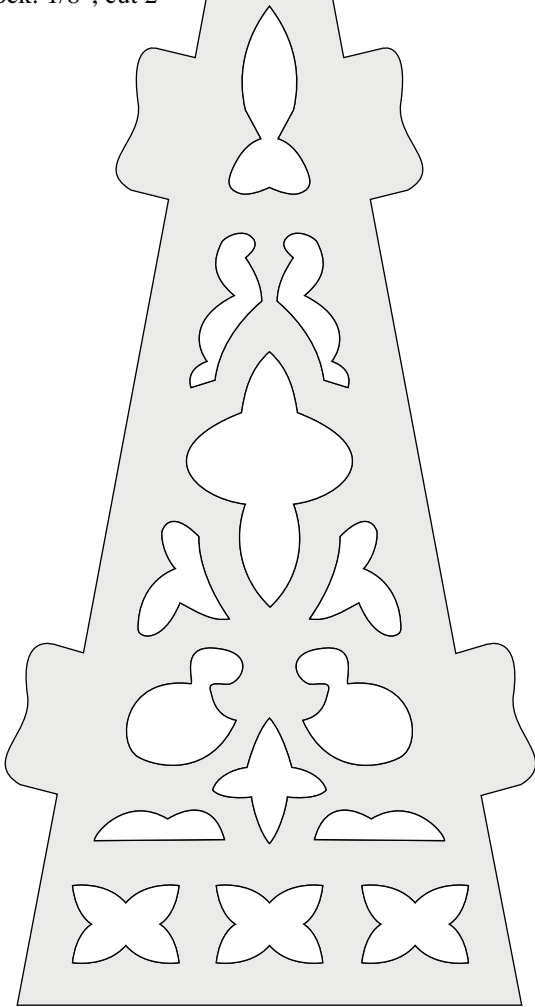


Floor (I)
Stock: 1/4"

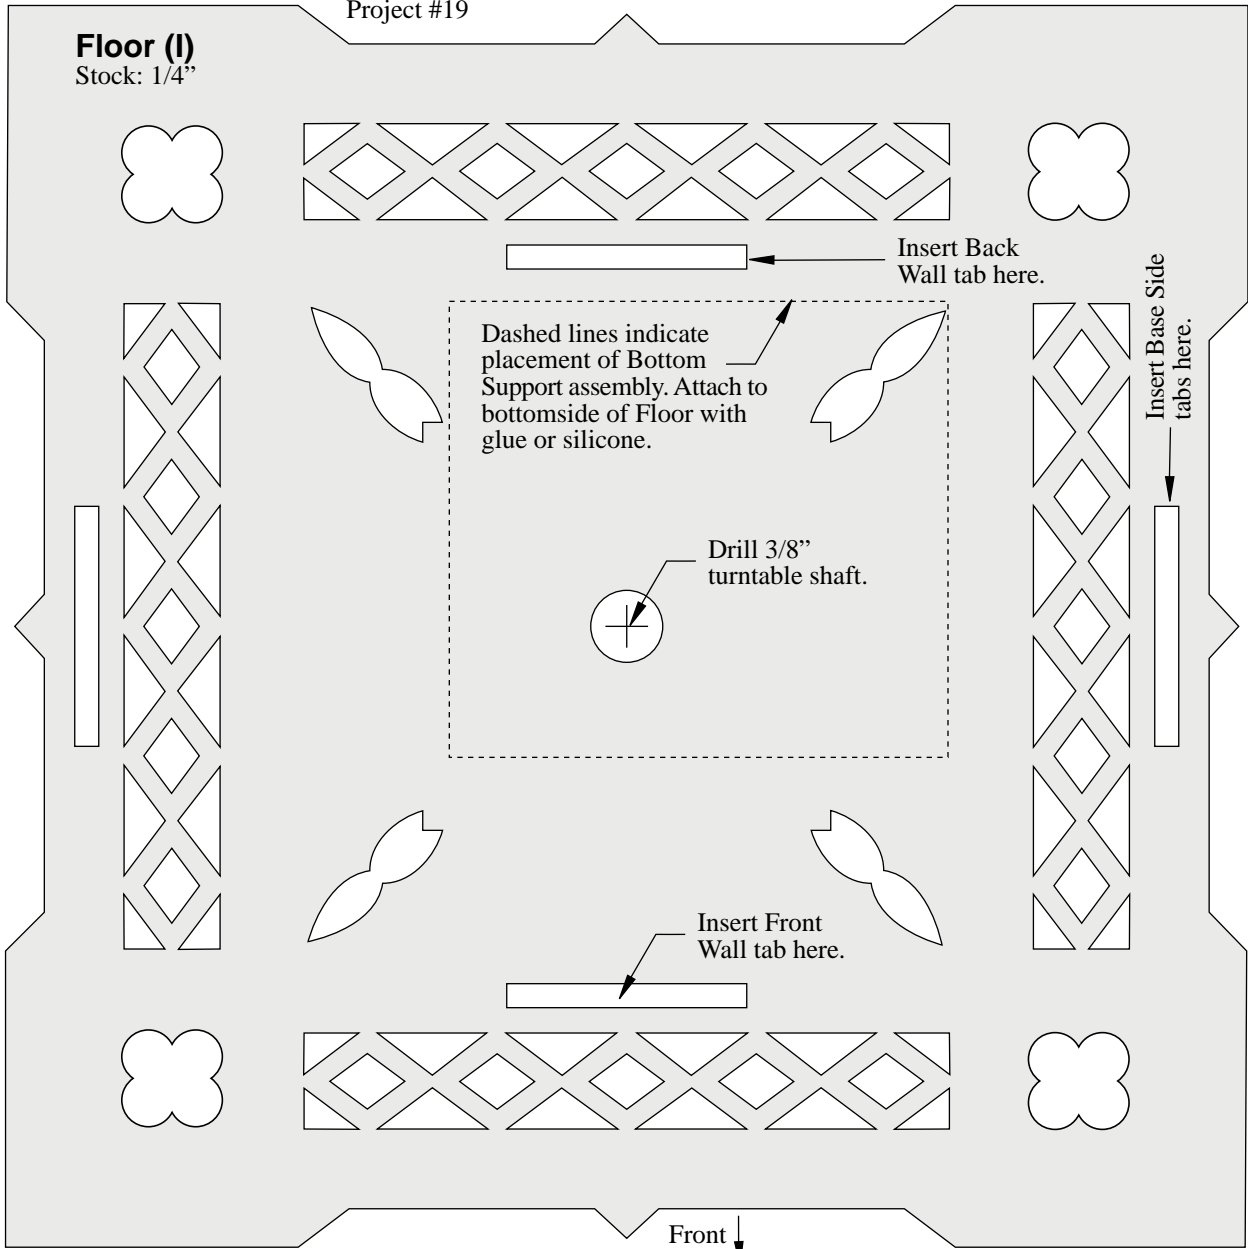 

Turntable


Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.



 
Small dashed line indicates position of Turntable Overlay.

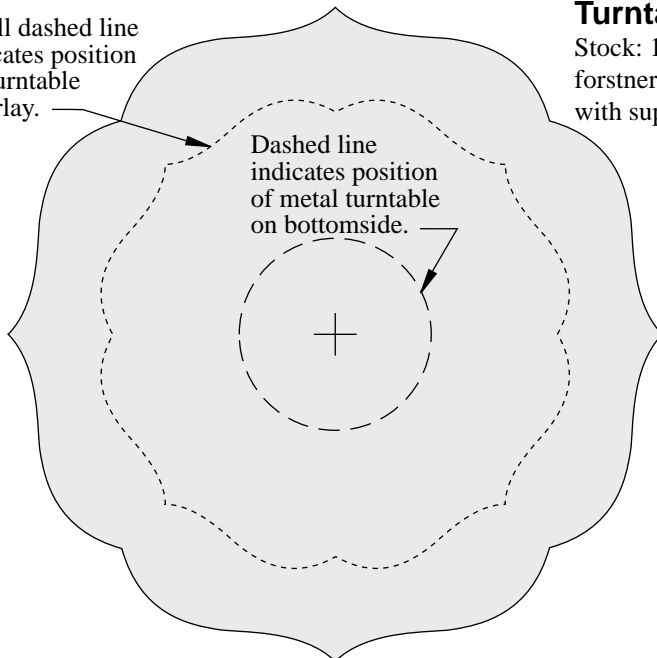


Bottom Support (J)

    Stock: 1/4", cut 2

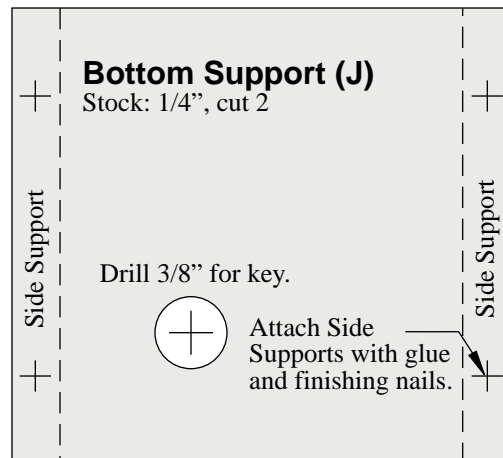

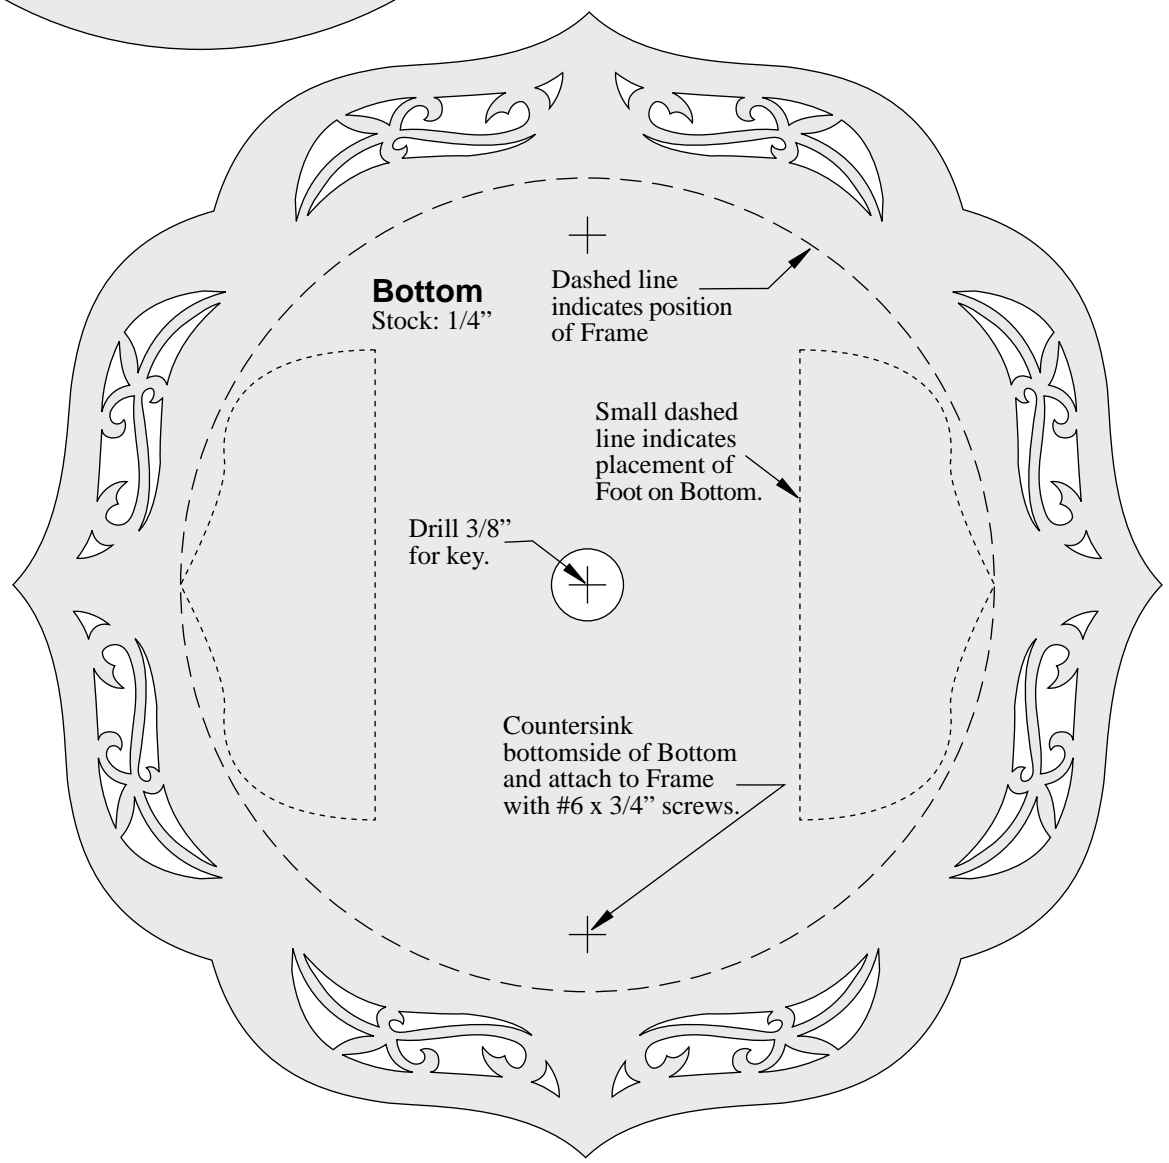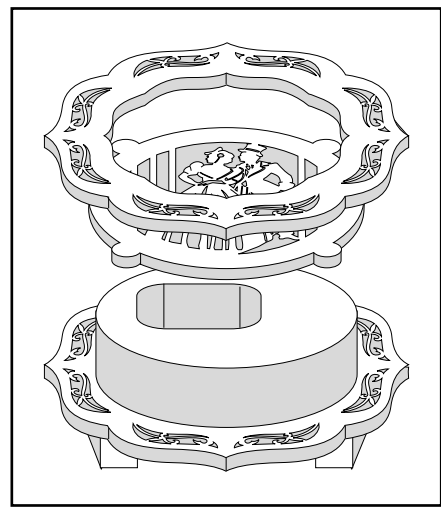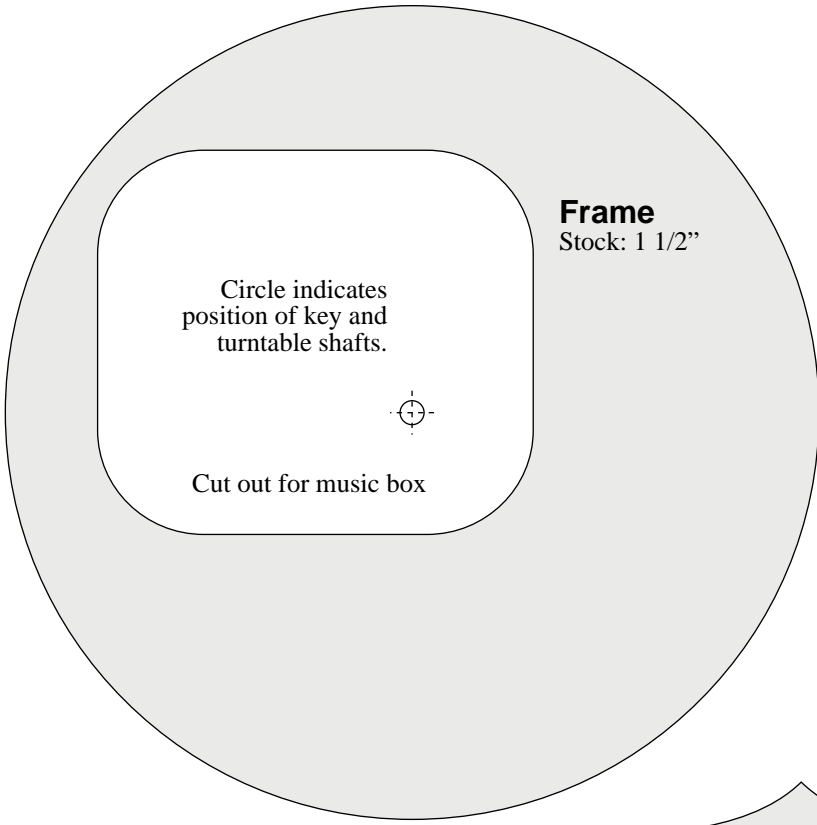


Project #20

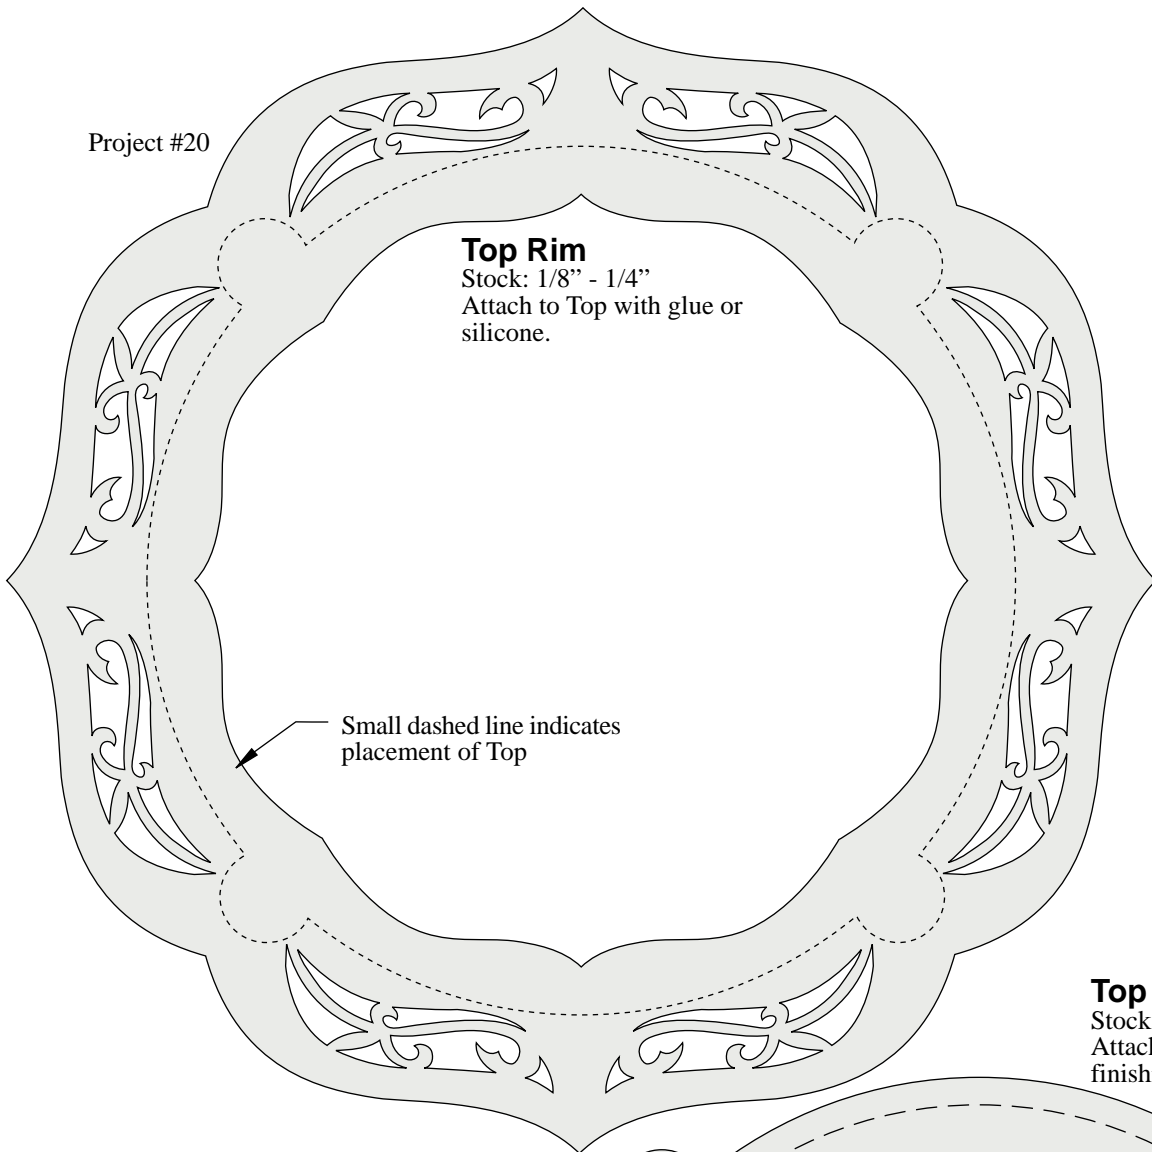 


Top Rim
Stock: 1/8" - 1/4"
Attach to Top with glue or silicone.

Small dashed line indicates placement of Top

 Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.



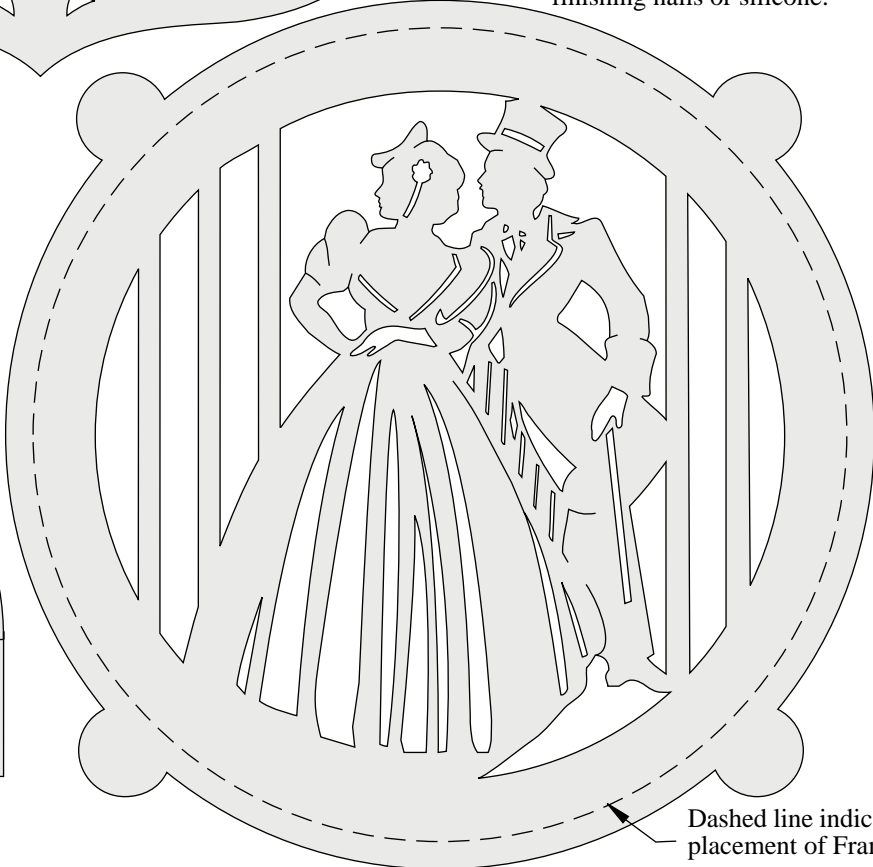


 Dashed line indicates placement of Frame

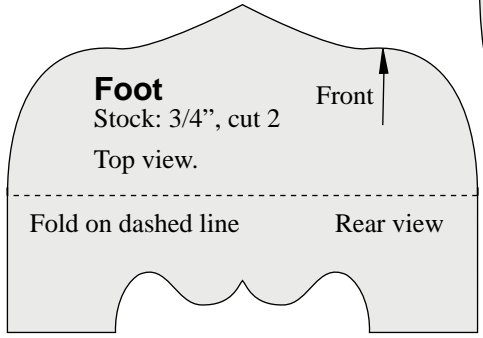


Foot
Stock: 3/4", cut 2
Top view.

   Fold on dashed line Rear view

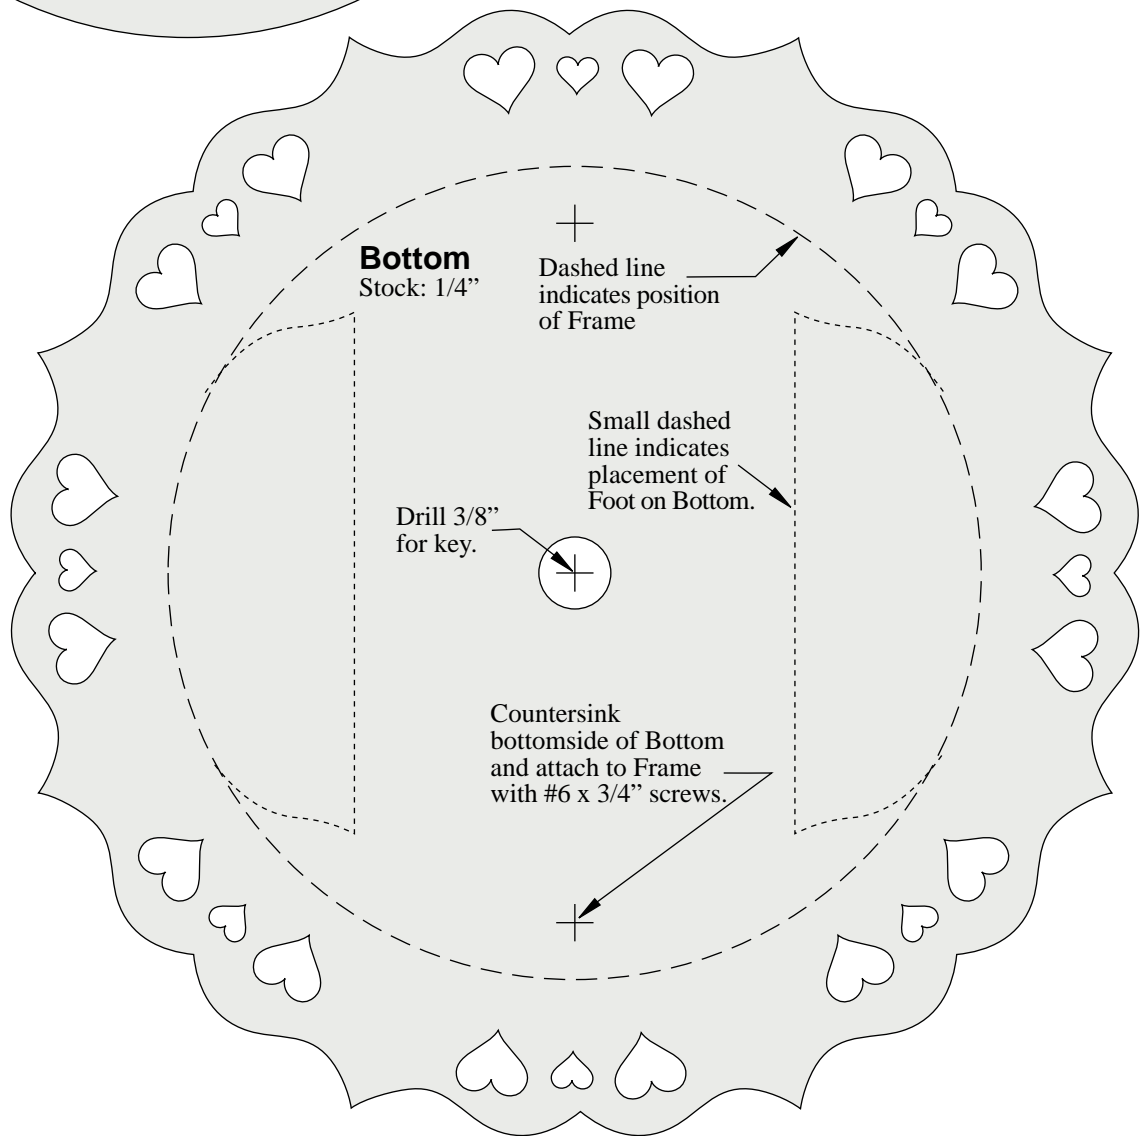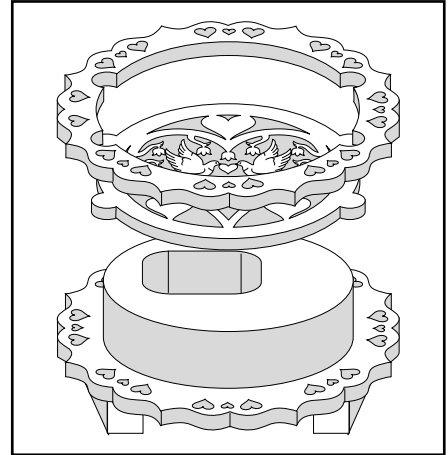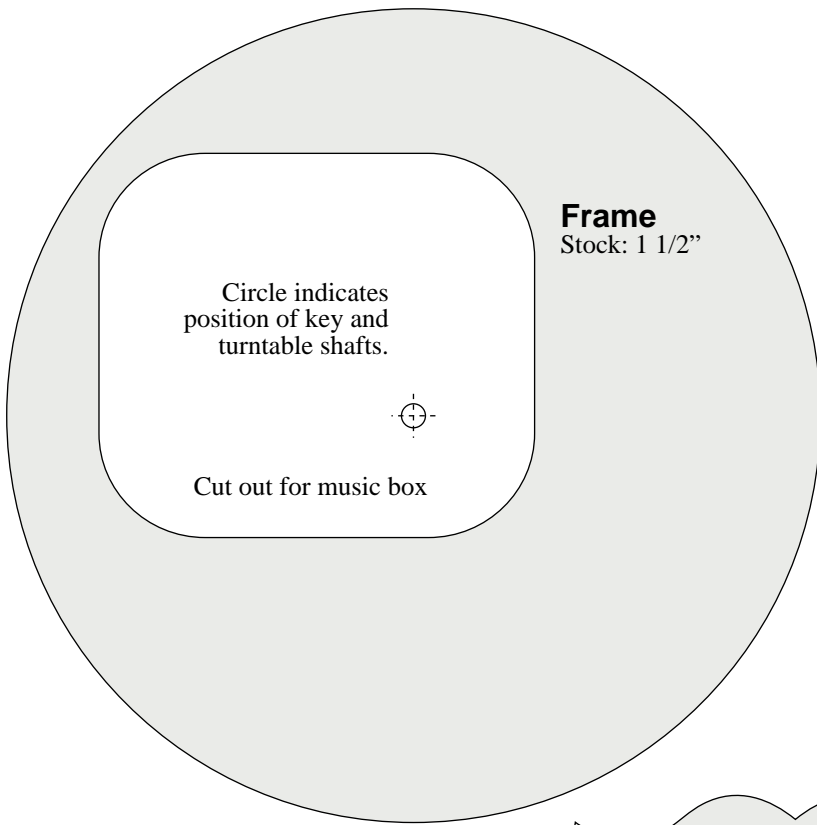

Project #21

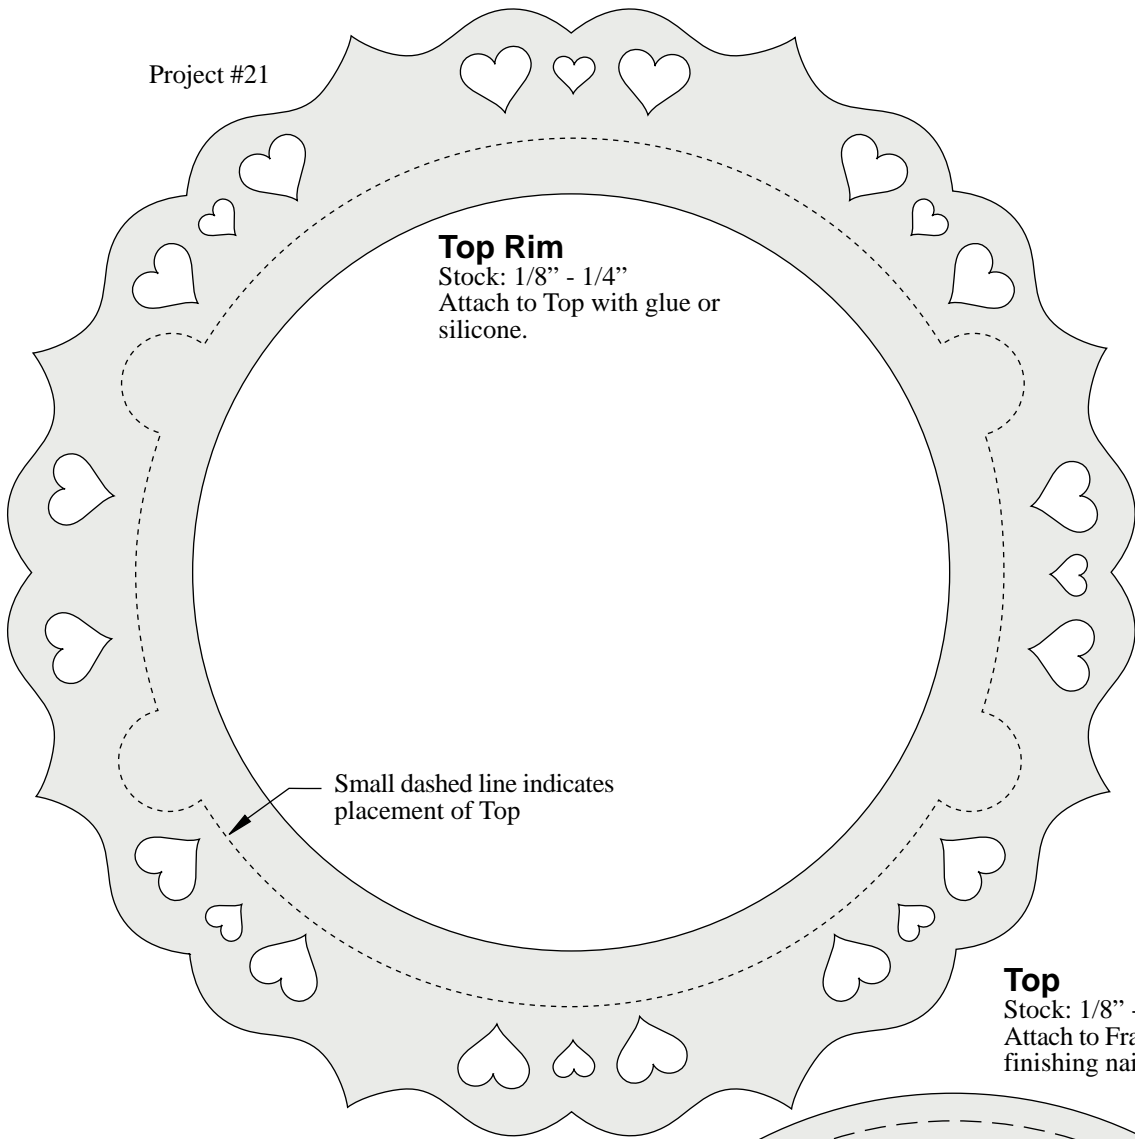 

Top Rim

Stock: 1/8" - 1/4"

 
Attach to Top with glue or silicone.

Small dashed line indicates placement of Top

Top

Stock: 1/8" - 1/4"

Attach to Frame with glue and finishing nails or silicone.

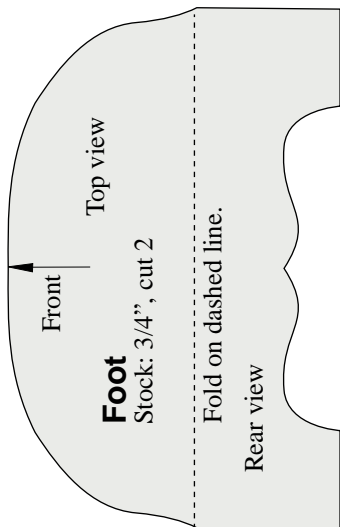

Top view

 
Front

Foot




Stock: 3/4", cut 2

Fold on dashed line.


Rear view

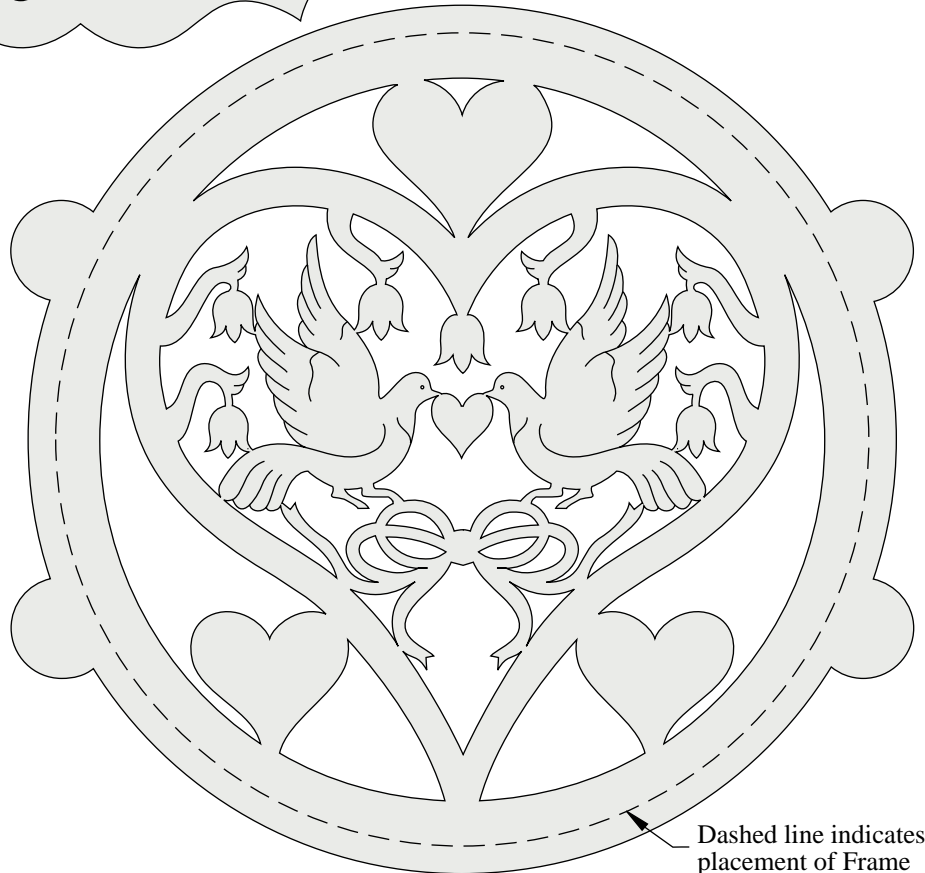

   Dashed line indicates placement of Frame

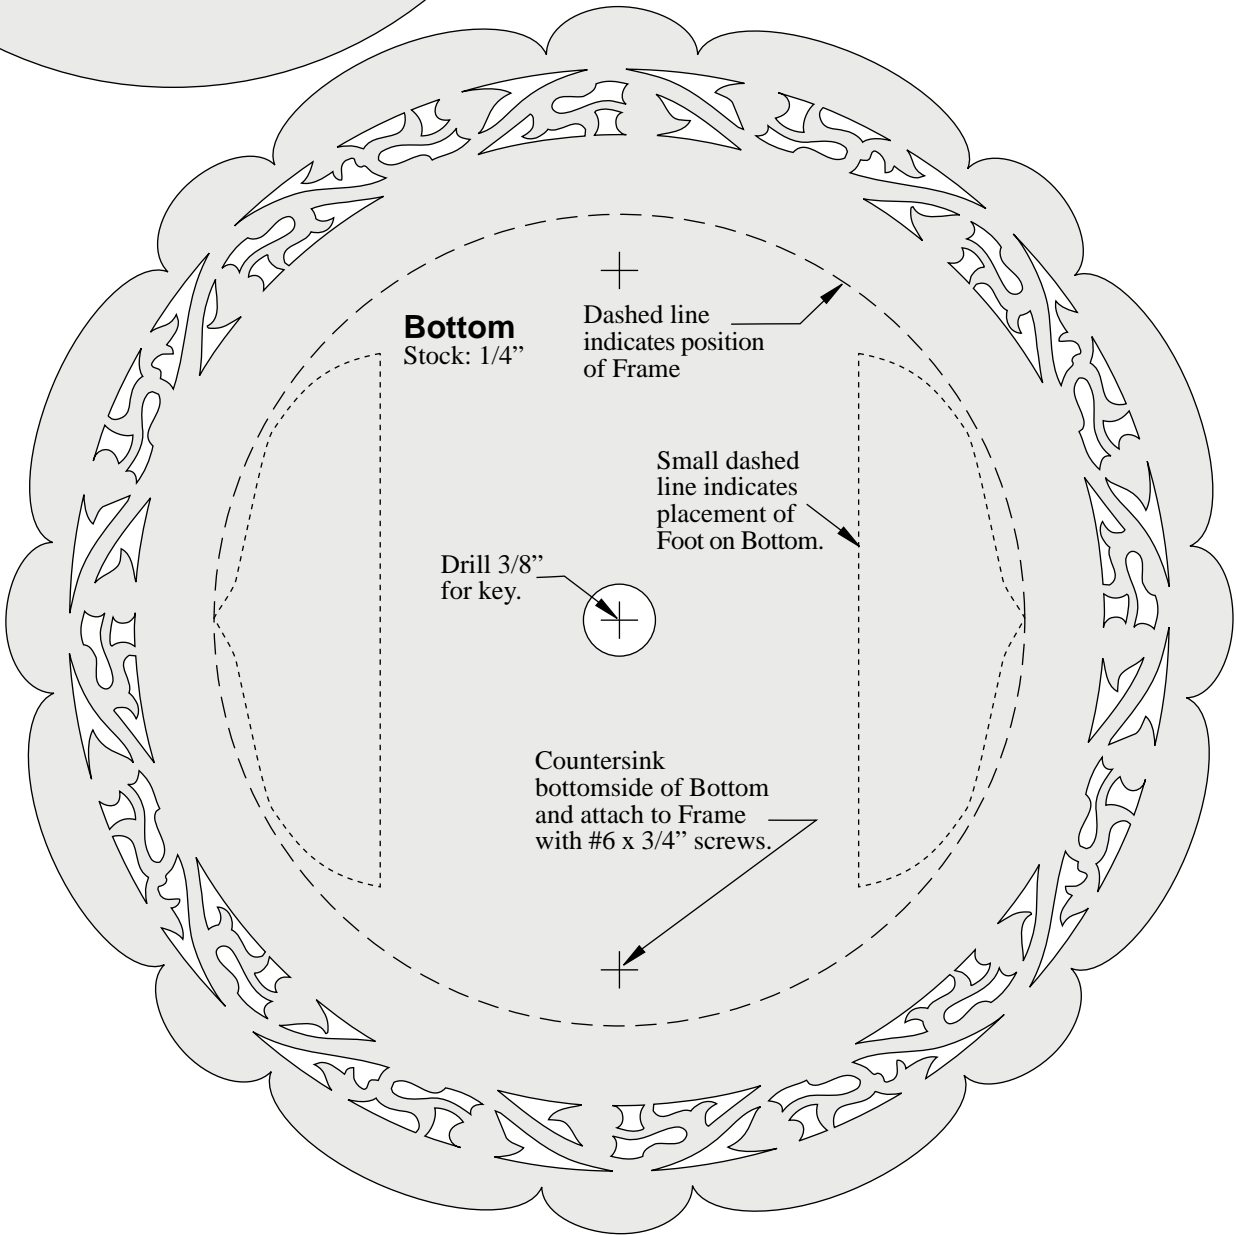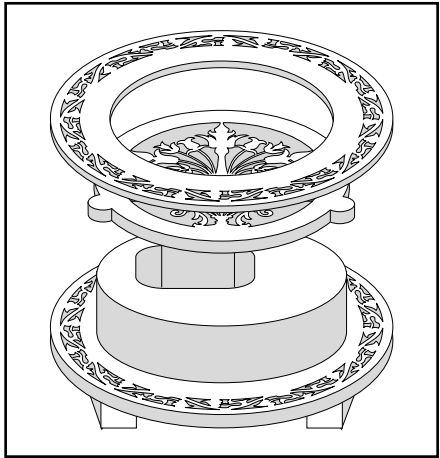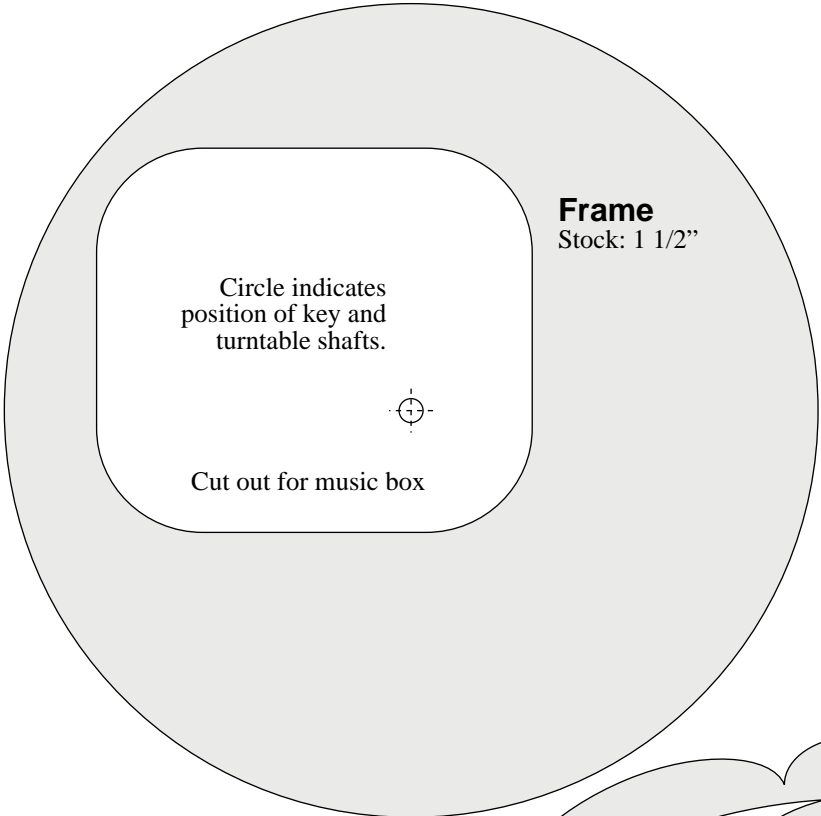


Project #22

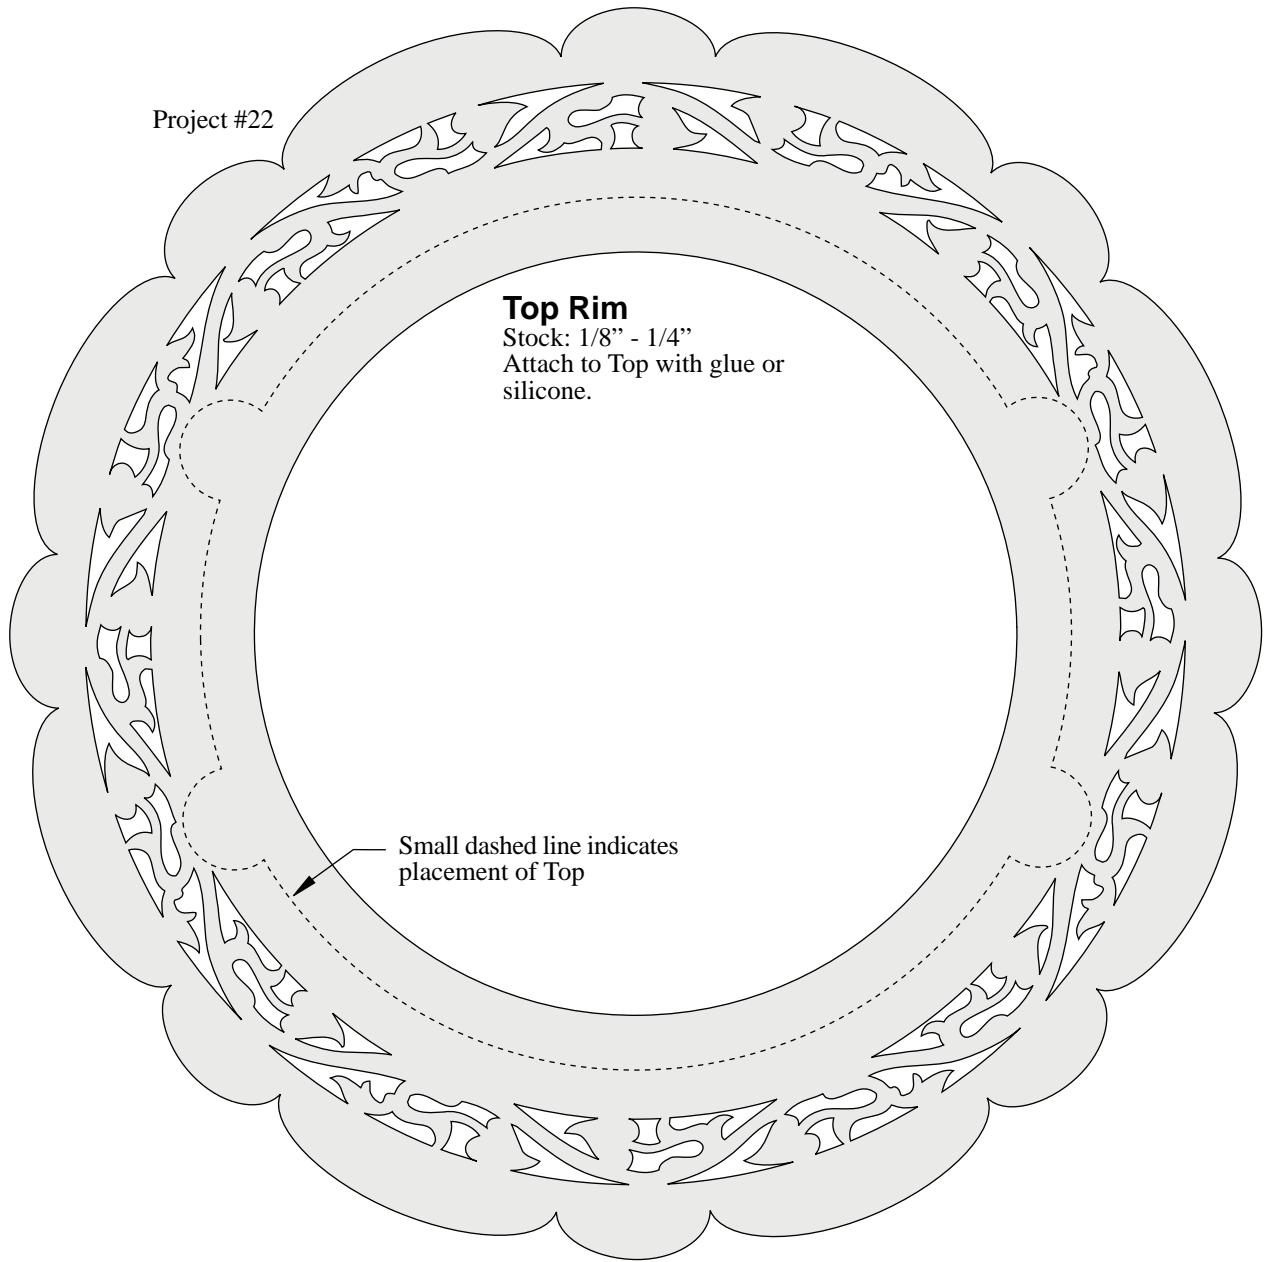 


Top Rim




Stock: 1/8" - 1/4"
Attach to Top with glue or
silicone.

 
Small dashed line indicates
placement of Top

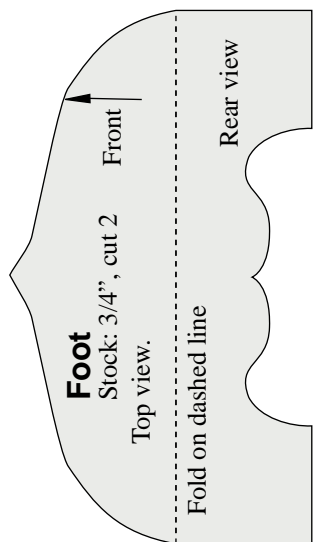

    
 
Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.



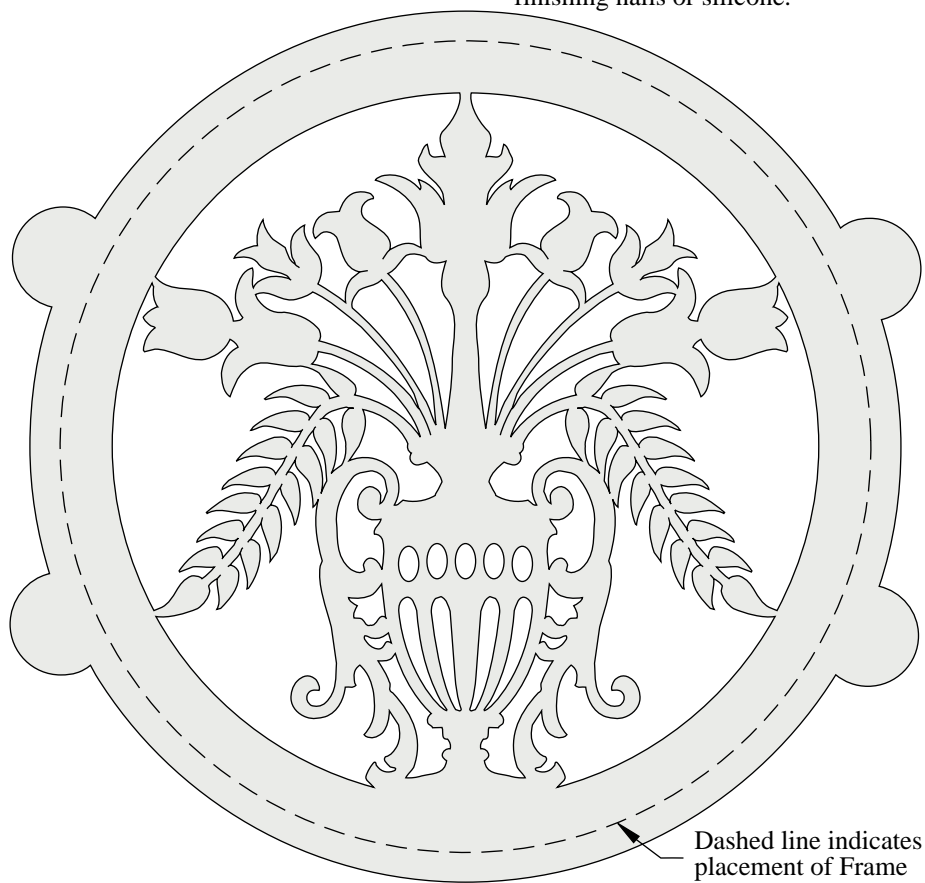


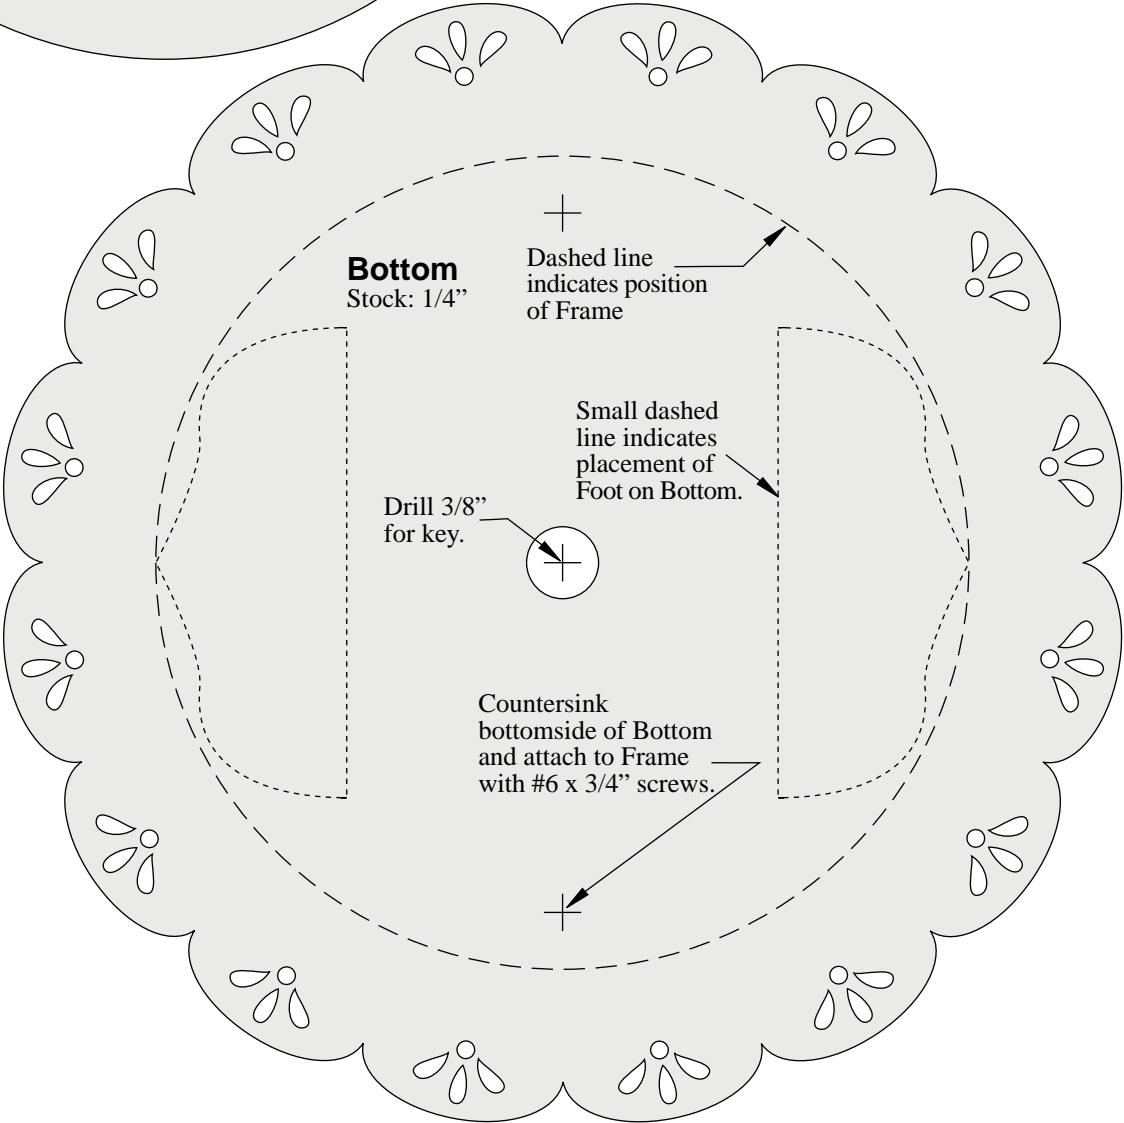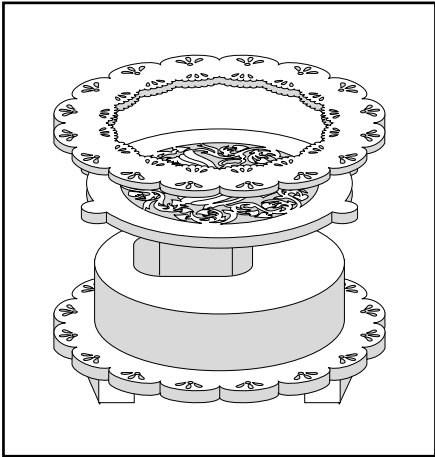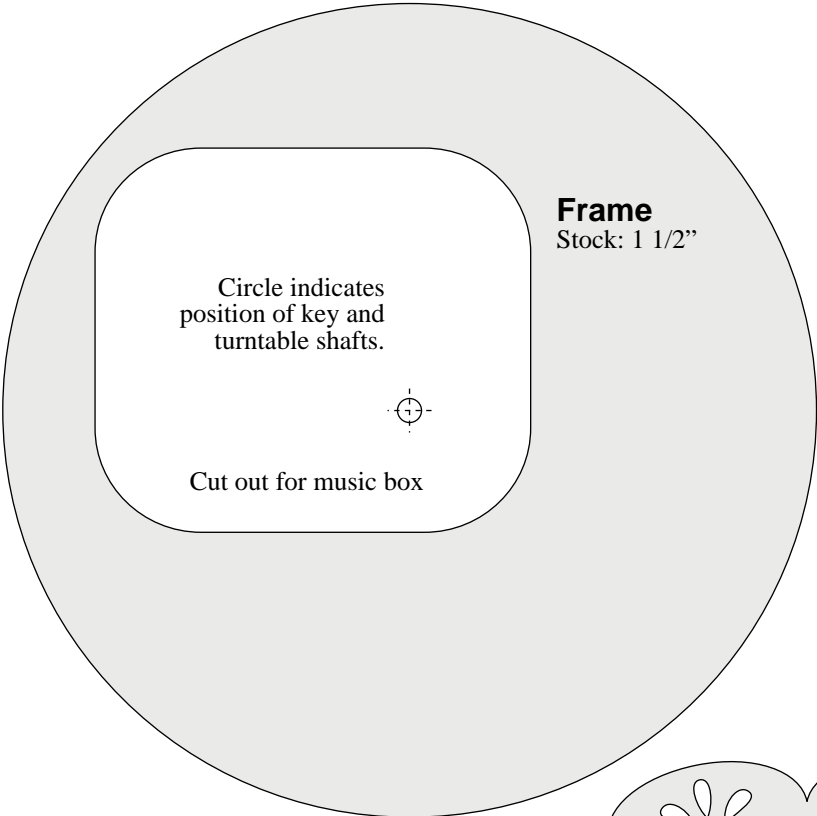

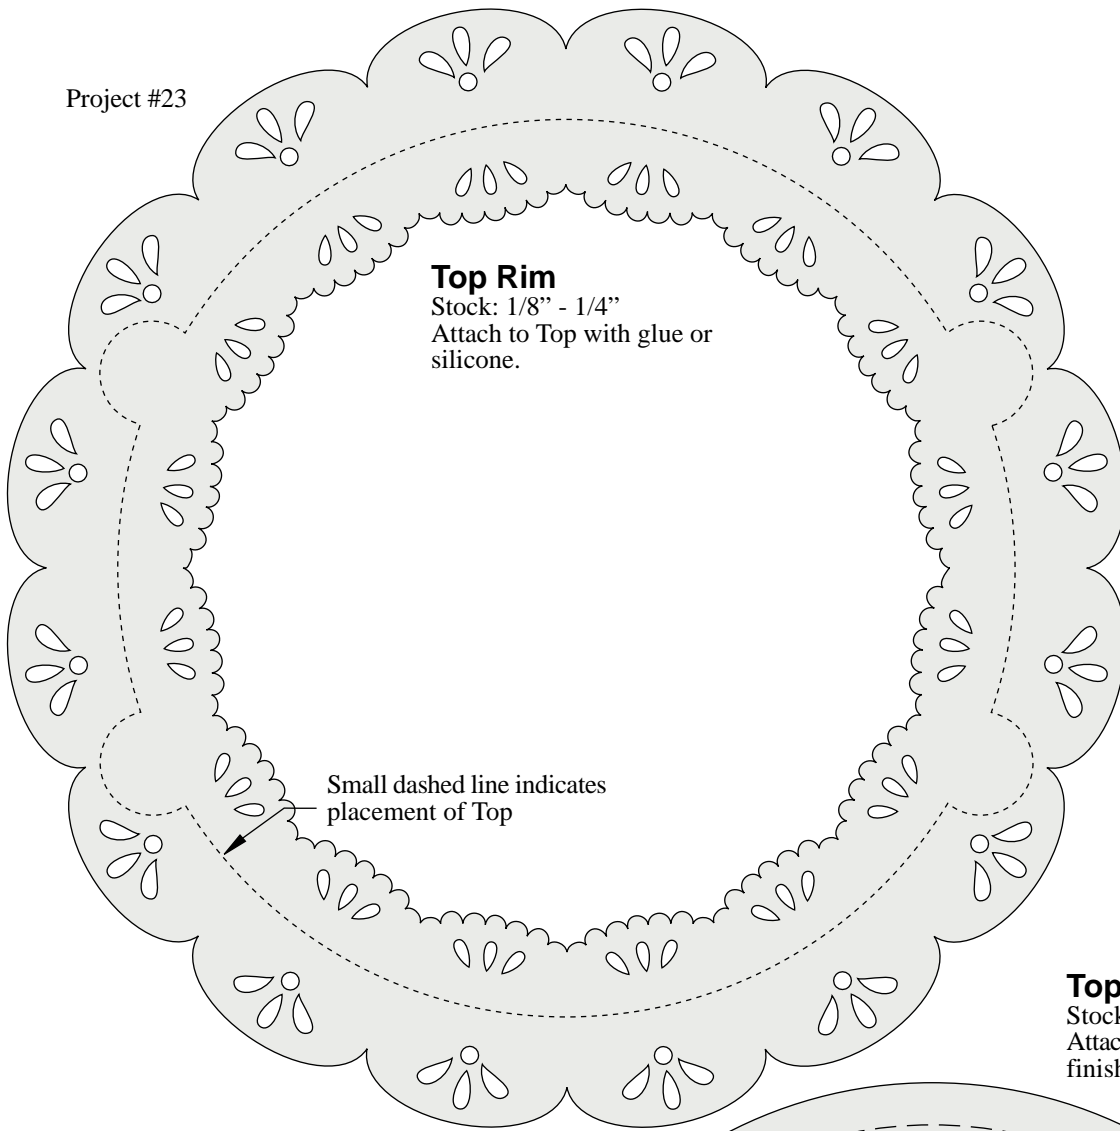

     Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.

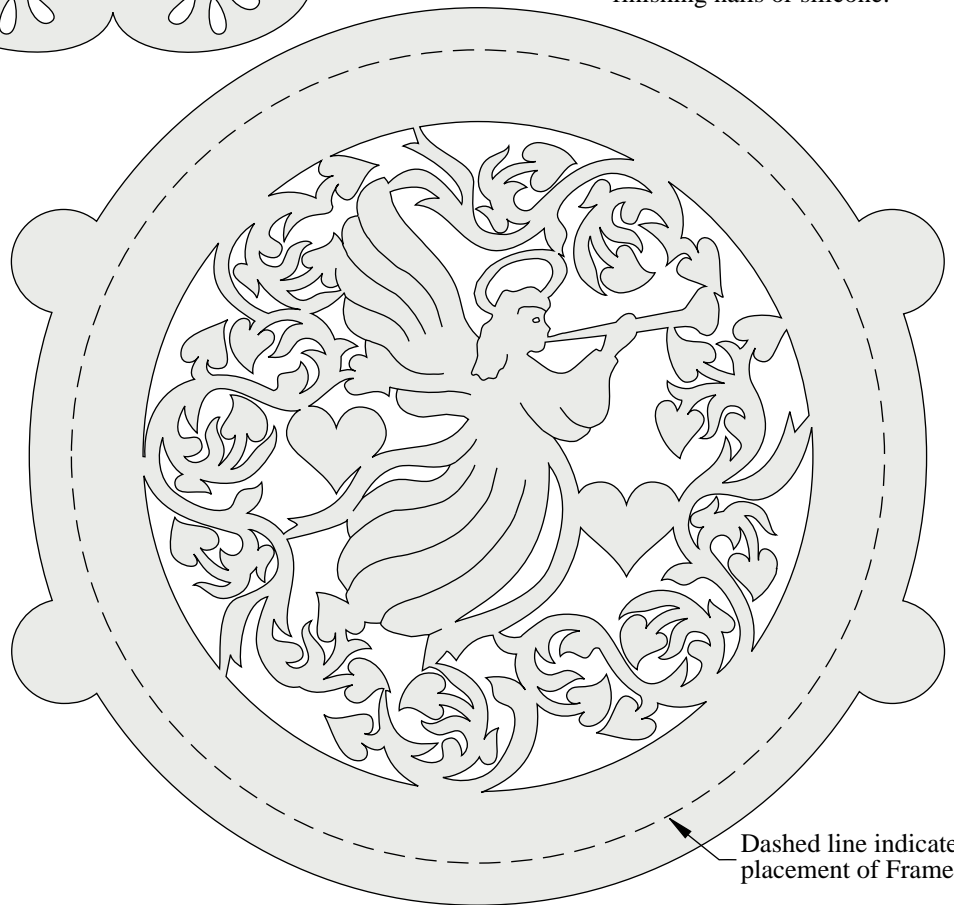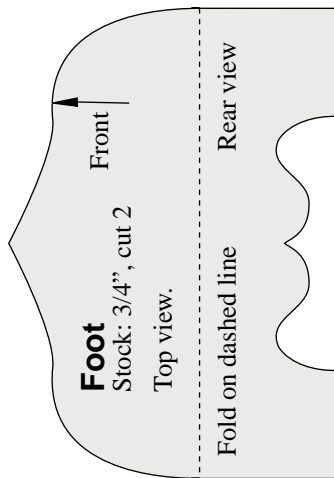


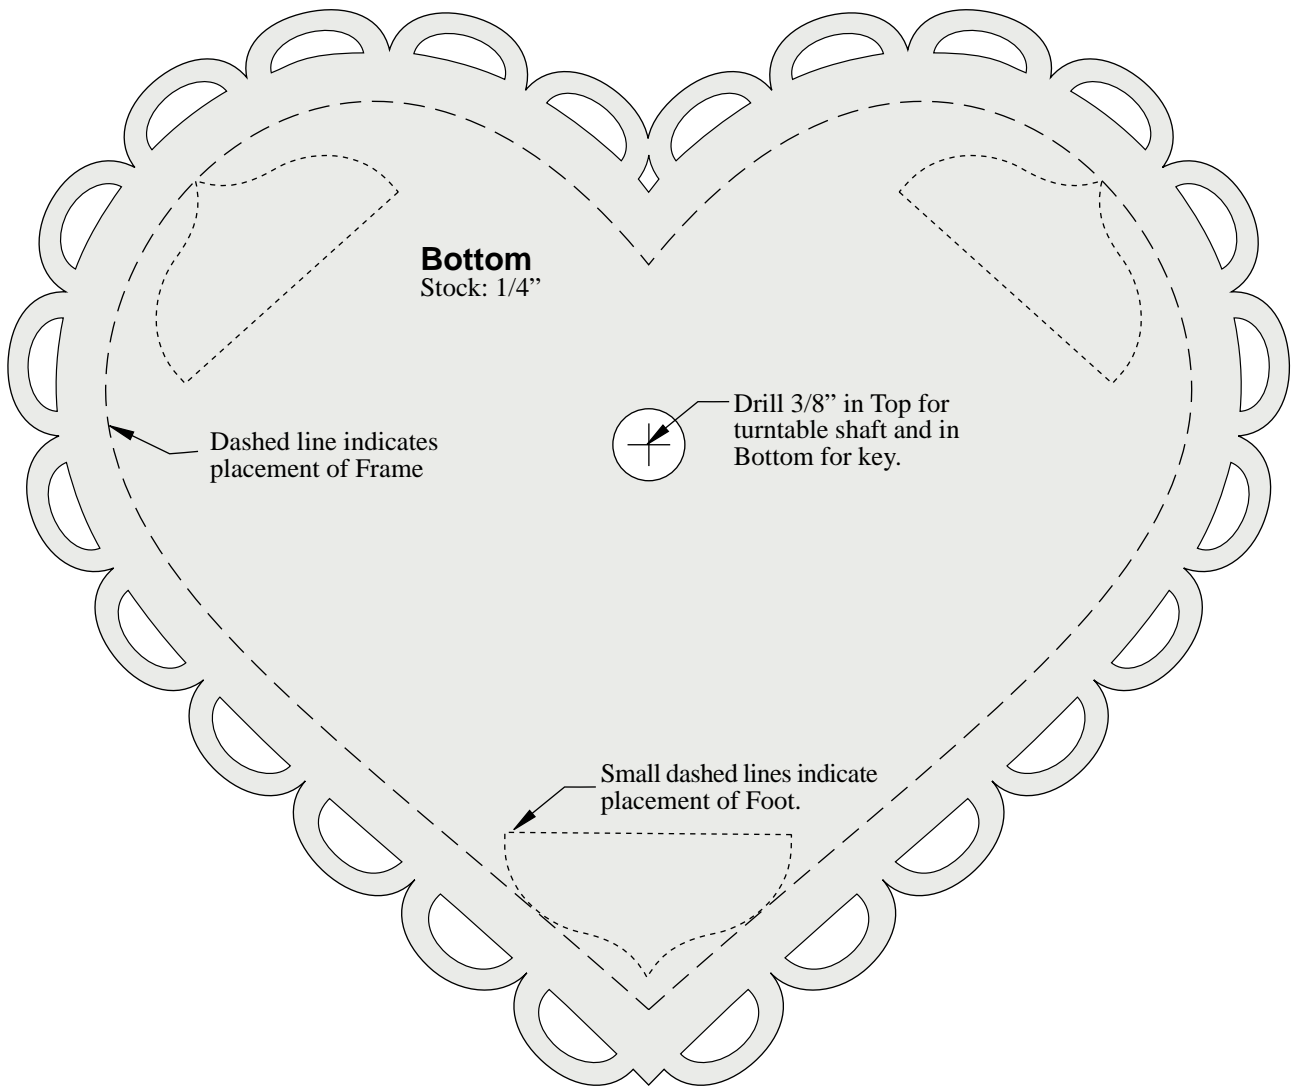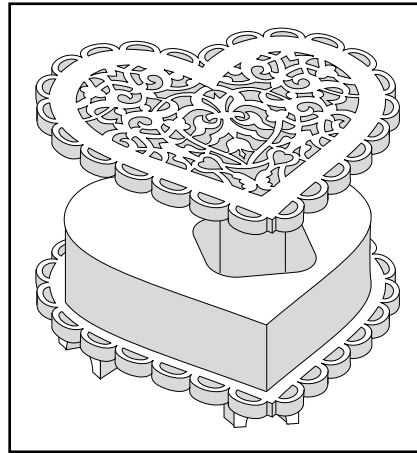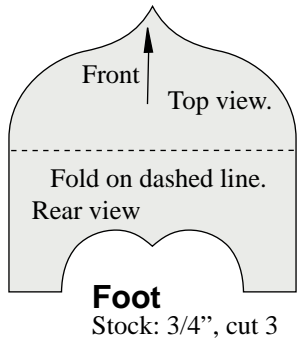

Project #24

Frame

 Stock: 1 1/2"

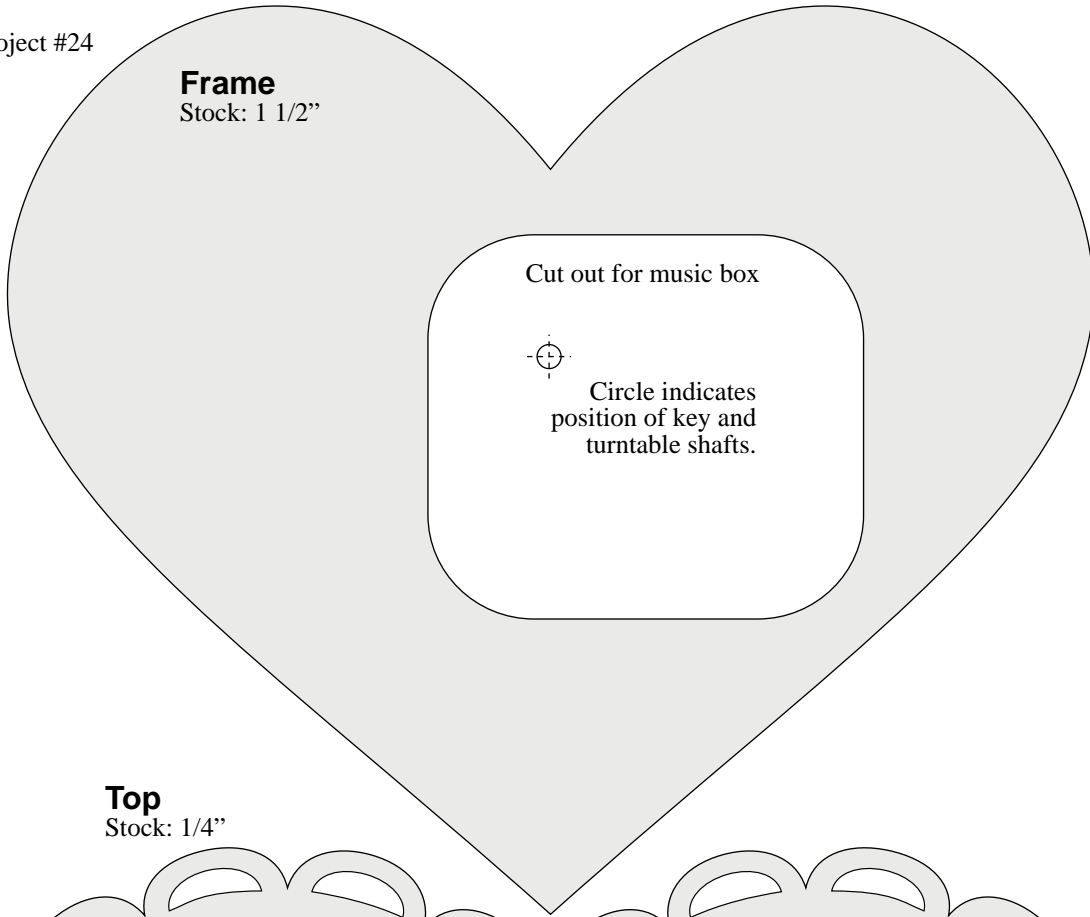


Cut out for music box






Circle indicates
position of key and
turntable shafts.

Top

 Stock: 1/4"

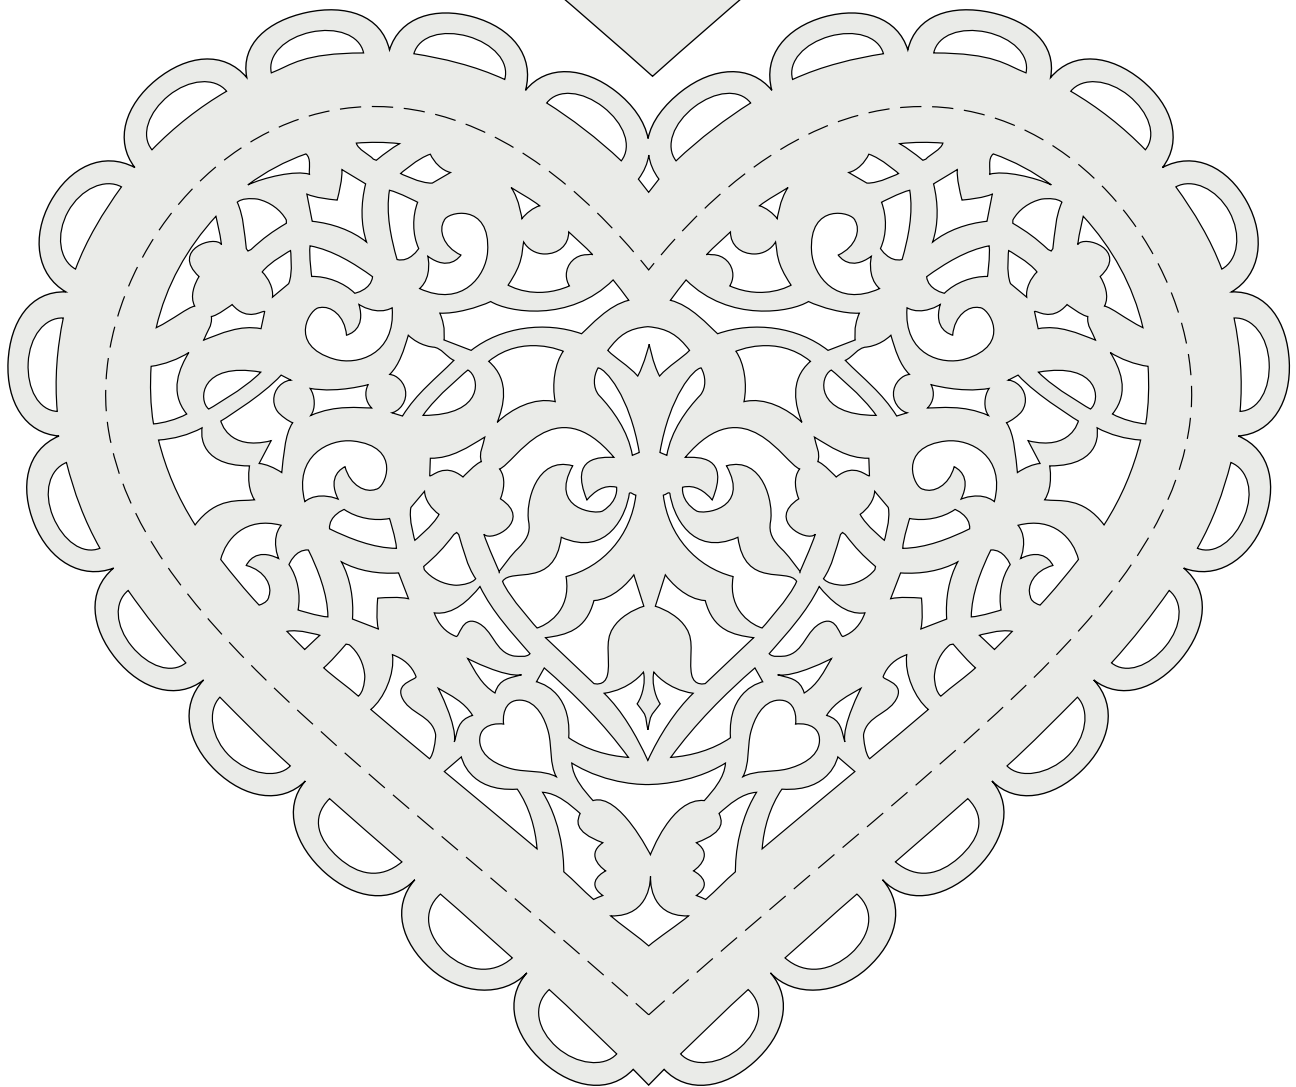


Project #25

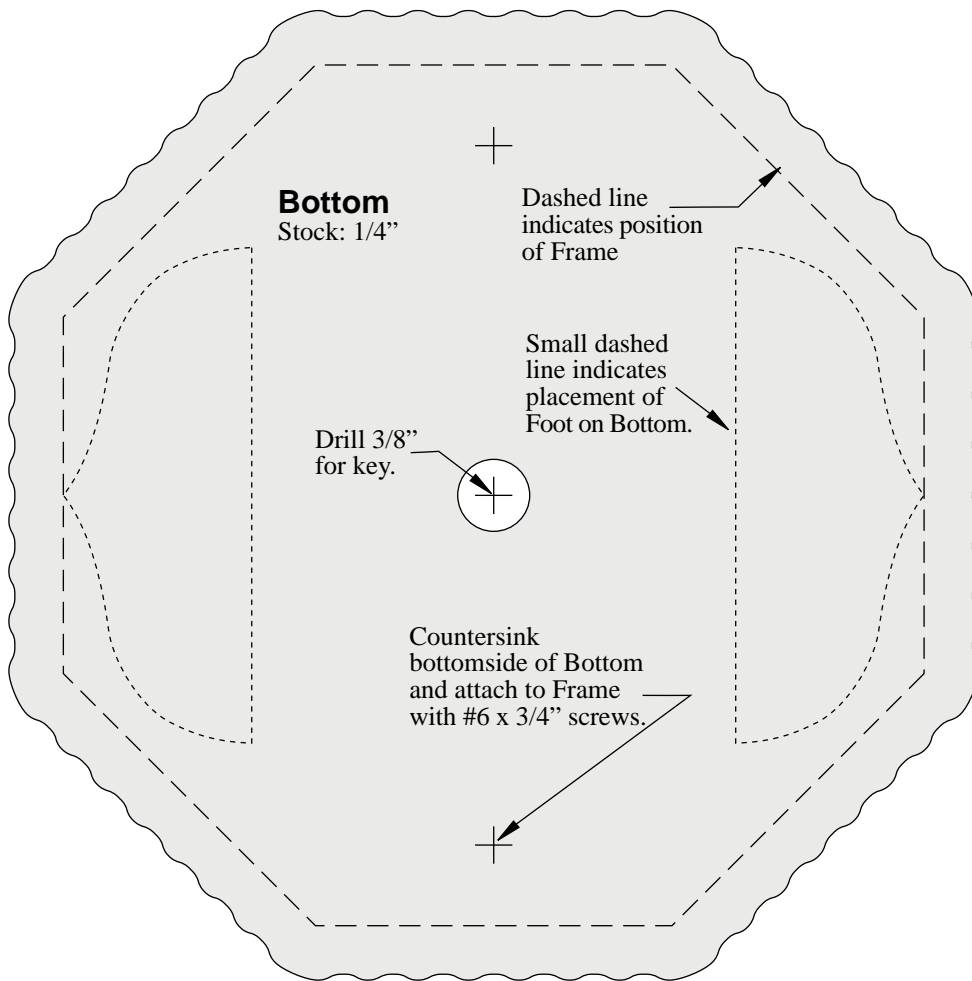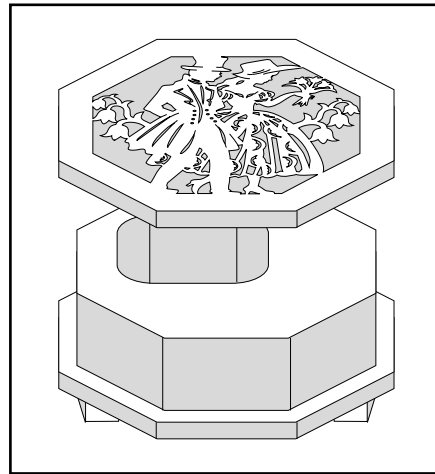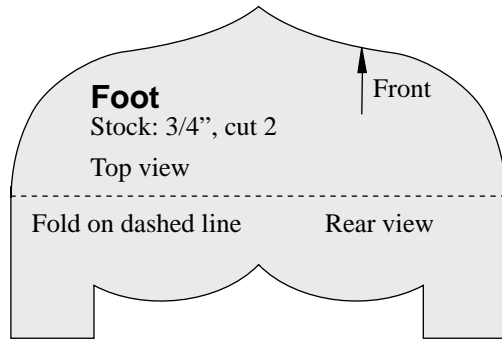   

Project #25

 Top
Stock: 1/4"

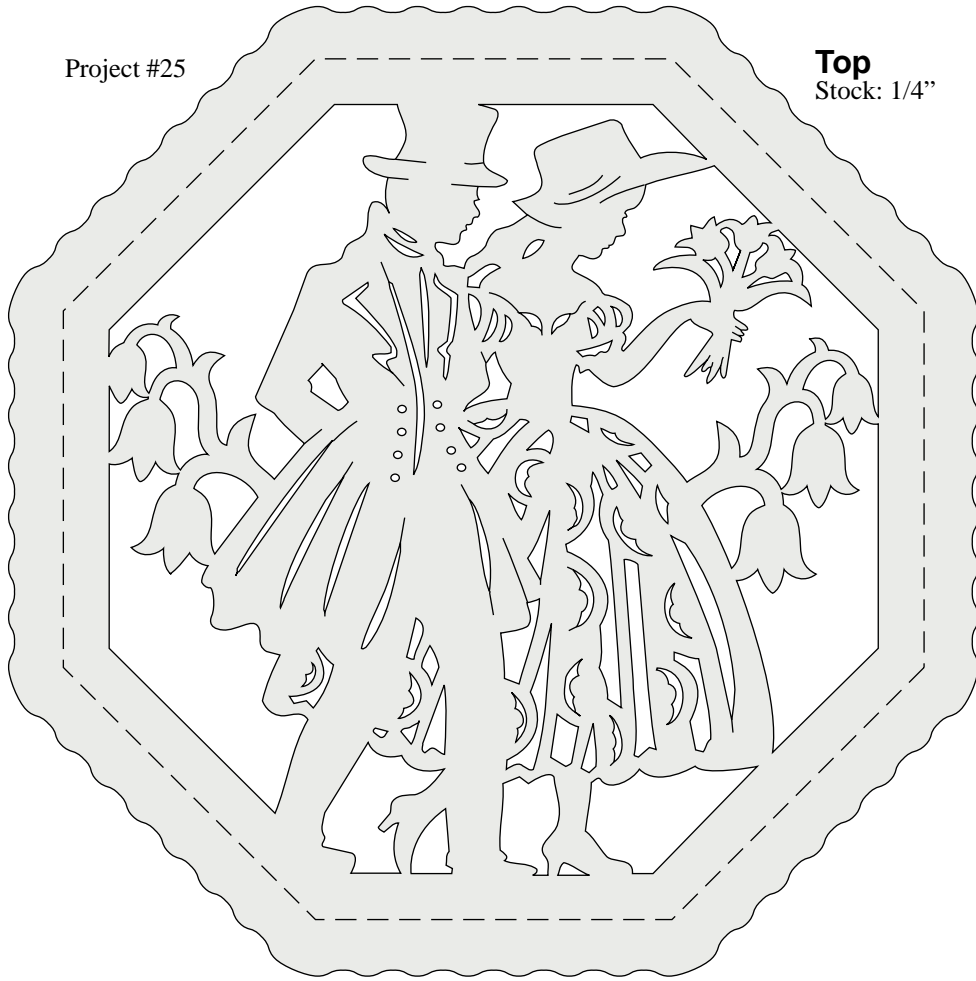



Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.





  Cut out for music box

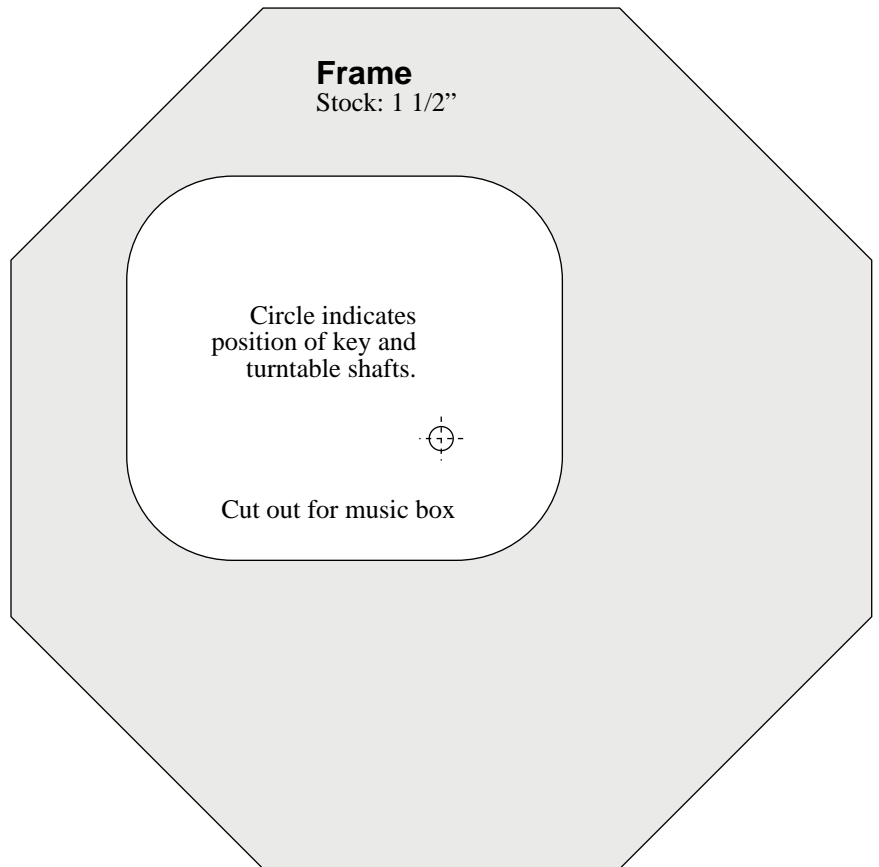




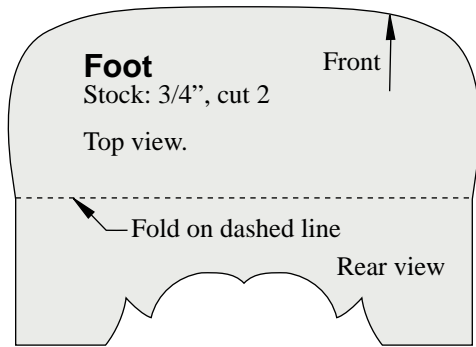


Project #26

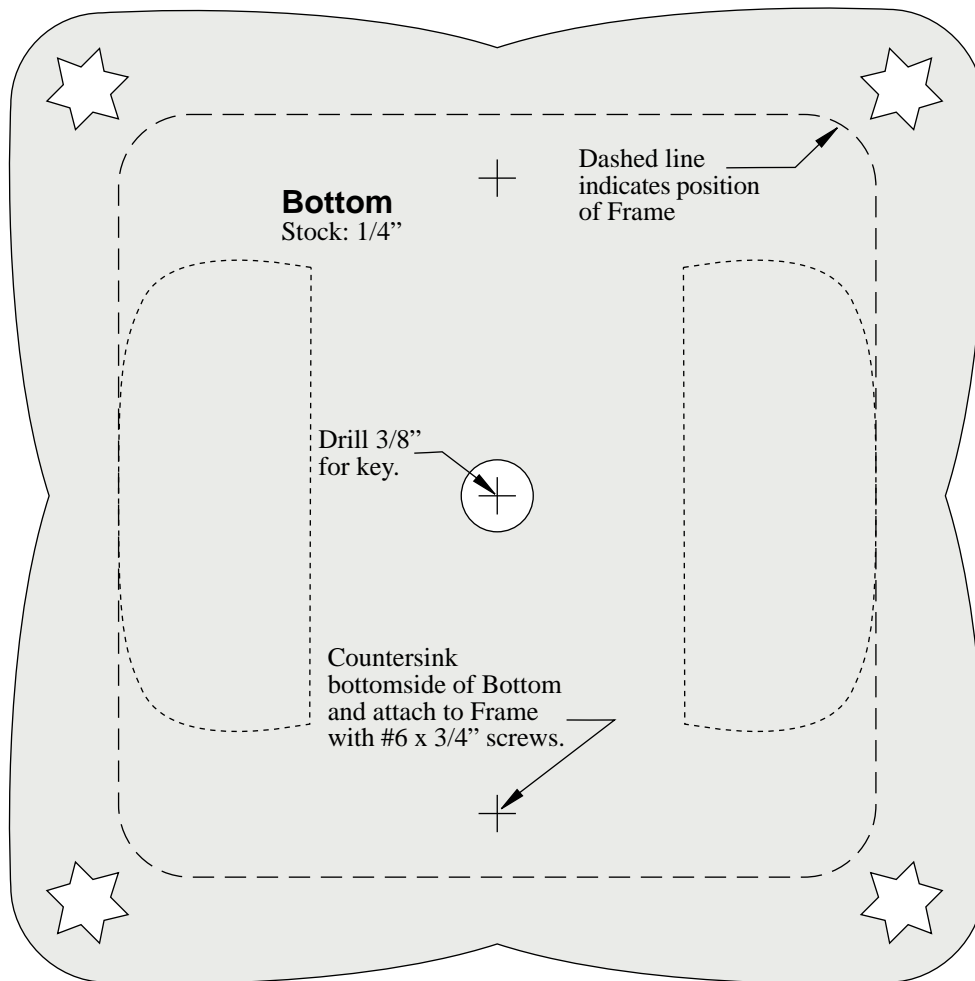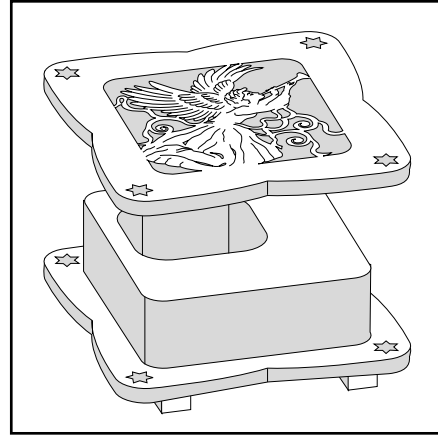  


Project #26

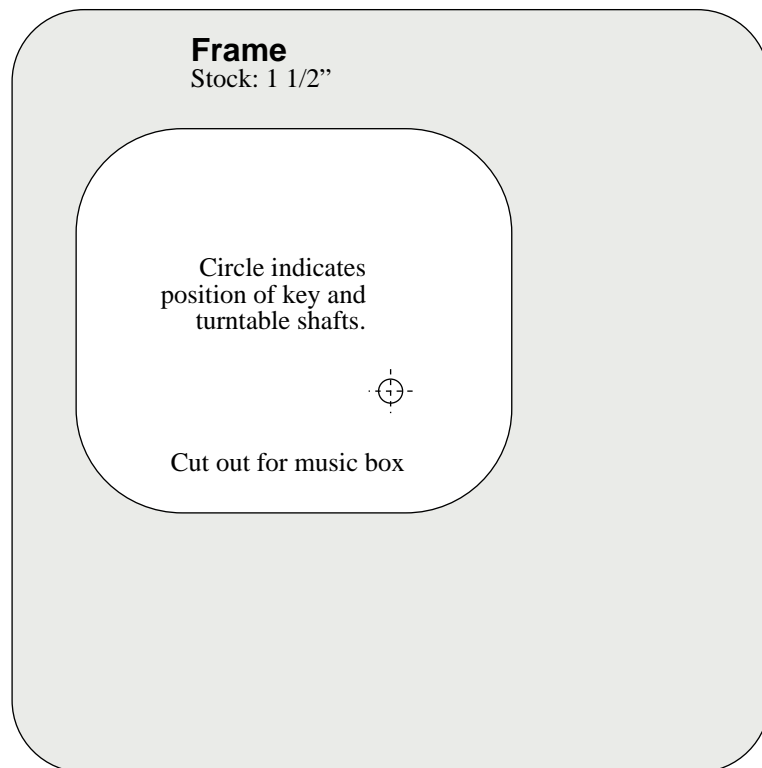 

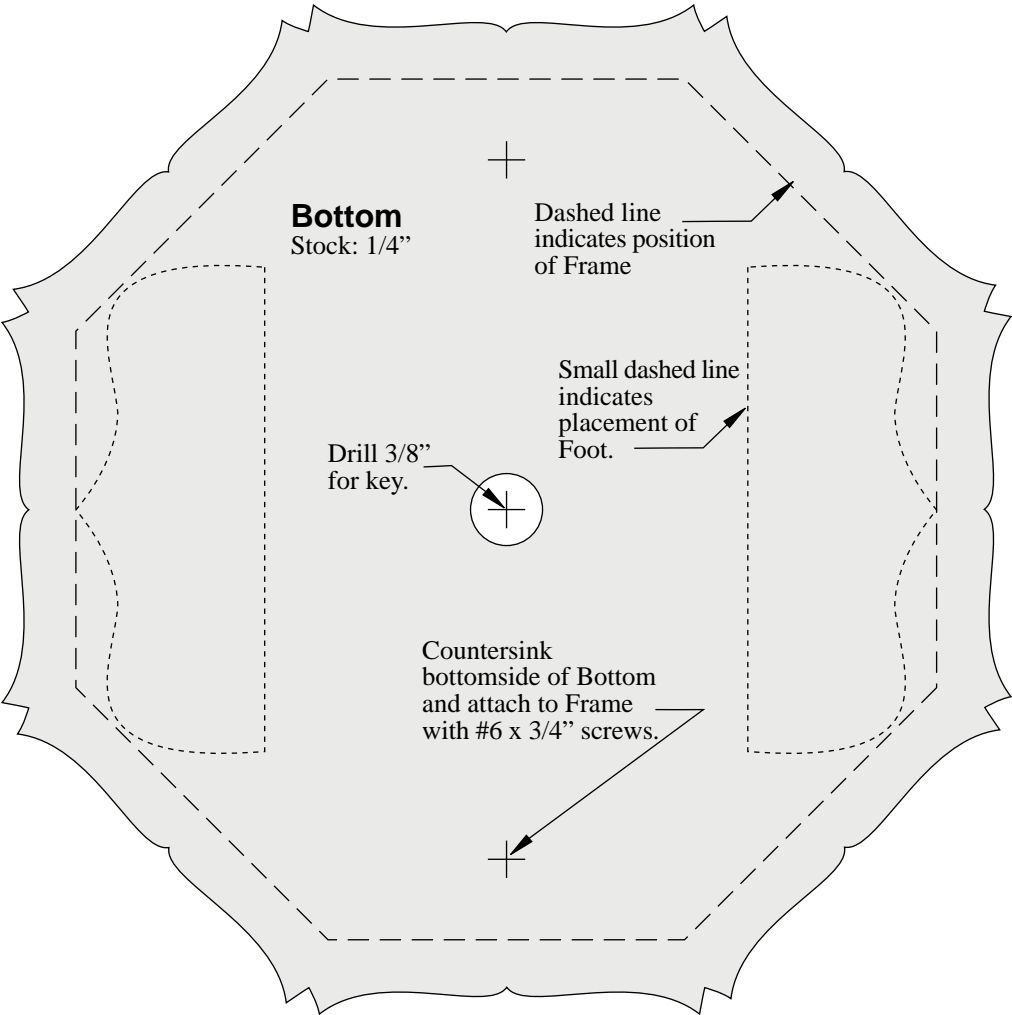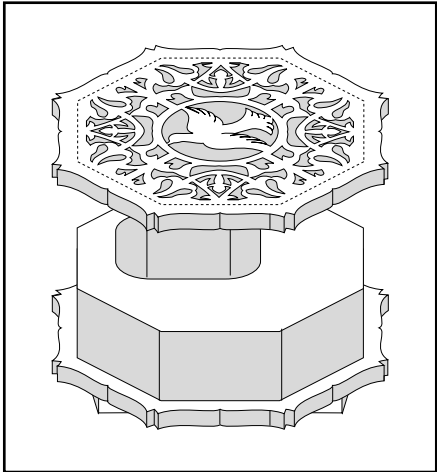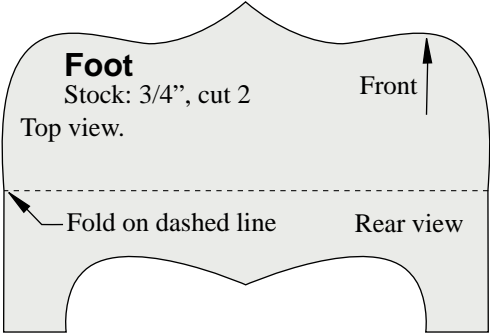   

Project #27

 Top
Stock: 1/4"

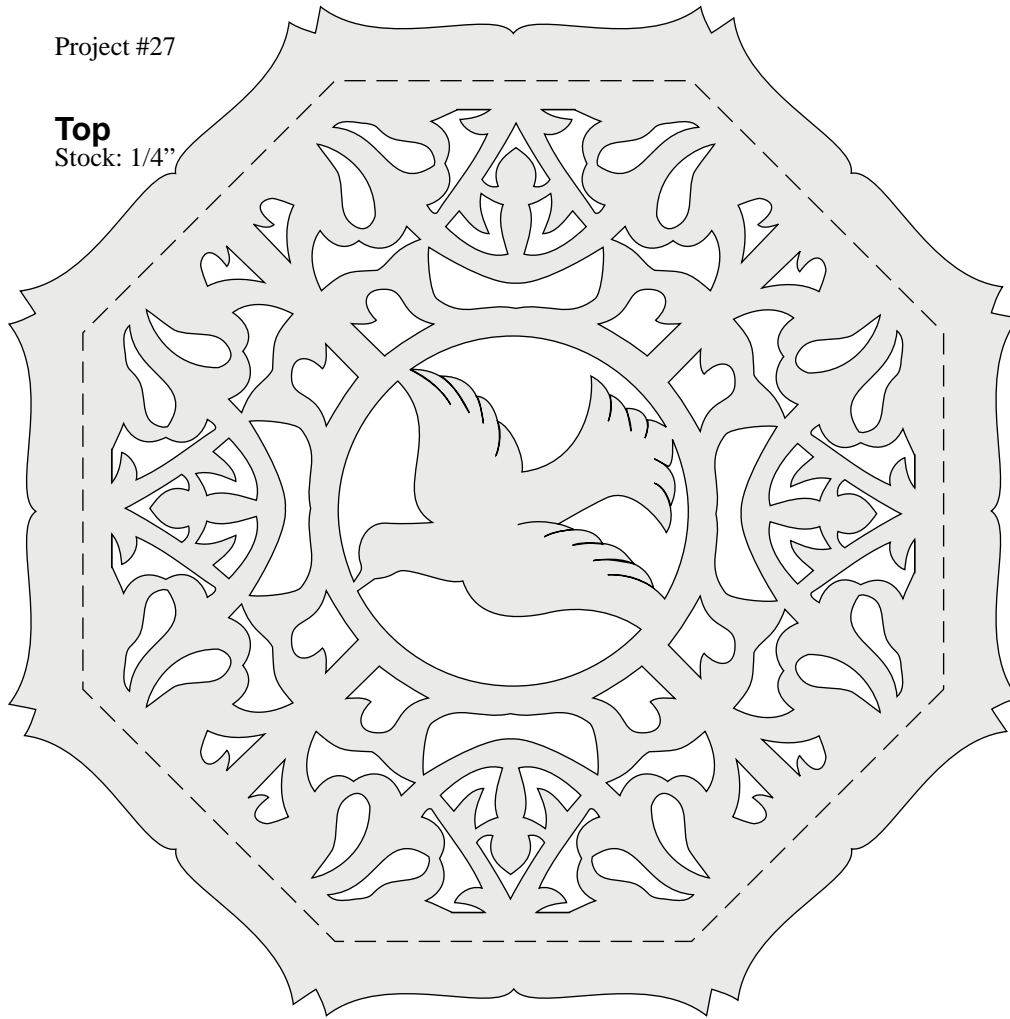





Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



    
Cut out for music box

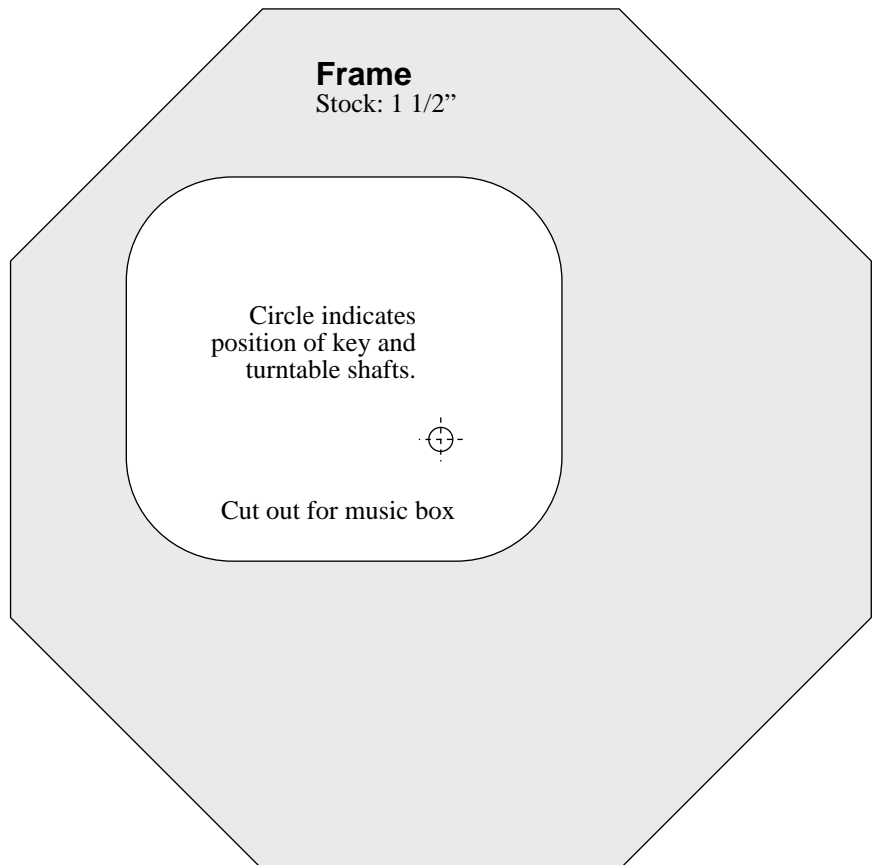

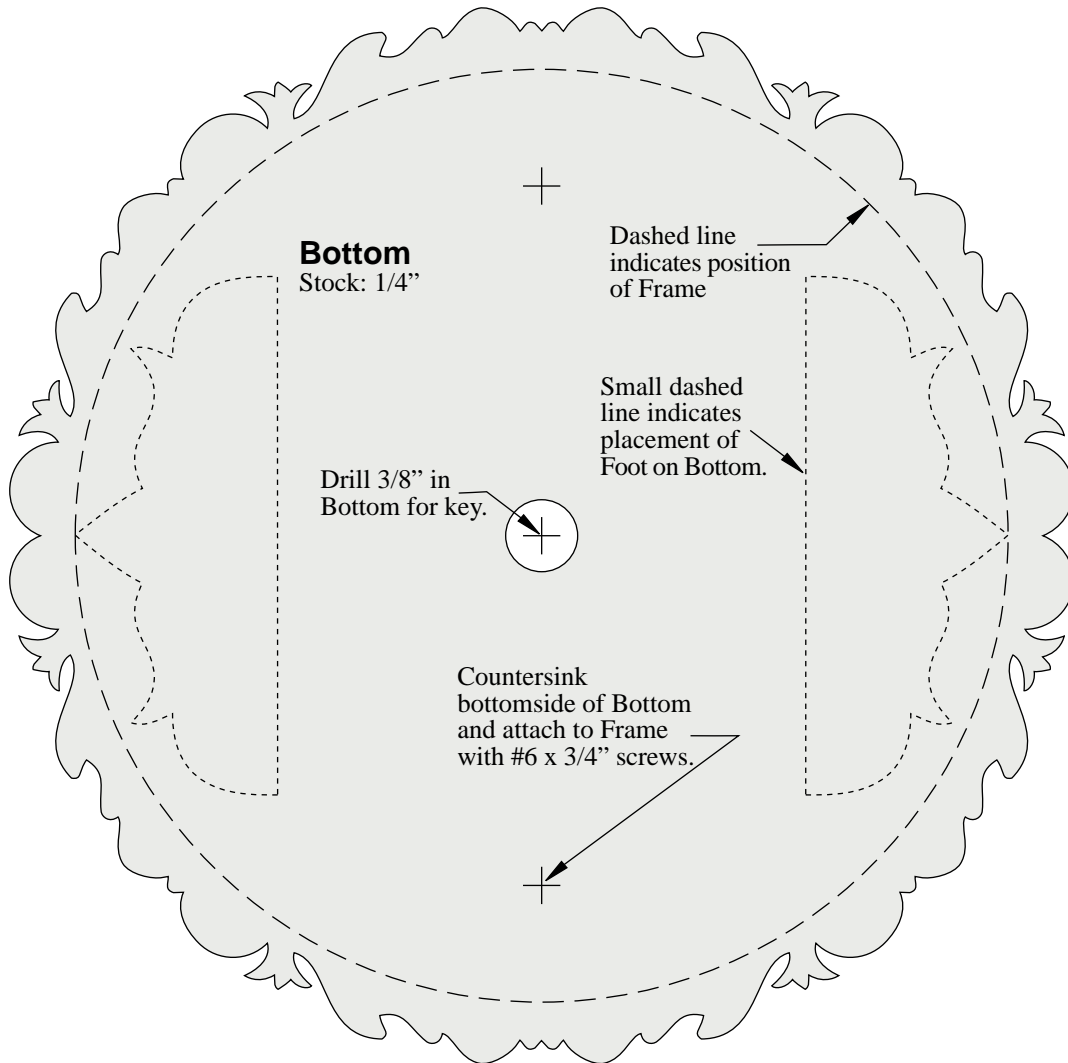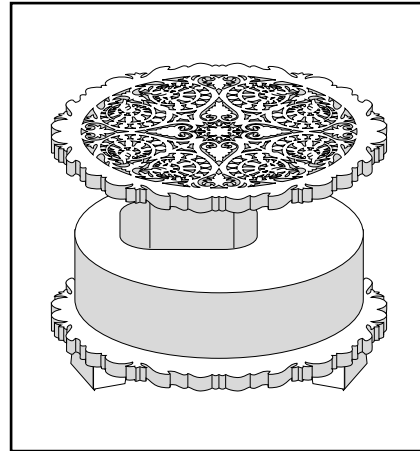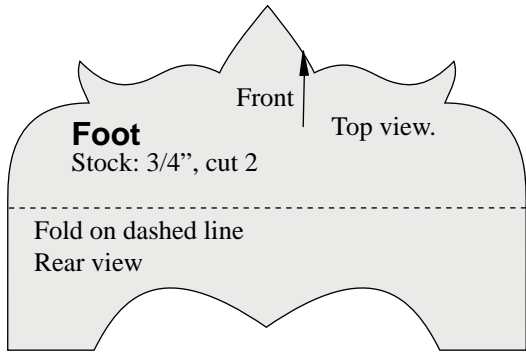

Project #28

 Top
Stock: 1/4"



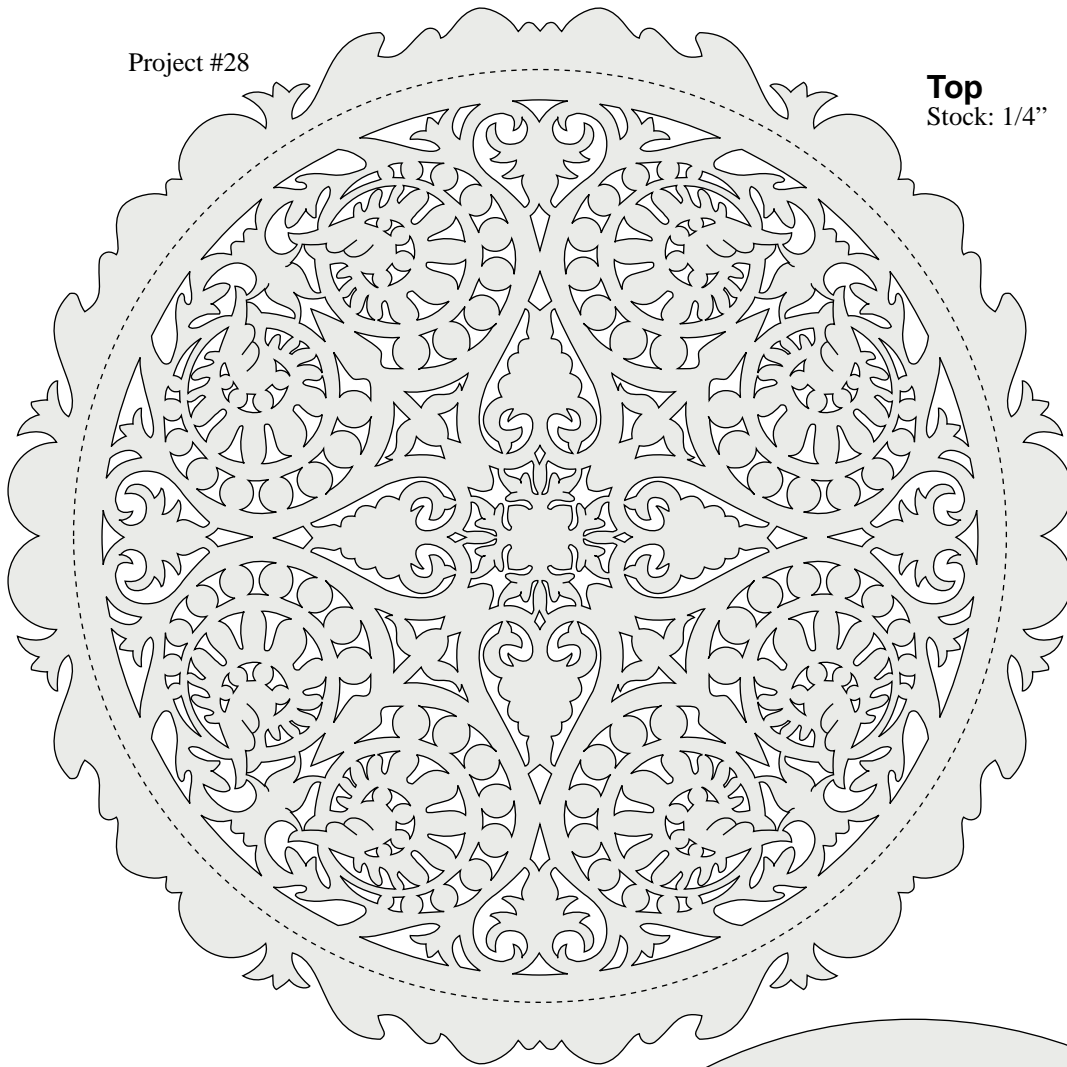


Frame
Stock: 1 1/2"


Circle indicates
position of key and
turntable shafts.






   Cut out for music box

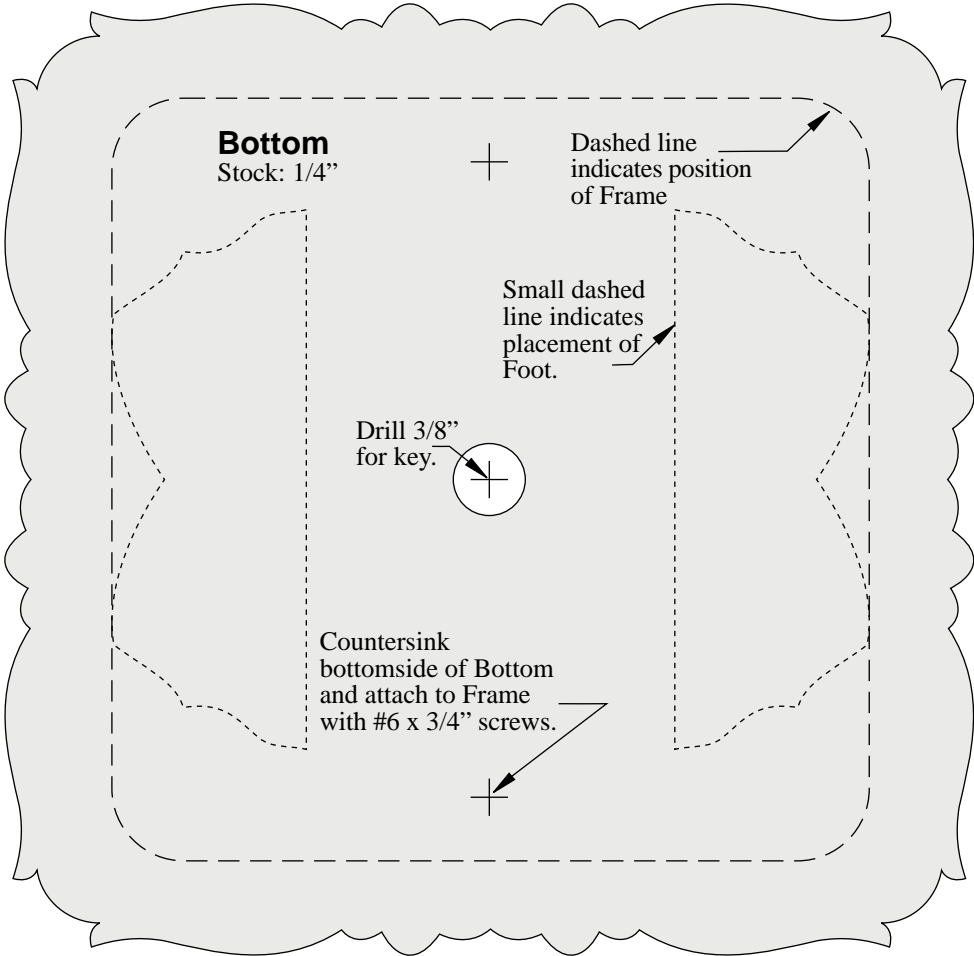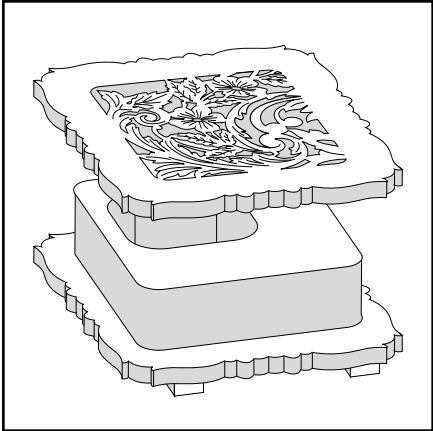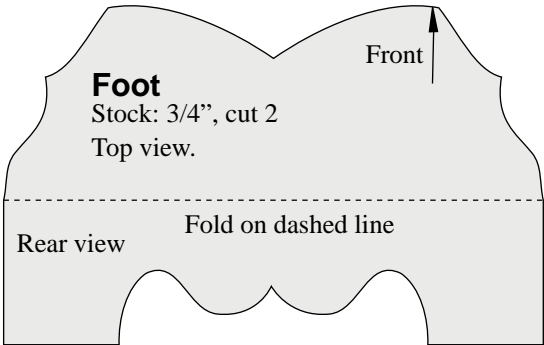


Project #29

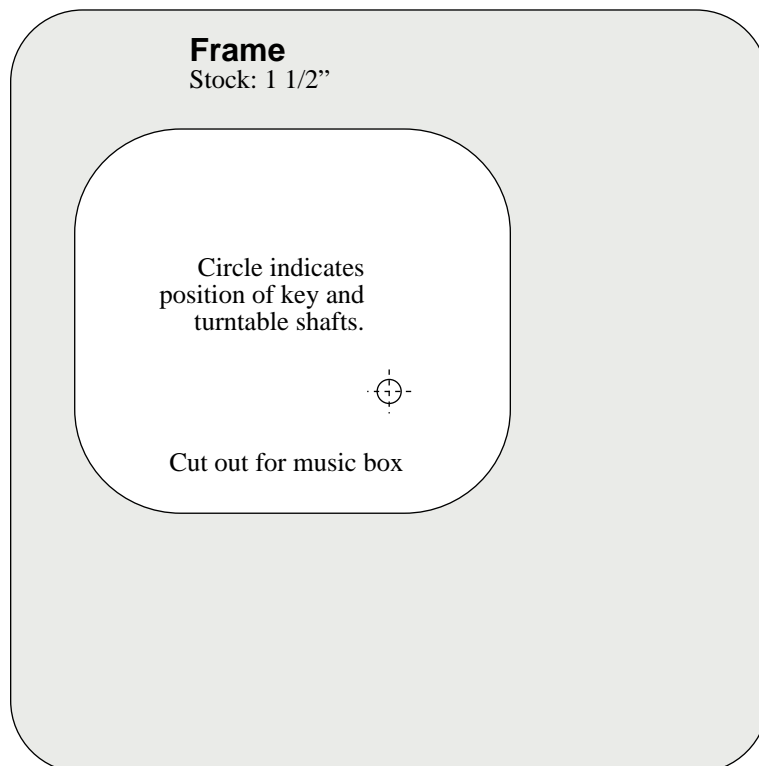 


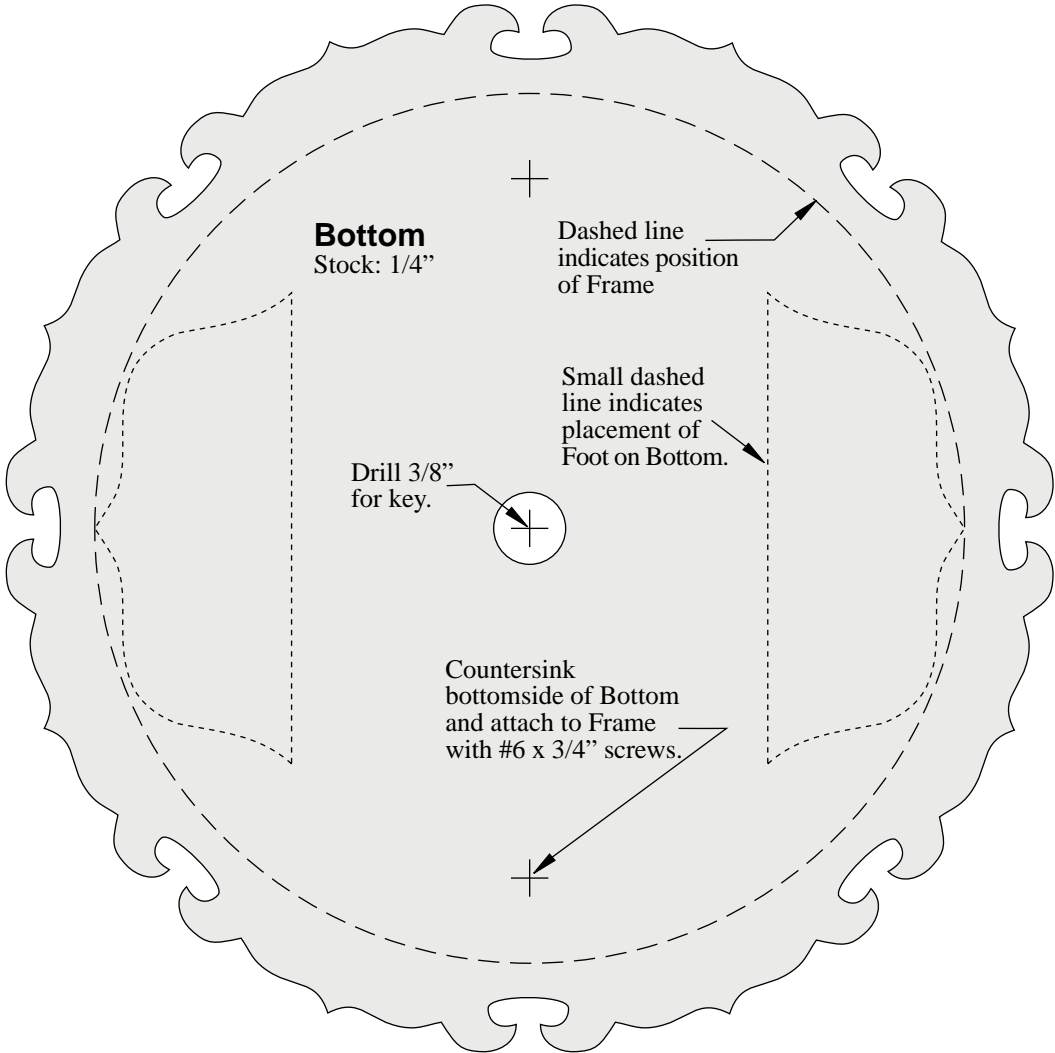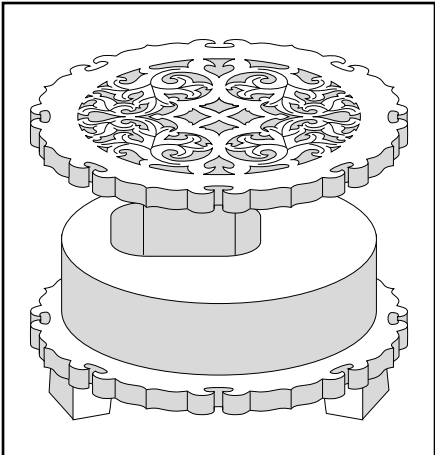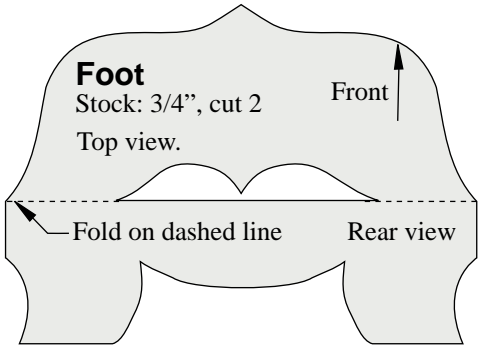   

Project #30

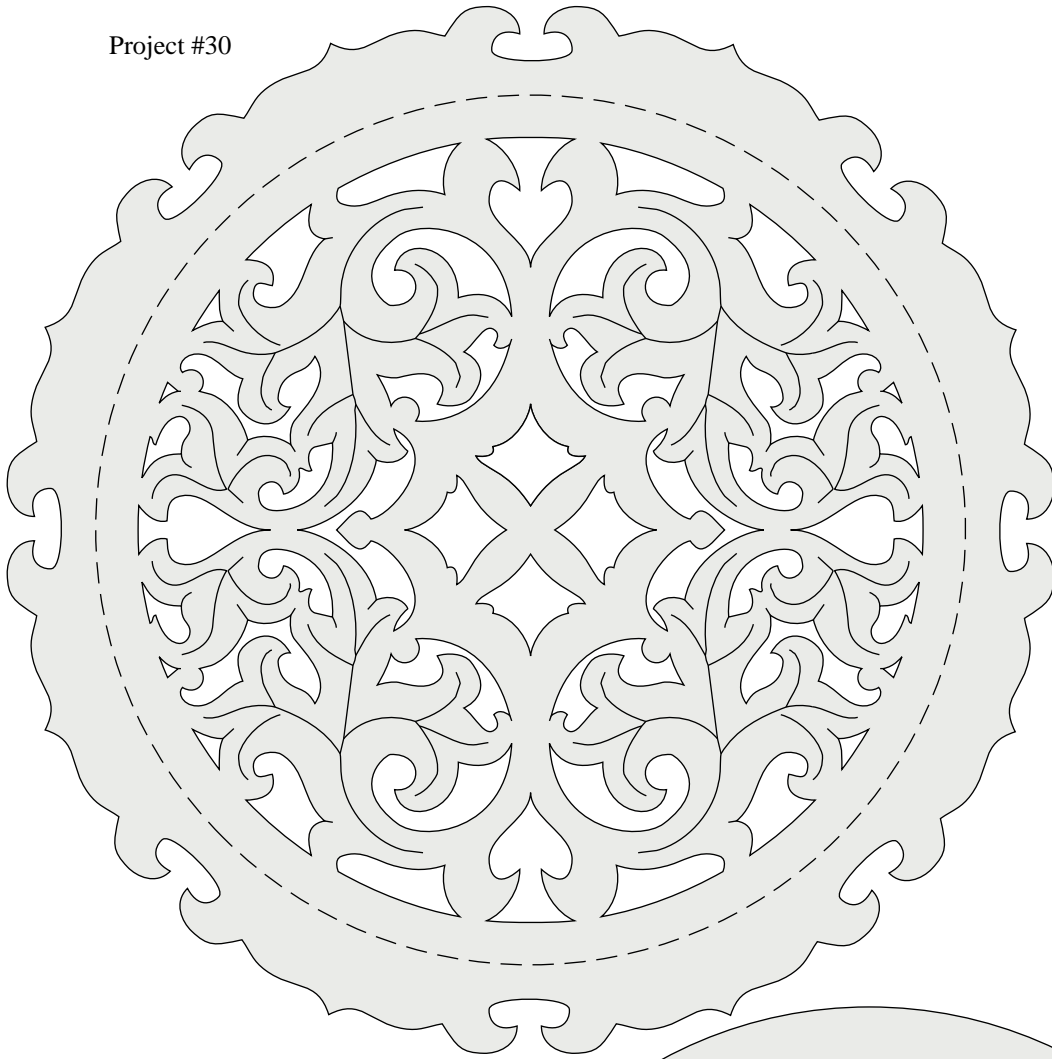 

Top
Stock: 1/4"


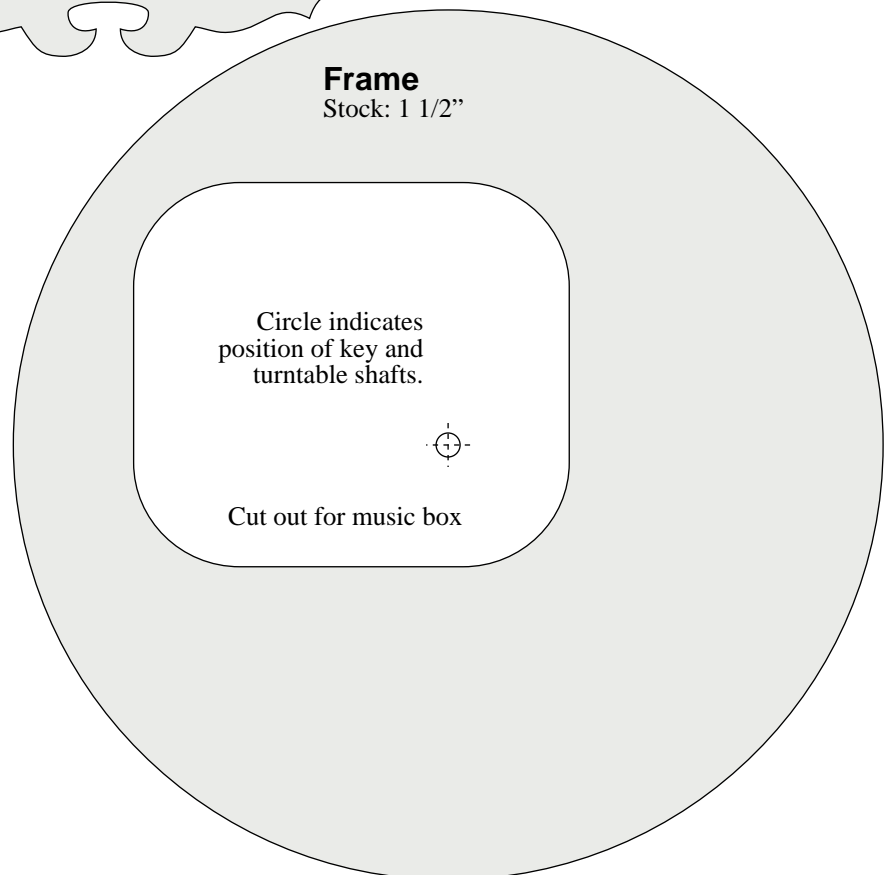 


Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



  Cut out for music box

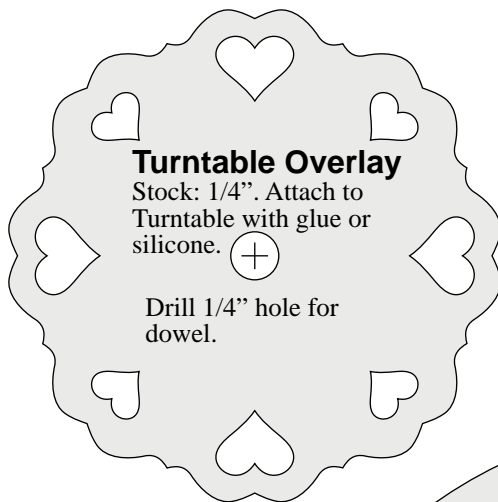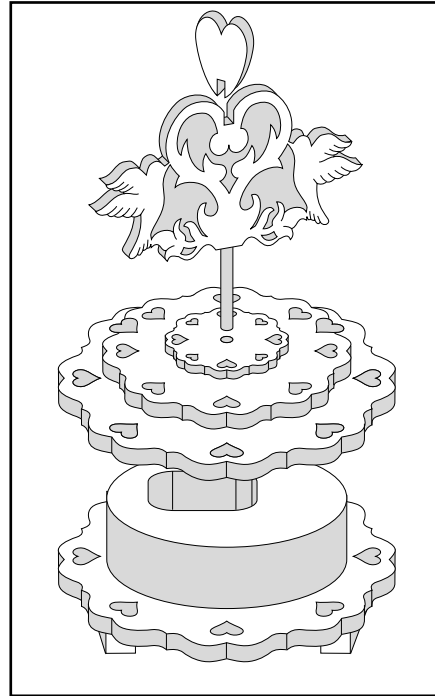


Turntable Overlay

Stock: 1/4". Attach to Turntable with glue or silicone.



 Drill 1/4" hole for dowel.

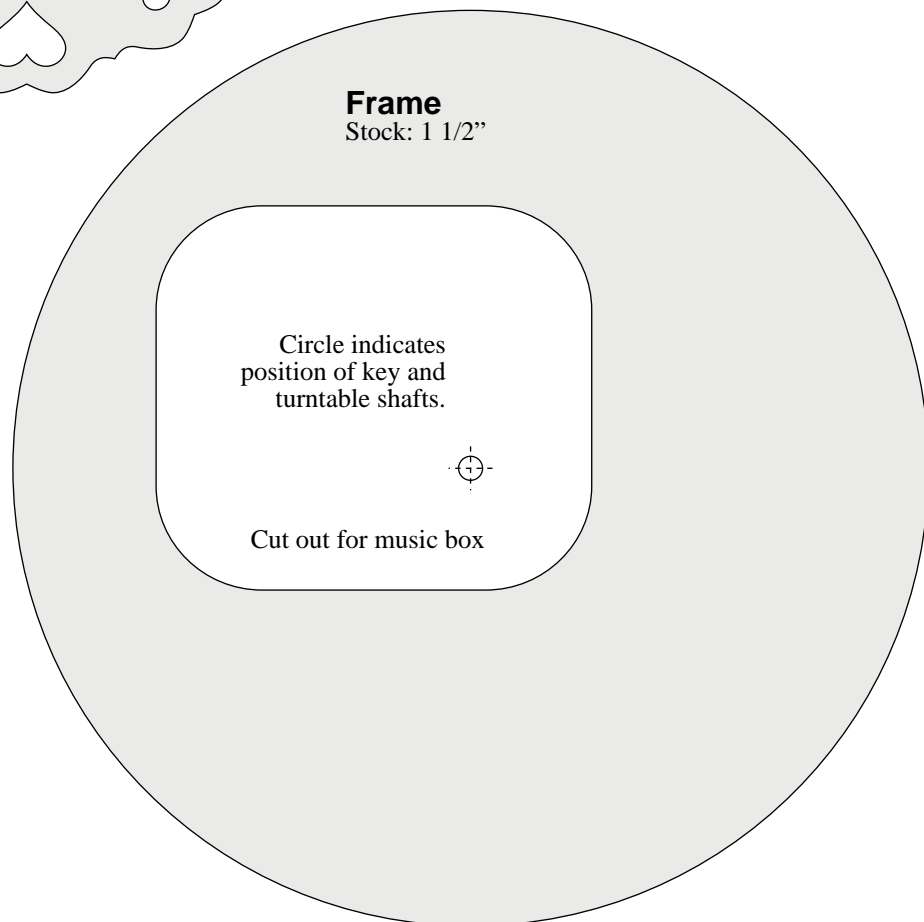

Frame

 
 
Stock: 1 1/2"

Circle indicates position of key and turntable shafts.






Cut out for music box

Project #31





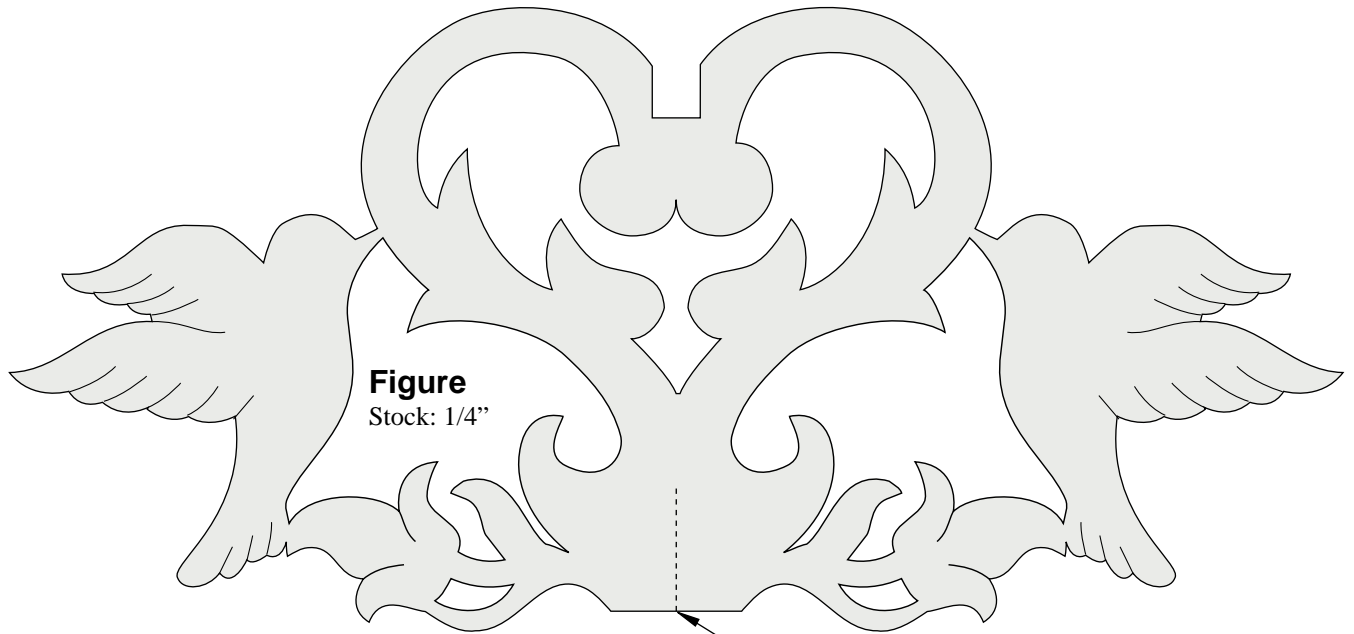
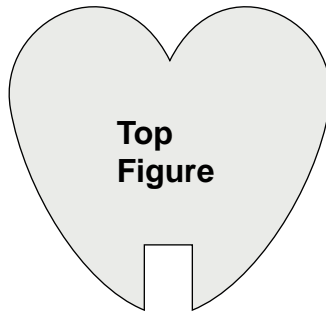


   
Drill for a 1/4"D x 3 1/2" long dowel.
Secure in Figure and Turntable with glue.

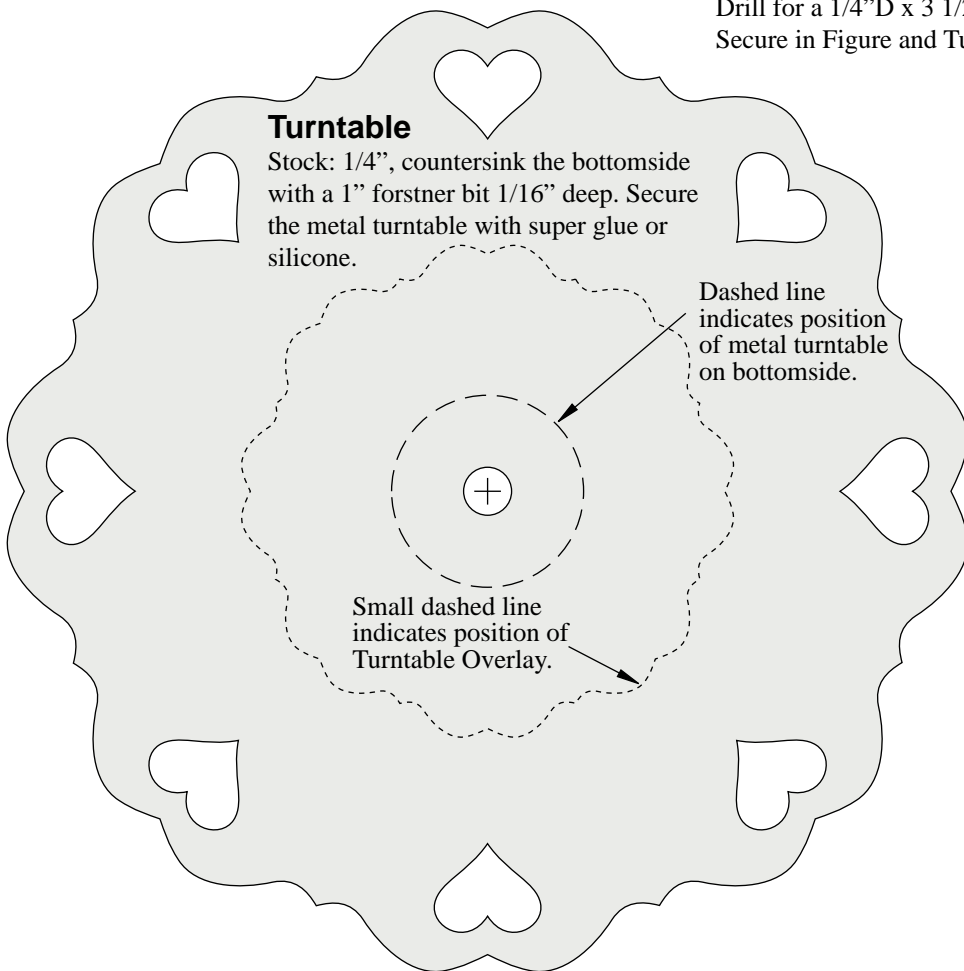

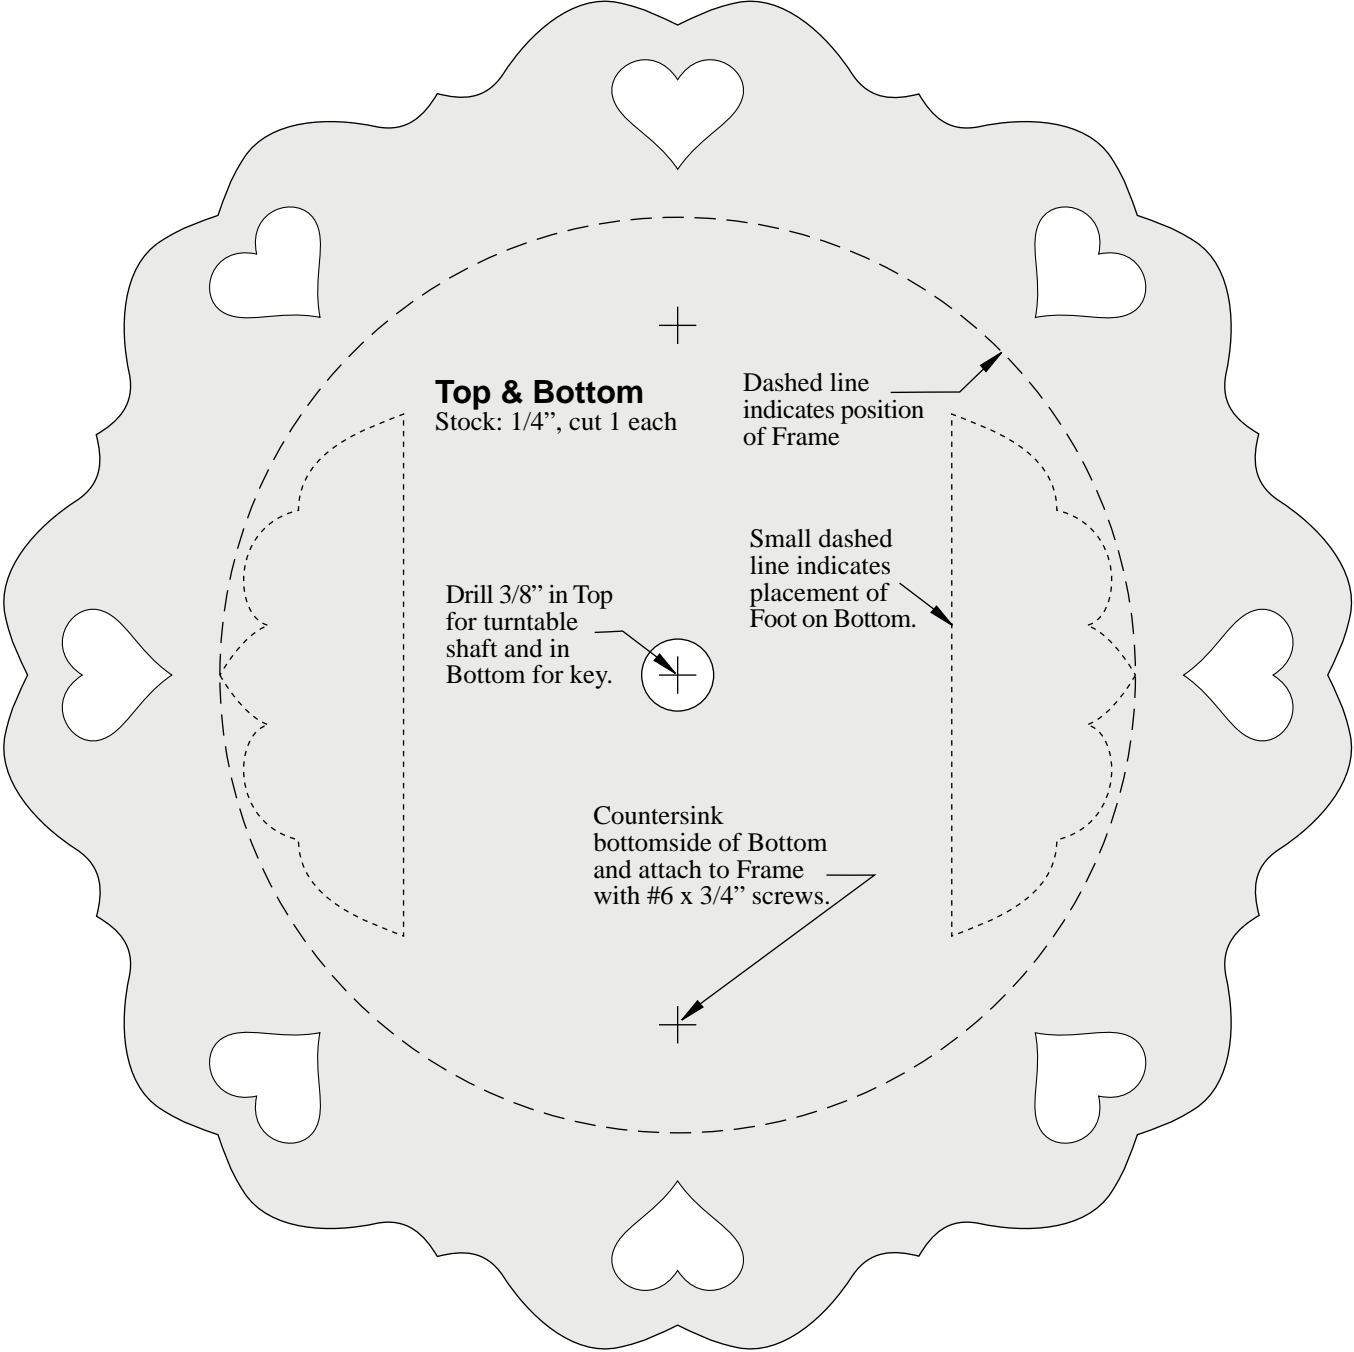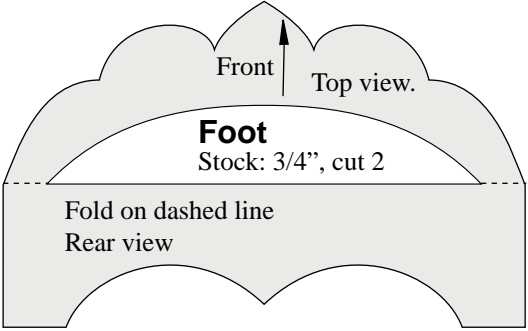


Project #32

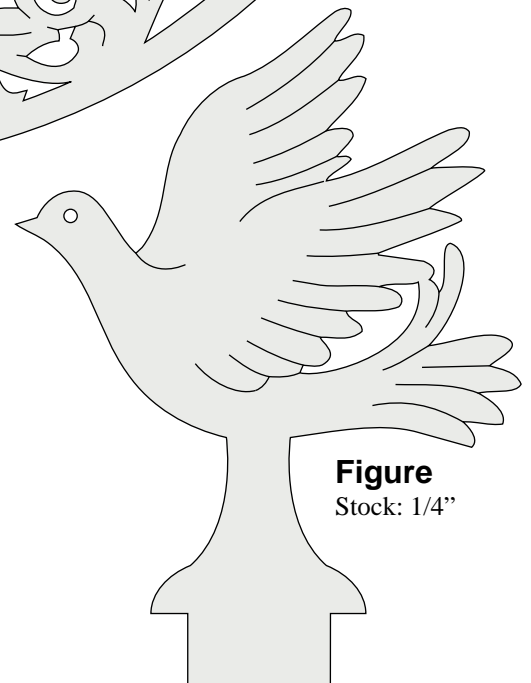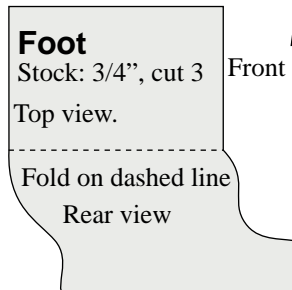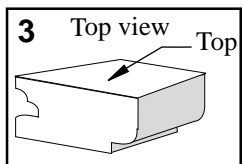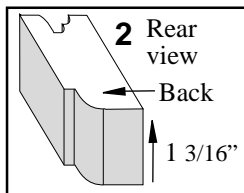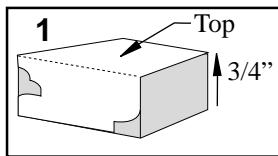     
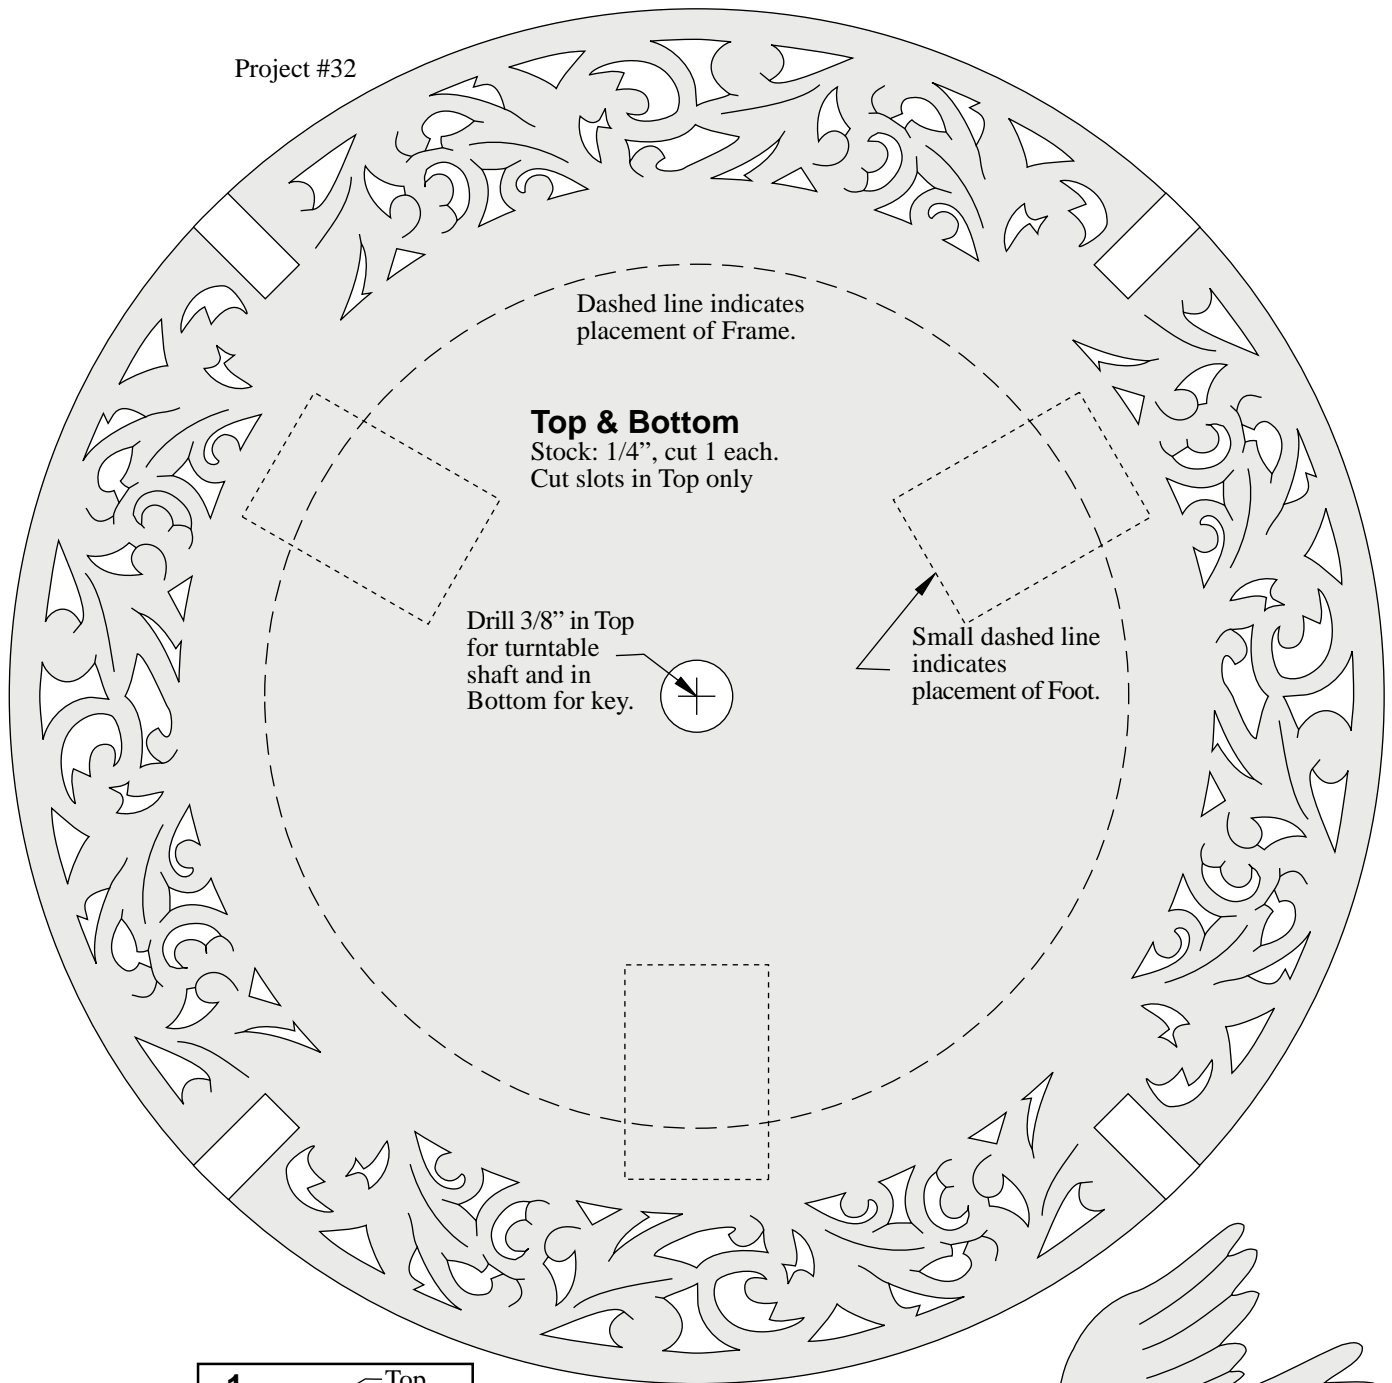 


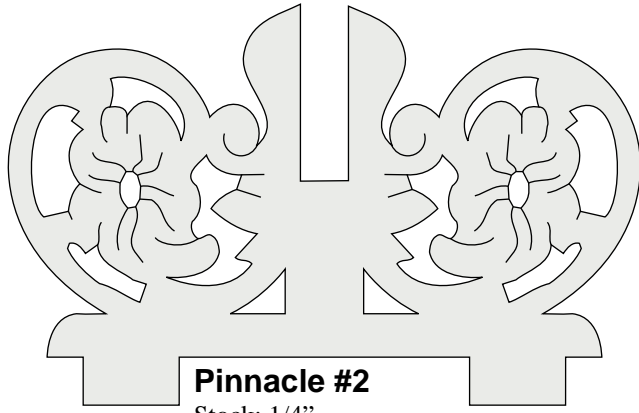 

Pinnacle #2
Stock: 1/4"

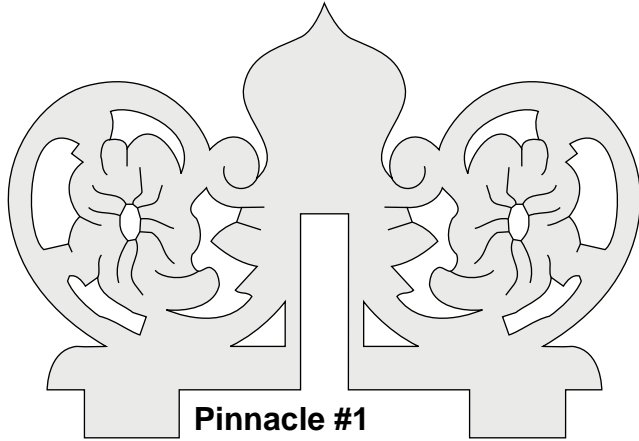 


Pinnacle #1
Stock: 1/4"

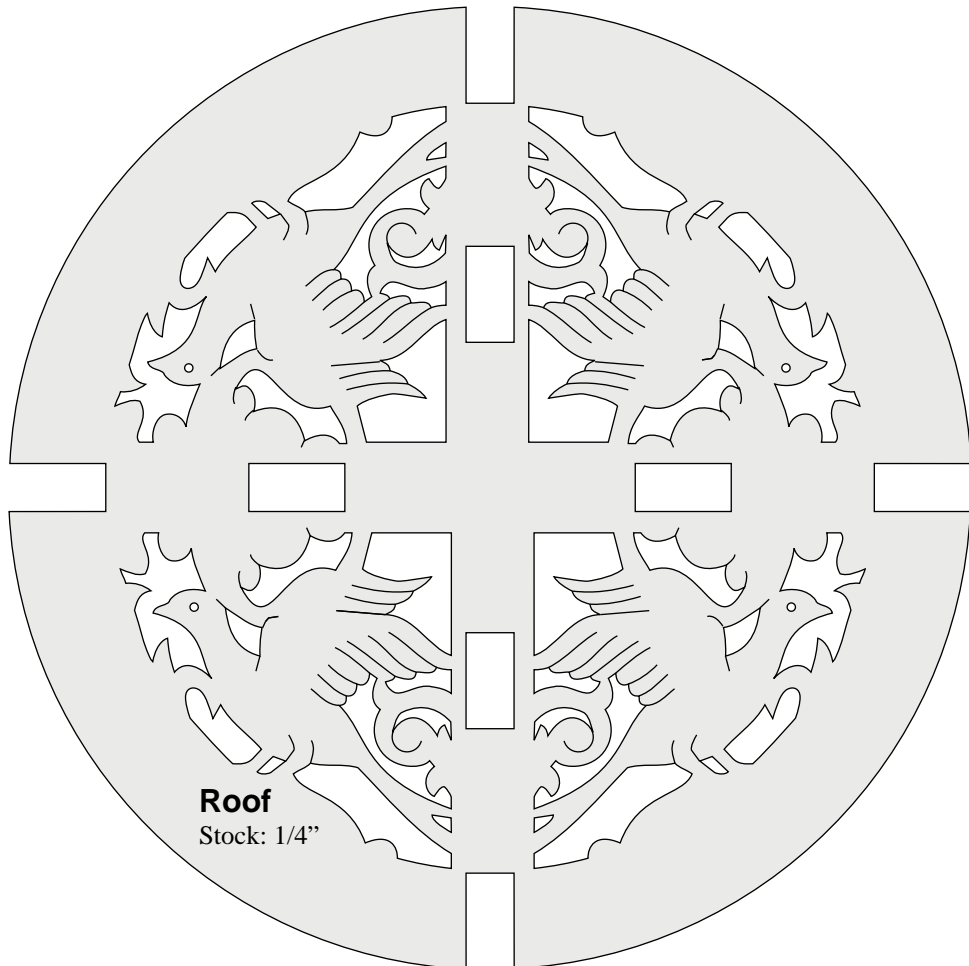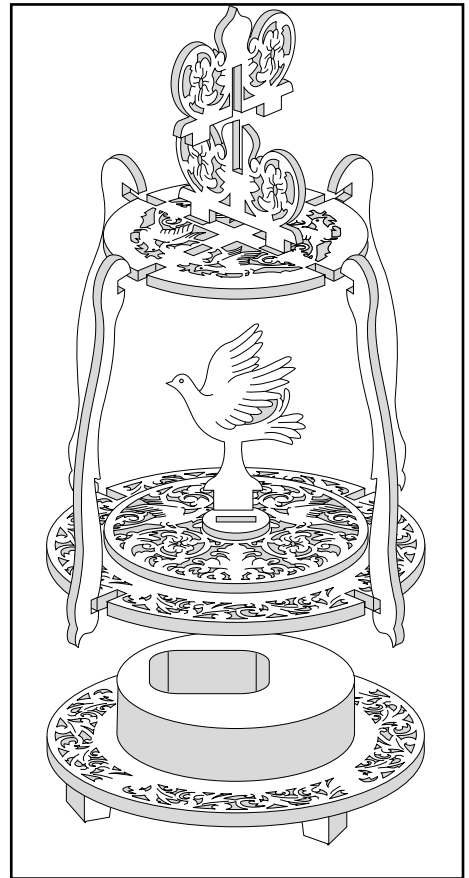  


Roof
Stock: 1/4"

 Project #32

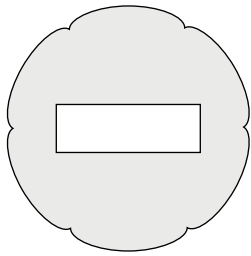


Turntable Overlay
Stock: 3/8"

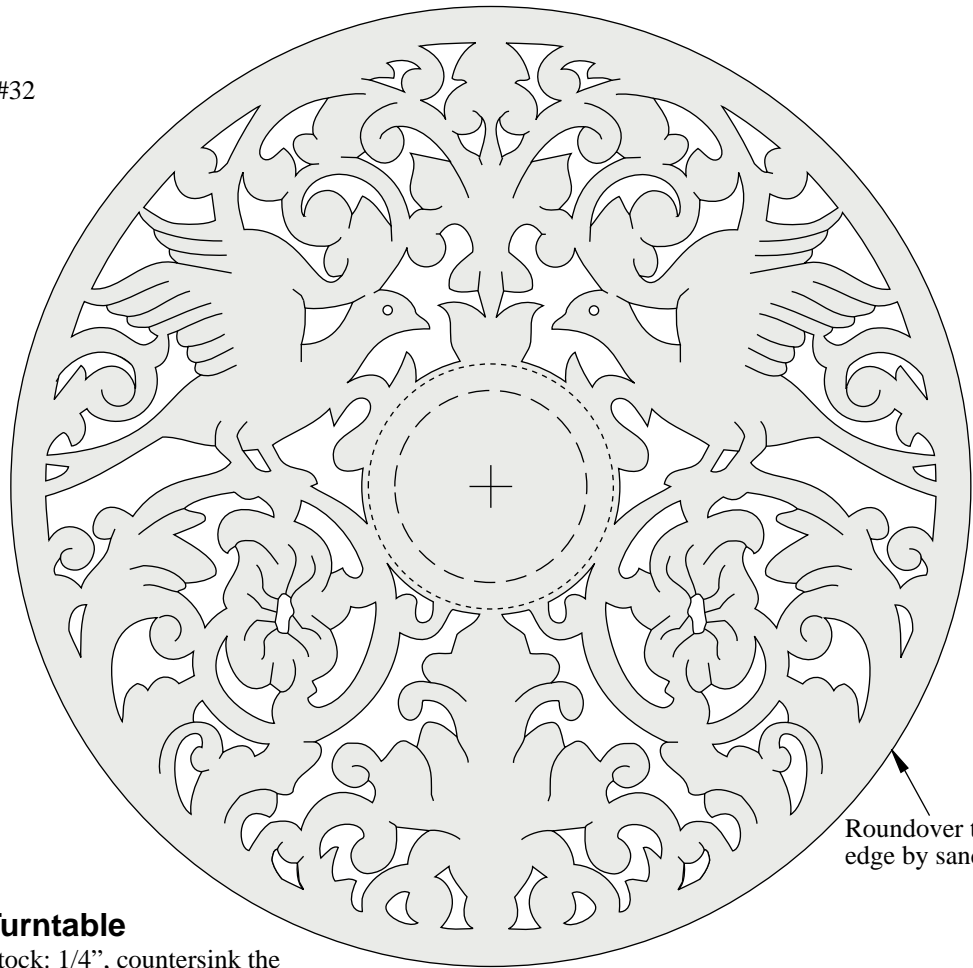 


Turntable

Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

 Dashed line indicates position of metal turntable on bottomside. Small dashed line indicates placement of Turntable Overlay.

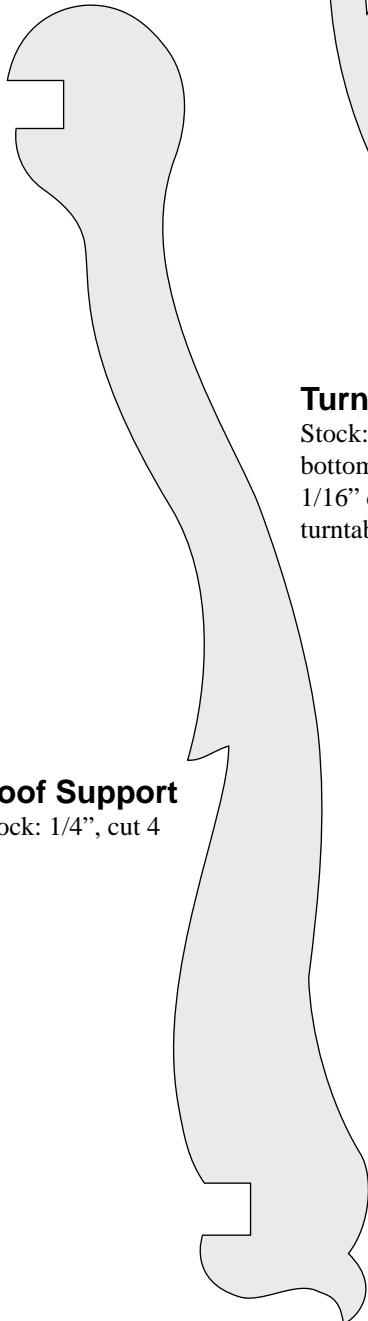




Roof Support
Stock: 1/4", cut 4

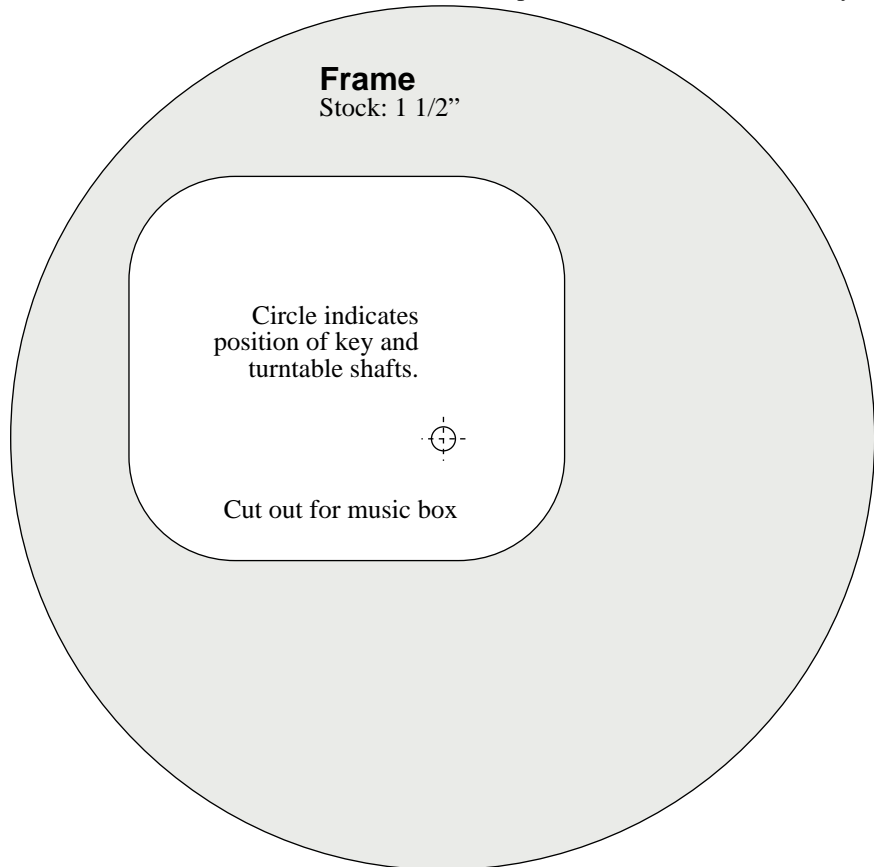 



Frame
Stock: 1 1/2"

Circle indicates position of key and turntable shafts.

  Cut out for music box

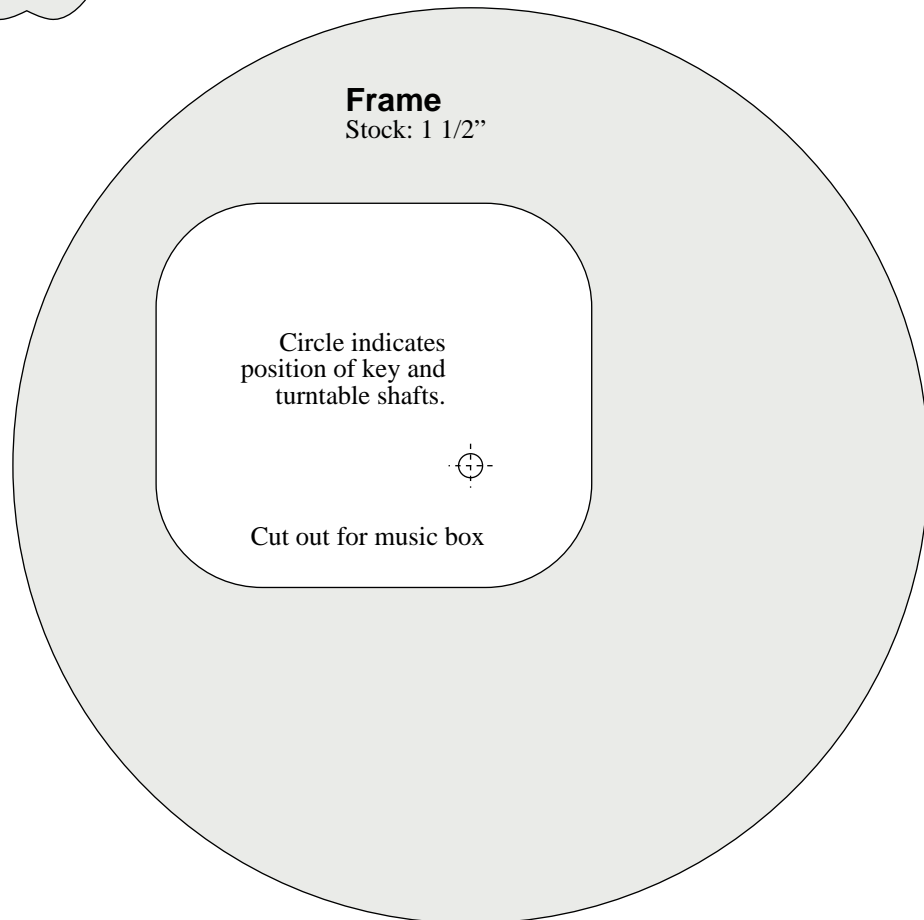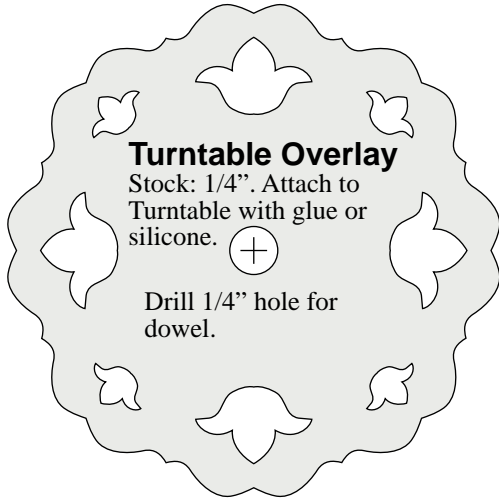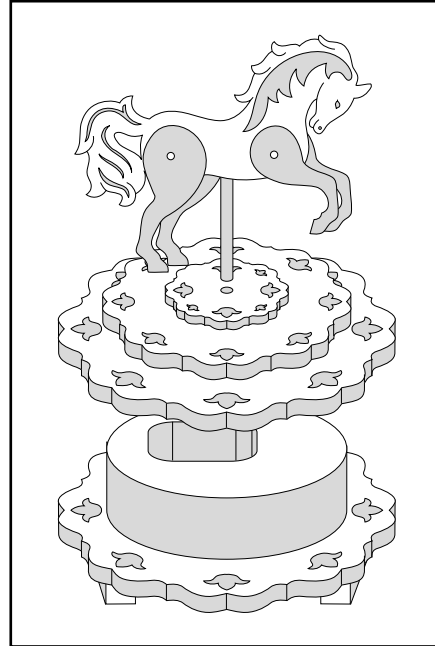


Project #33

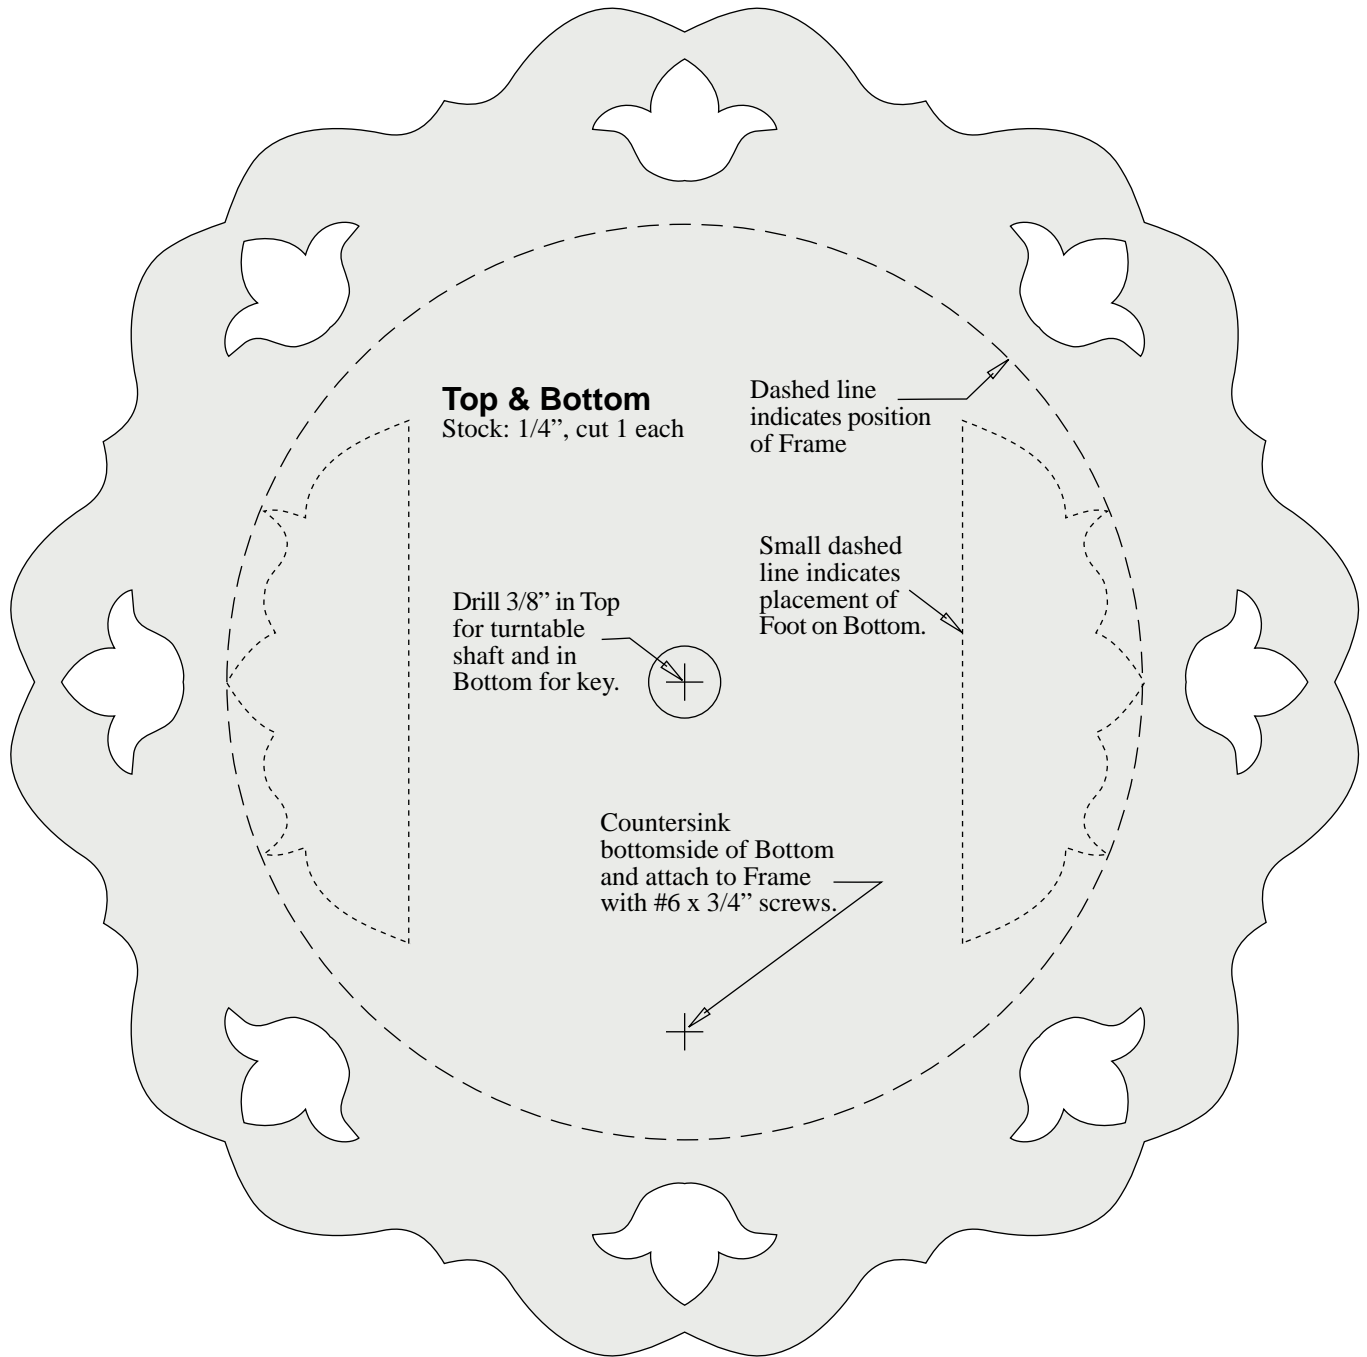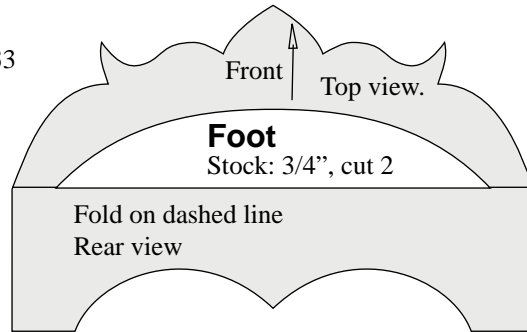  

Project #33

Body

 
Stock: 3/8"

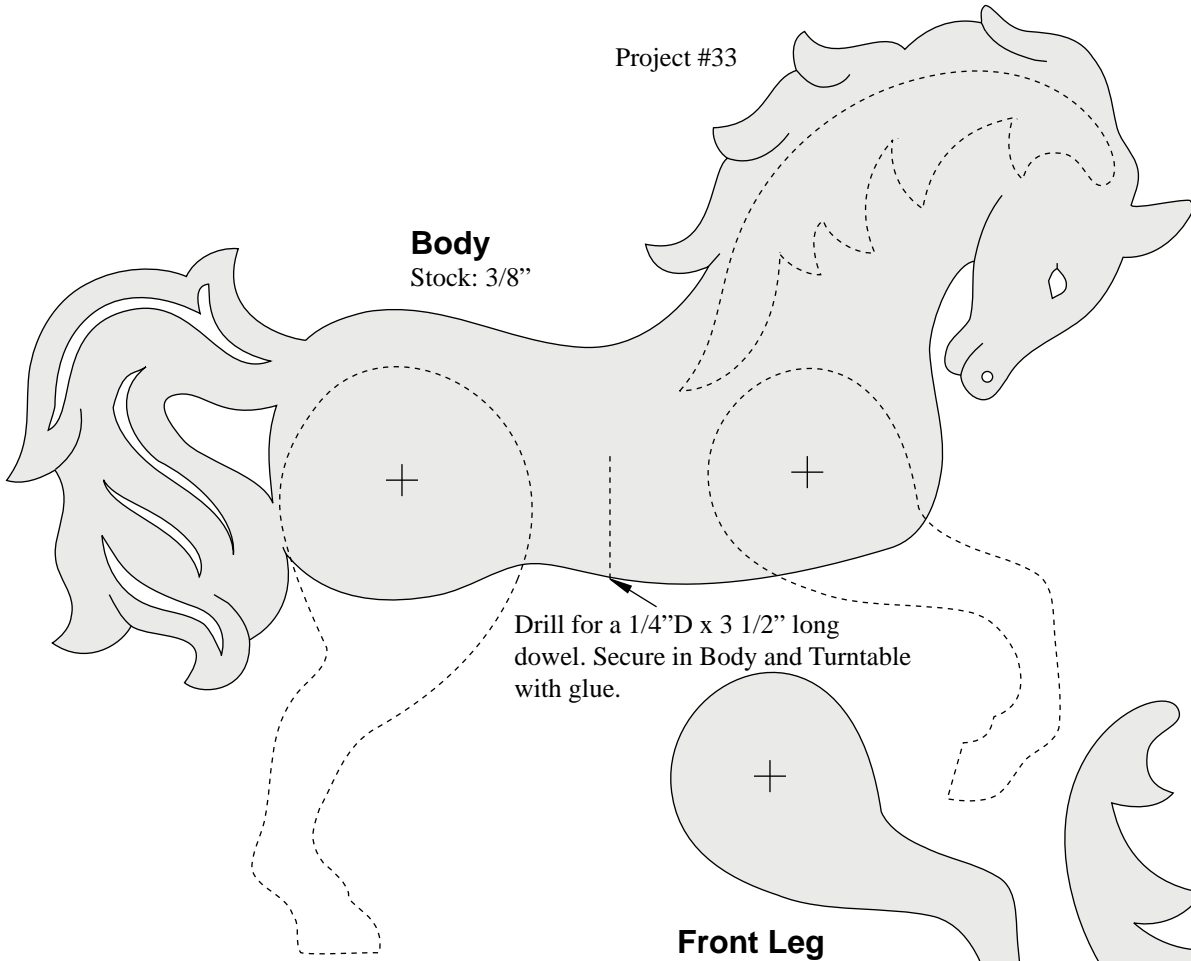

Drill for a 1/4"D x 3 1/2" long
dowel. Secure in Body and Turntable
with glue.


Front Leg

 Stock: 1/8" - 1/4", cut 2

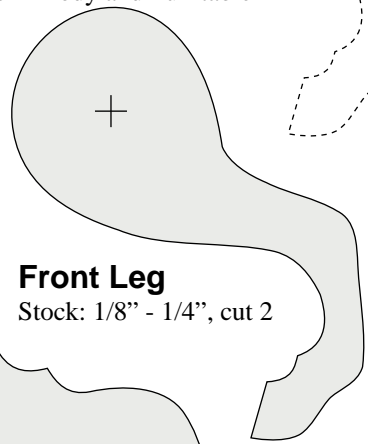


Mane

 Stock: 1/16" - 1/8", cut 2.
Attach with glue or silicone.

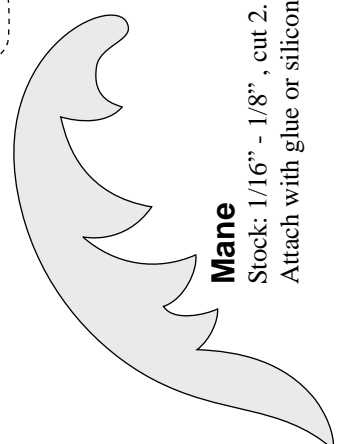

Turntable

 Stock: 1/4", countersink the bottomside
with a 1" forstner bit 1/16" deep. Secure
the metal turntable with super glue or
silicone.

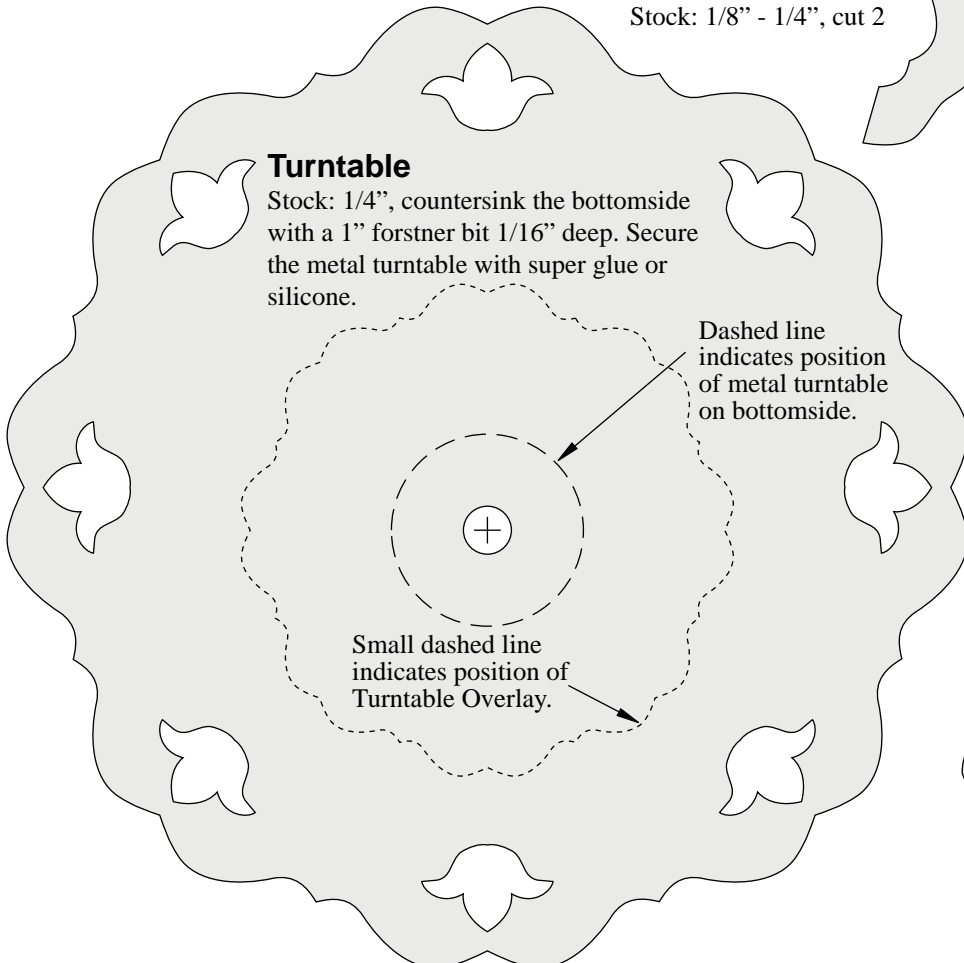



Dashed line
indicates position
of metal turntable
on bottomside.

Small dashed line
indicates position of
Turntable Overlay.

Back Leg

  Stock: 1/8" - 1/4", cut 2

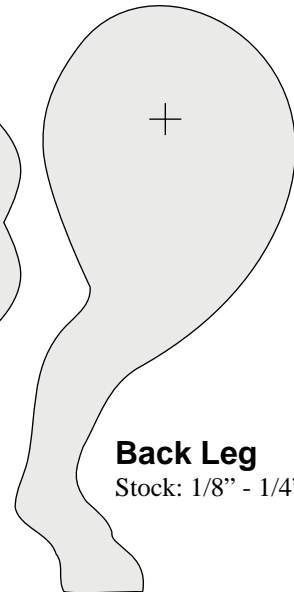


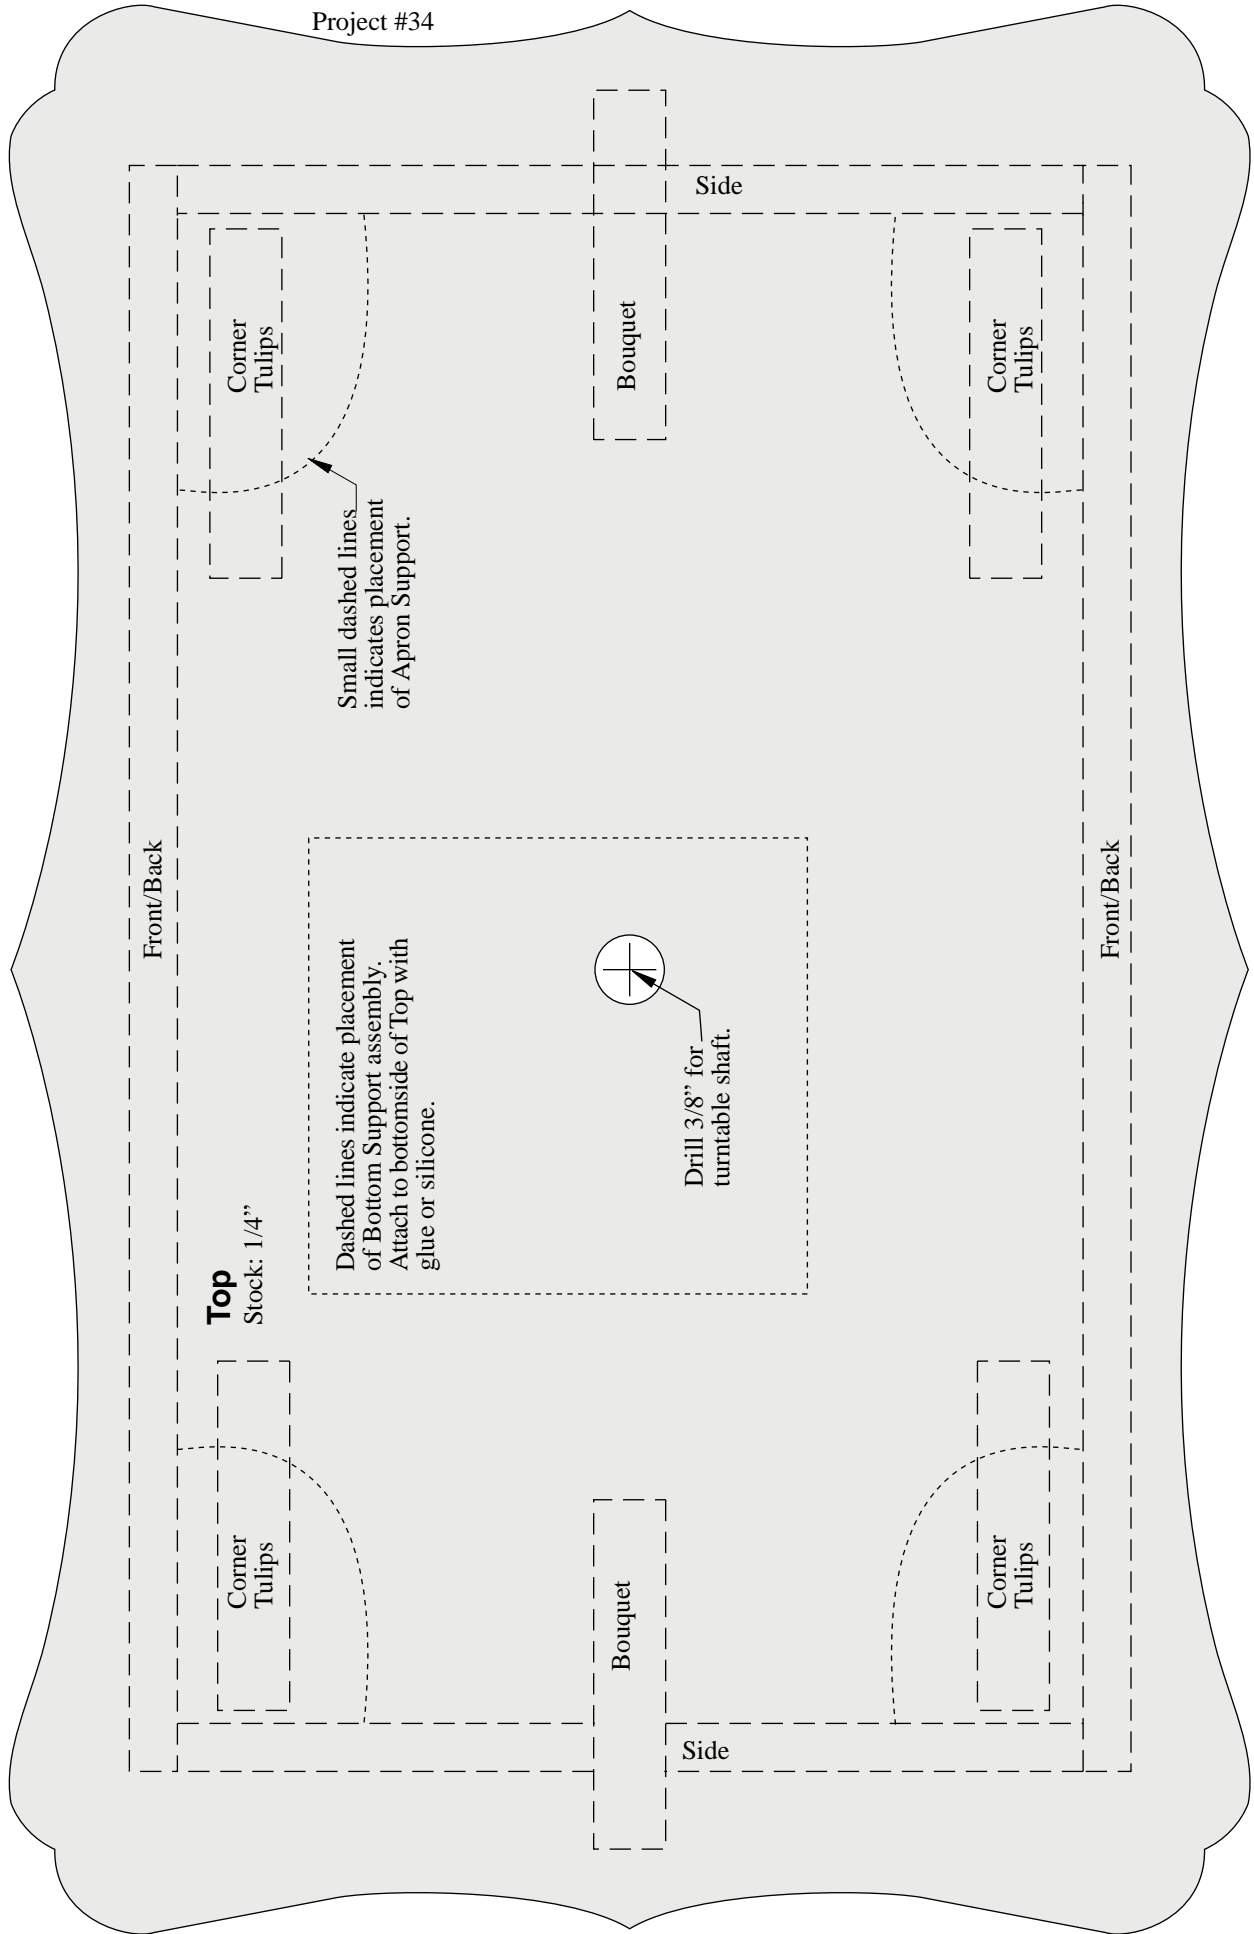

Turntable Overlay


Stock: 1/4", Secure to the Turntable with glue or silicone.

 Adjust slot if necessary for thickness of material used.

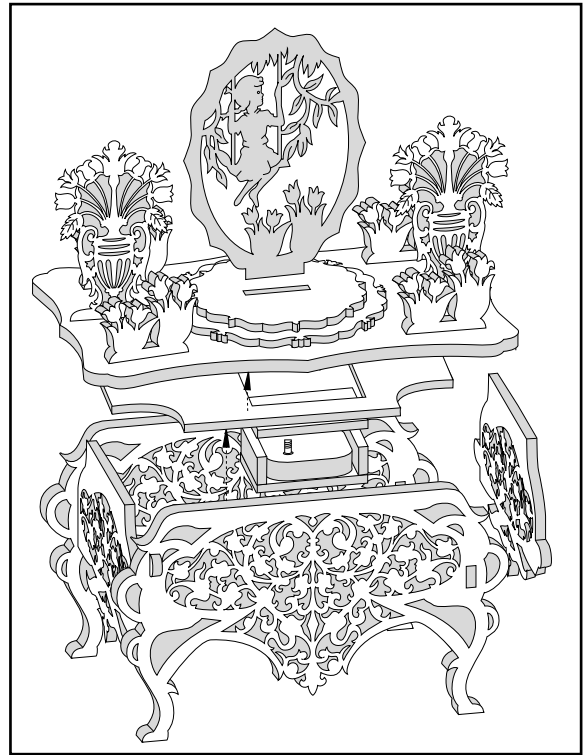

Turntable

 Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

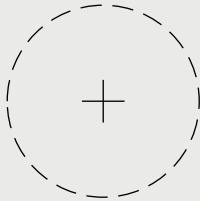




Dashed line indicates placement of Turntable Overlay.

Corner Tulips


Stock: 3/8", Cut 4.

   Secure to Top with glue or silicone.

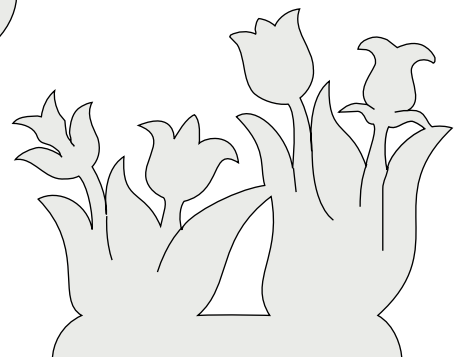

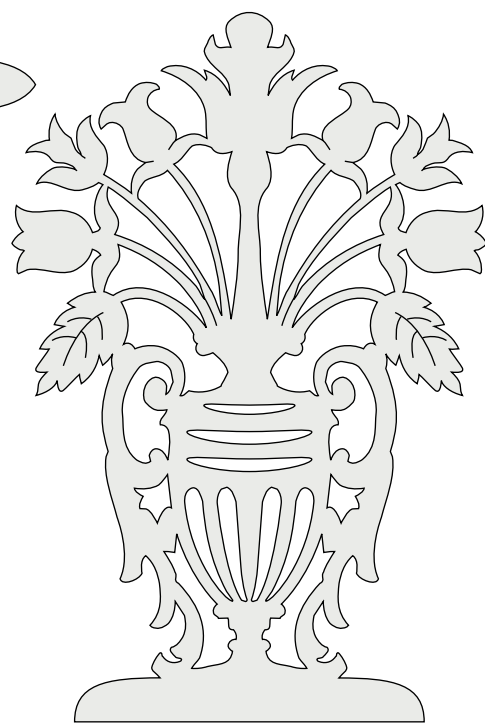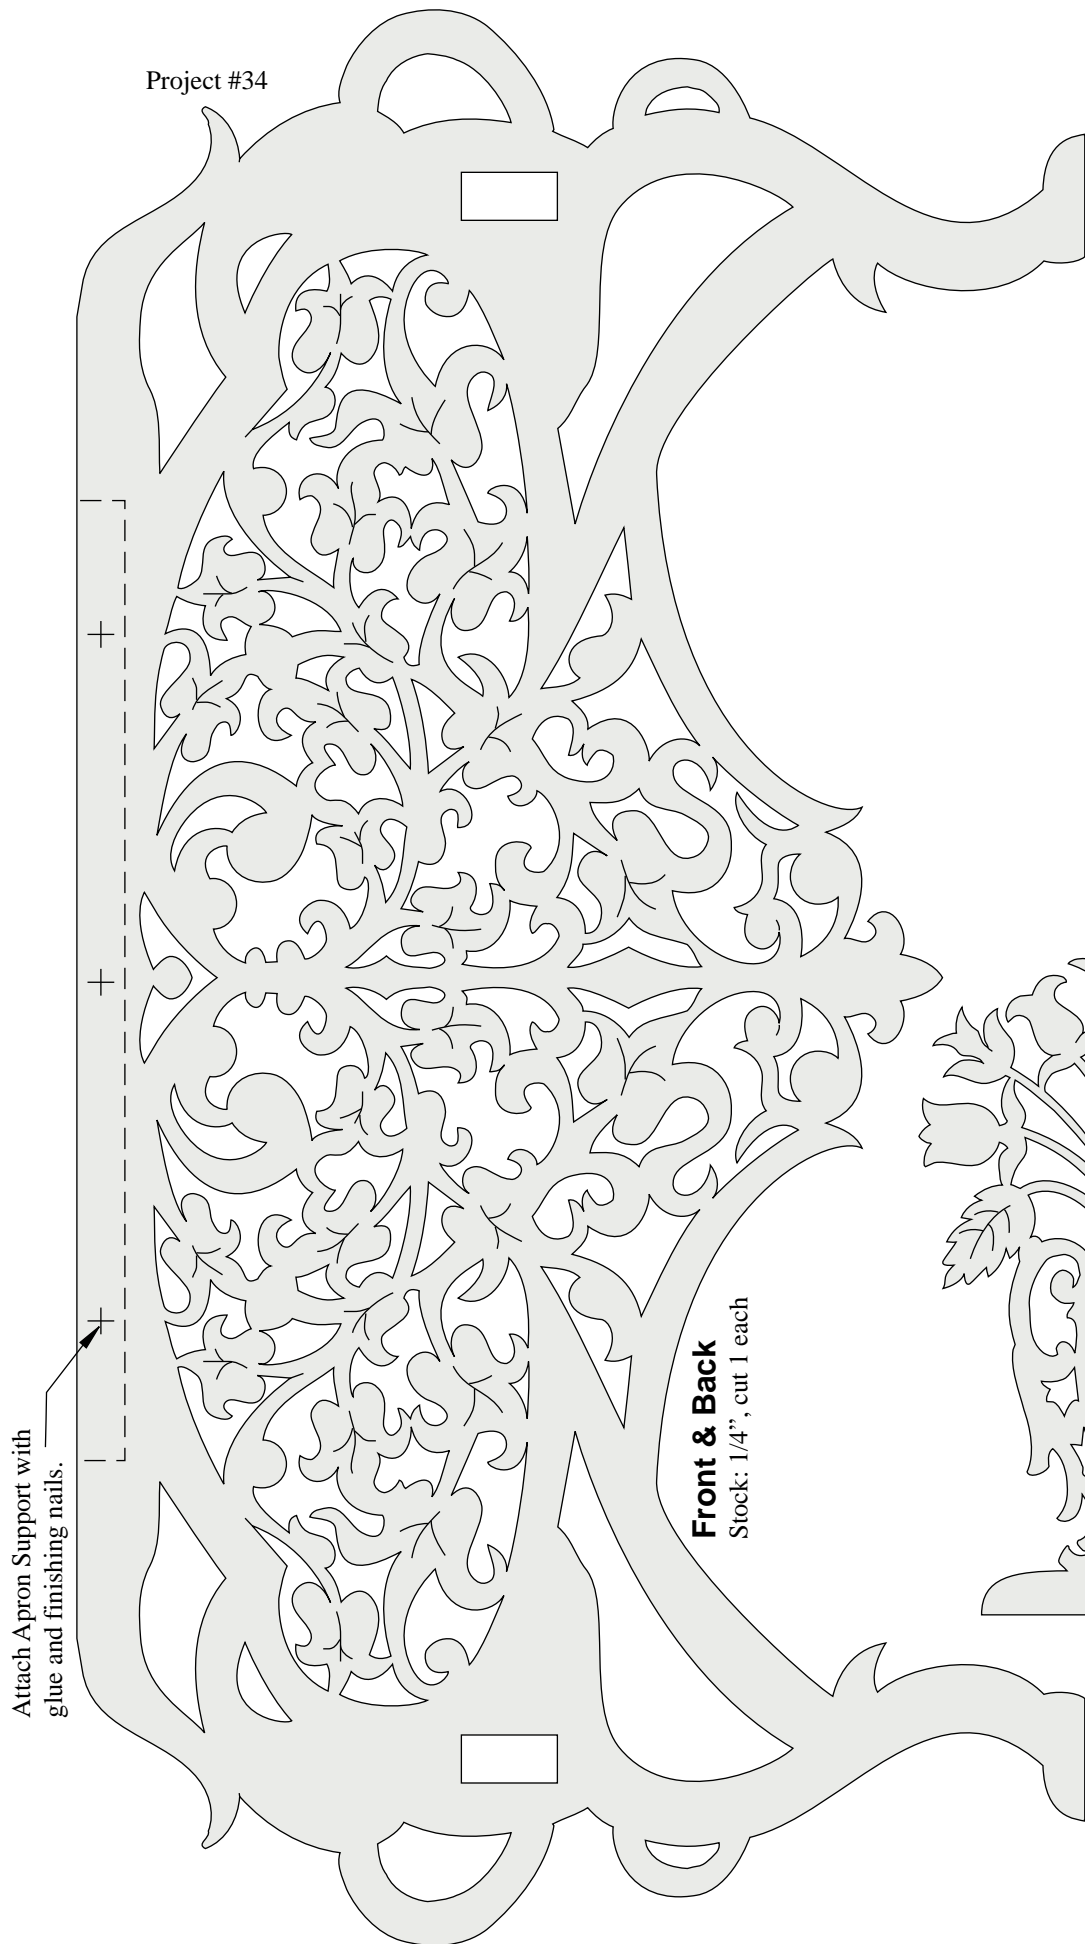


Bouquet
Stock: 3/8", cut 2

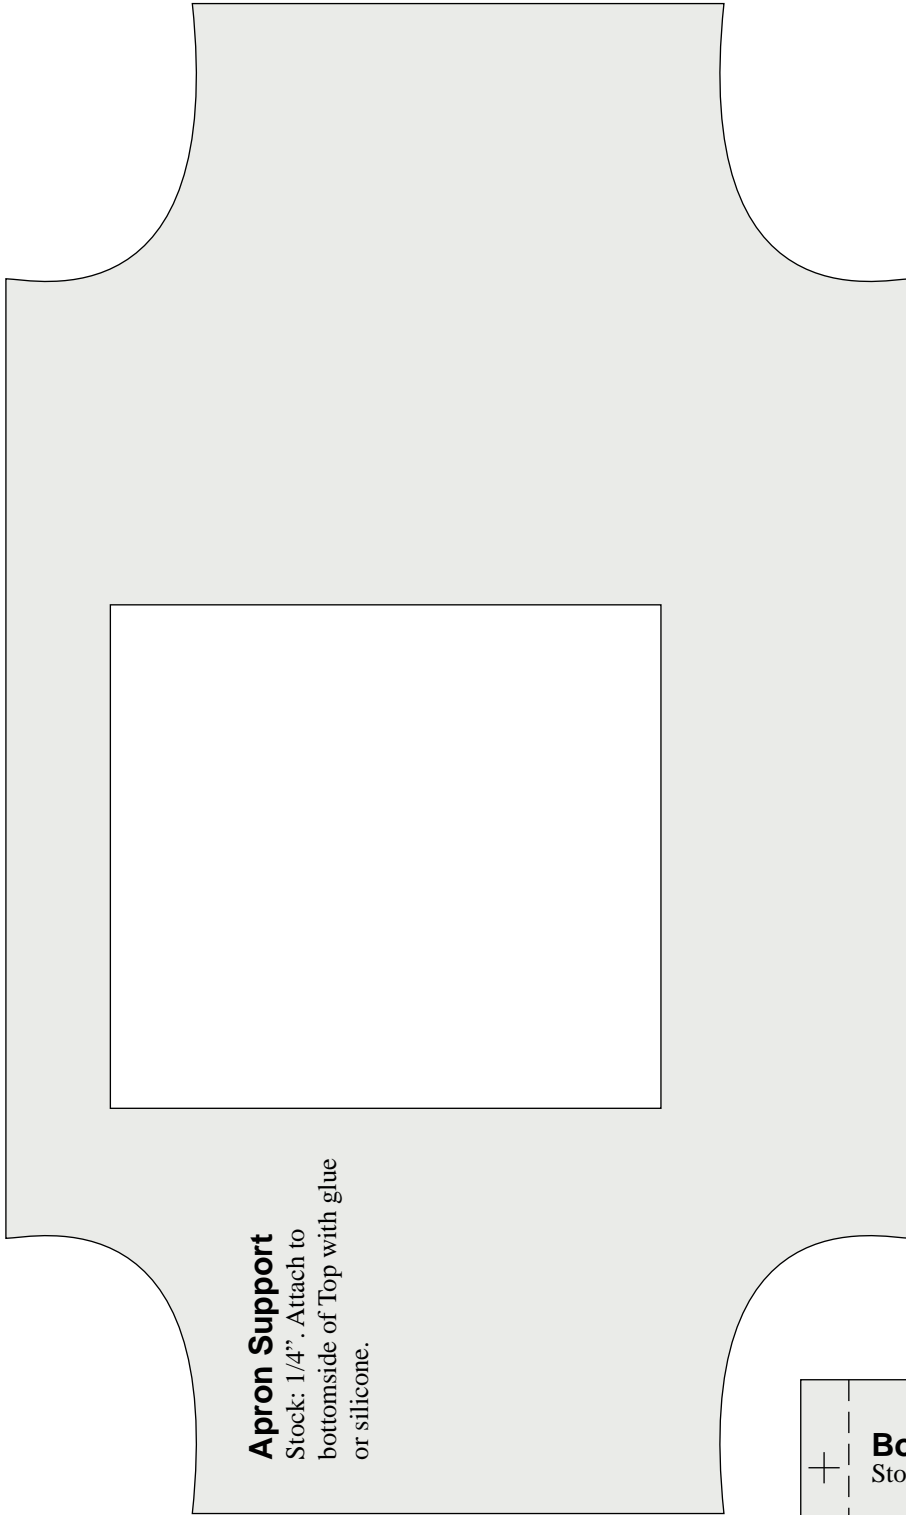 


Apron Support

 Stock: 1/4". Attach to
bottomside of Top with glue
or silicone.

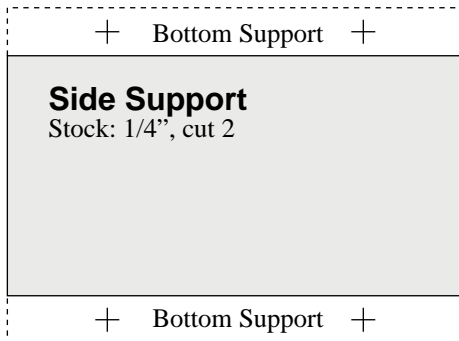

Side Support

 Stock: 1/4", cut 2

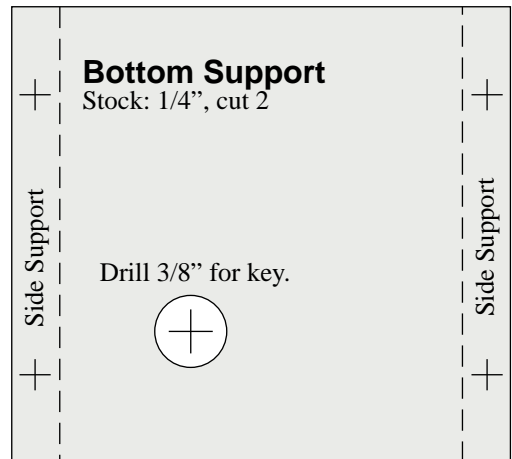

Bottom Support

Stock: 1/4", cut 2

Drill 3/8" for key.

 
 
Assembly Instructions

Assemble by first attaching the Sides to the Front and Back. Next attach the Apron Support. Now attach the Bottom Supports to the Side Supports. Insert the music box movement and secure in place with silicone. Attach the Leg assembly to the bottom of the Top and secure with glue or silicone. Insert the music box movement assembly into position on the underside of the Top and glue in place. Secure the Turntable Overlay to the Turntable and secure the figures into place. Then attach the wood Turntable to the metal turntable.

Project #34




Side

Stock: 1/4", cut 2

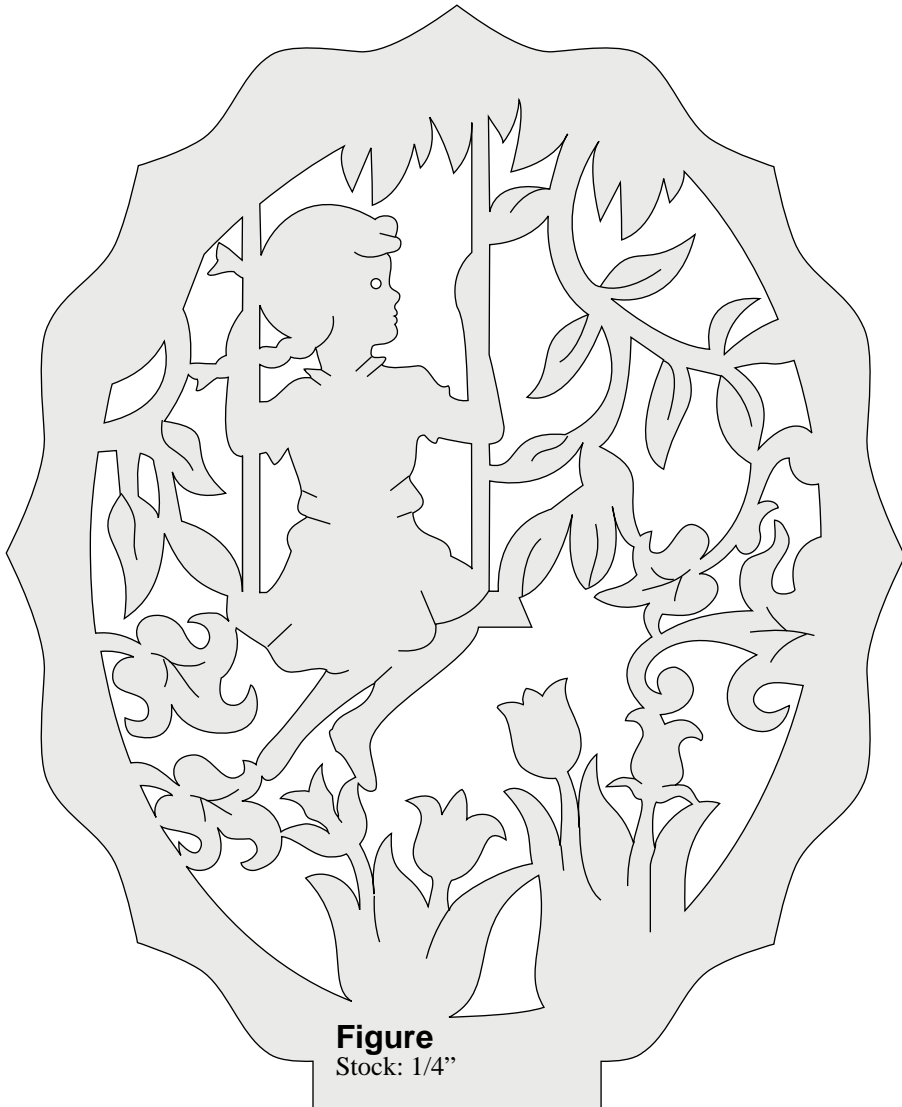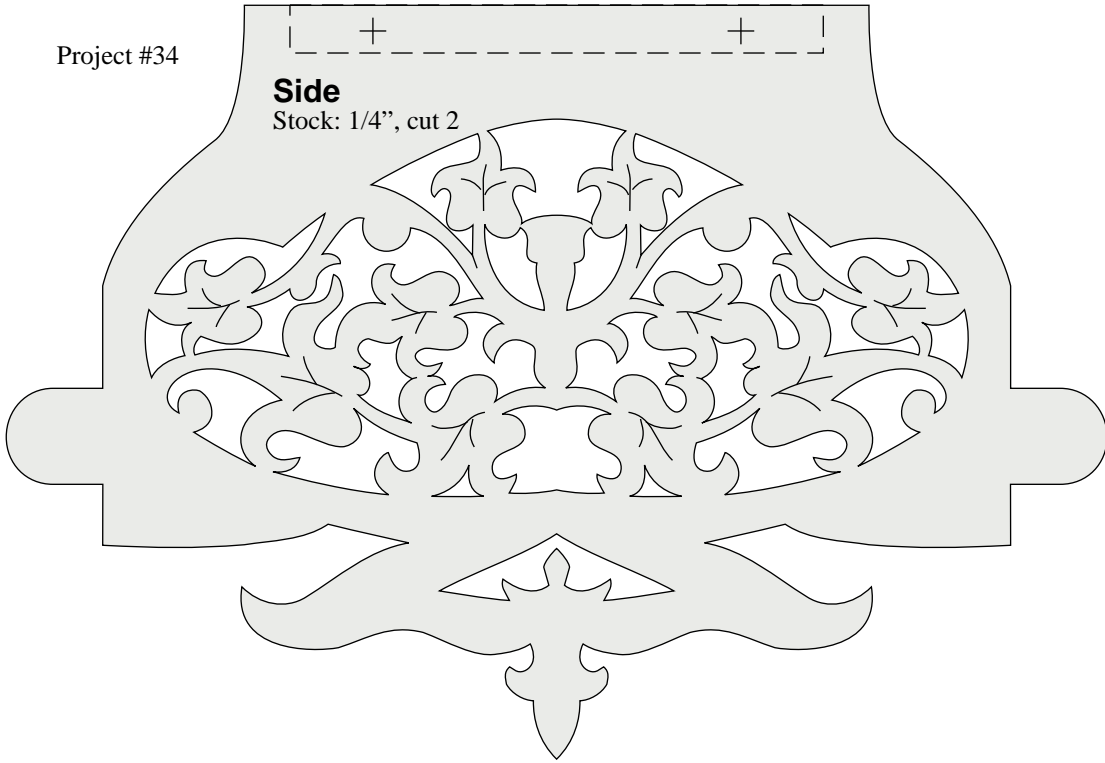

Figure

   
Stock: 1/4"

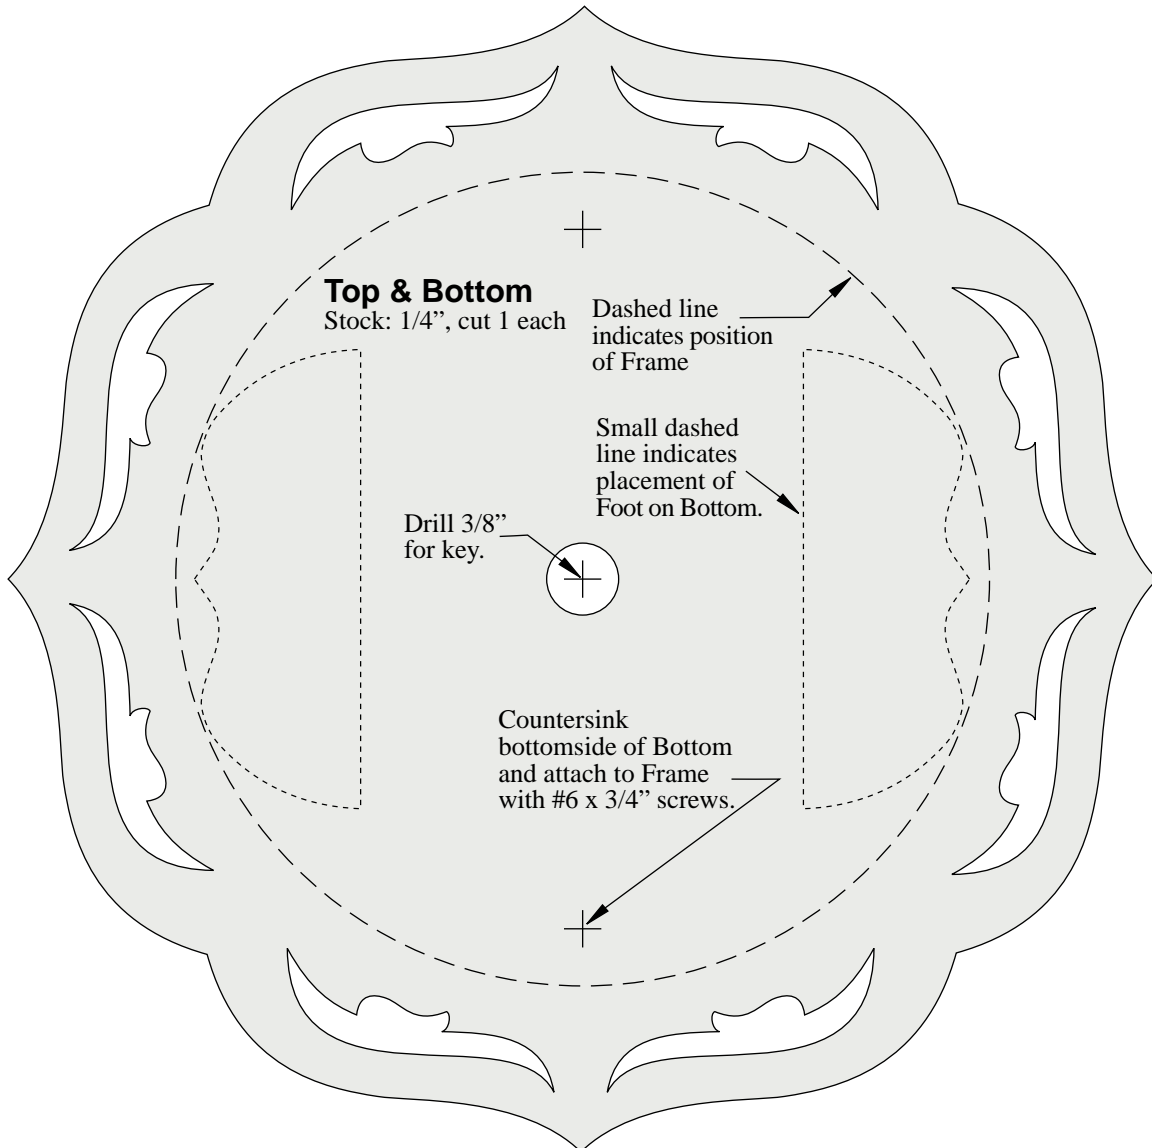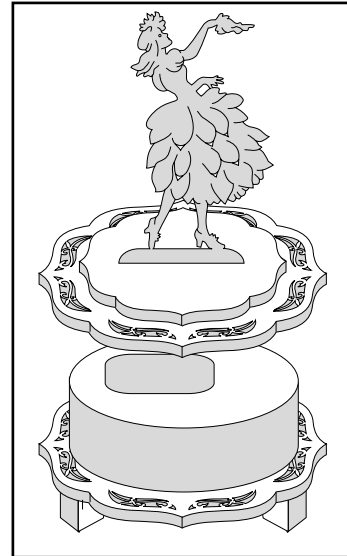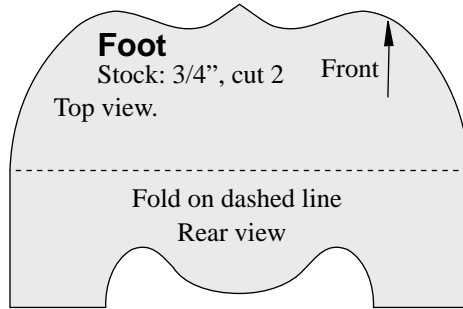

Project #35-58

Turntable

 Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

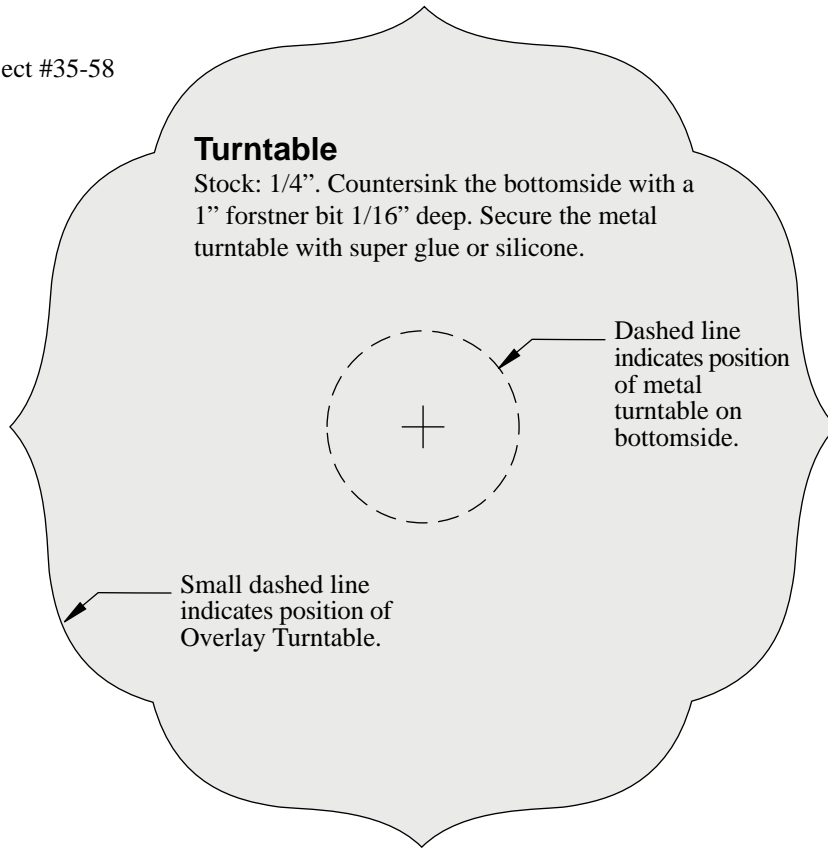


Frame


Stock: 1 1/2"

Circle indicates position of key and turntable shafts.




  Cut out for music box

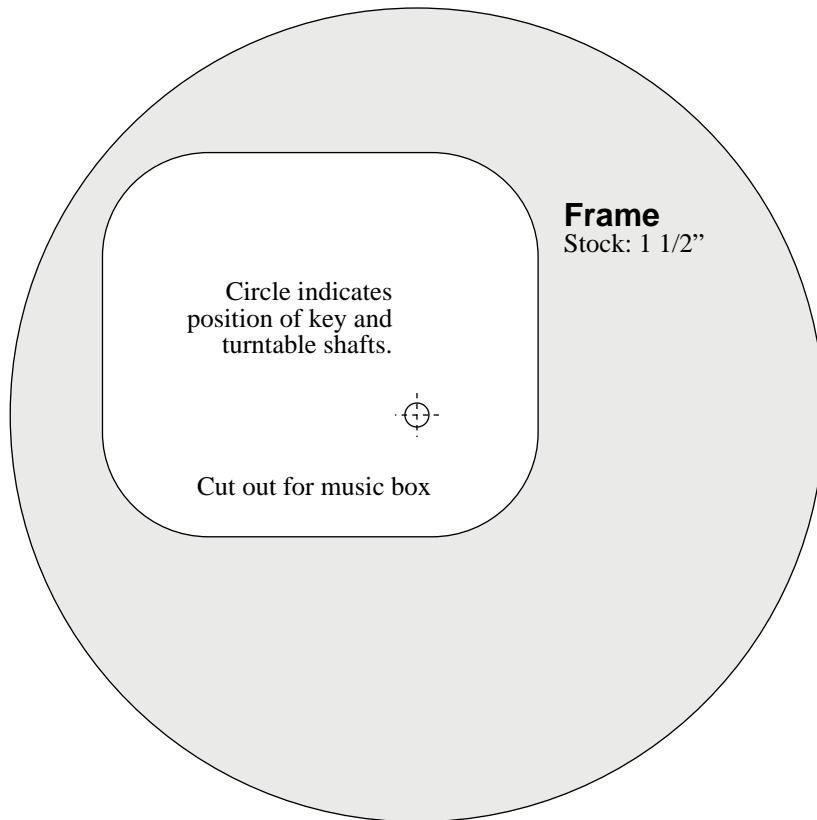


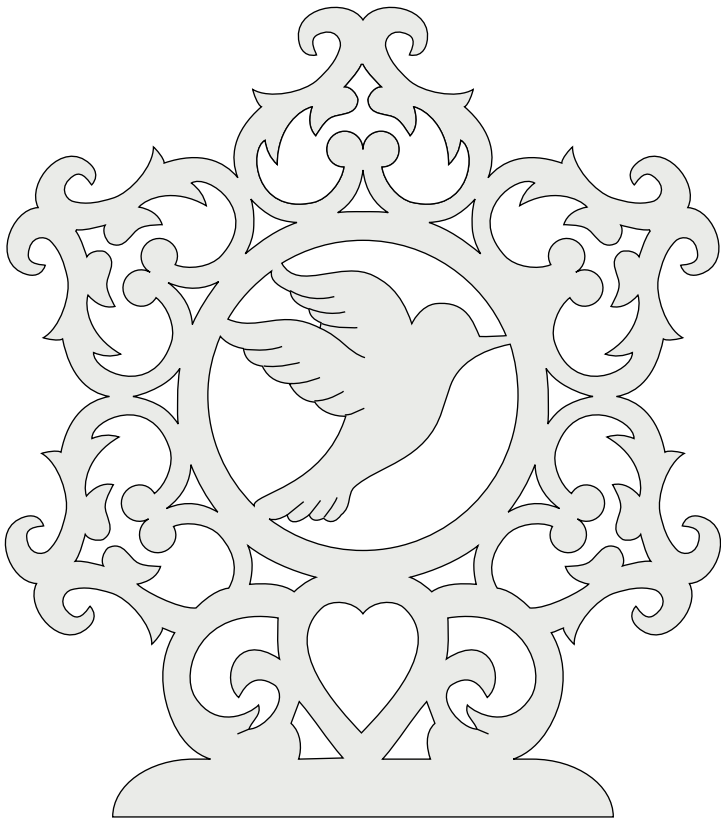

Bird & Hearts
Stock: 3/8"

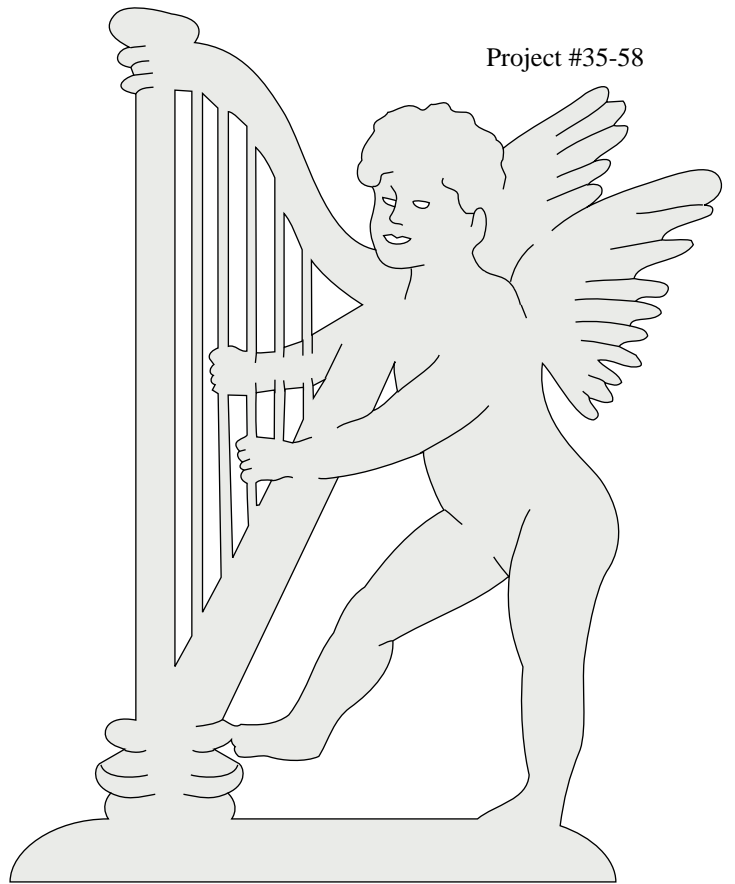 

Cupid & Harp
Stock: 3/8"

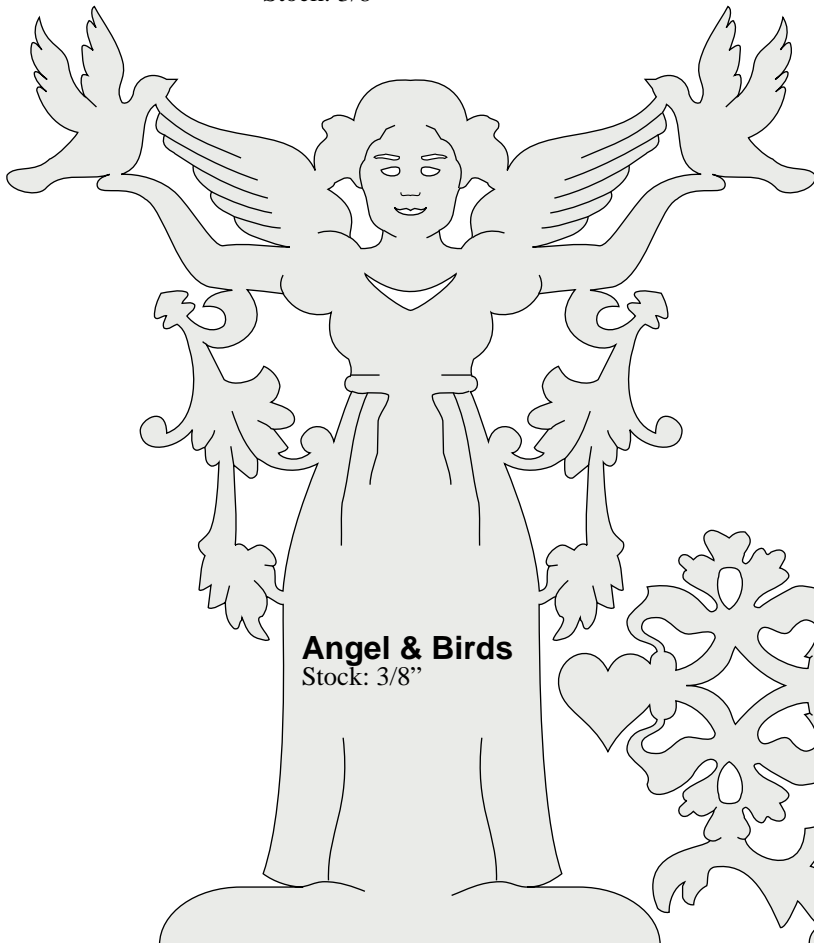 

Angel & Birds
Stock: 3/8"

 


Victorian Heart
Stock: 3/8"


Project #35-58




Gal
Stock: 3/8"

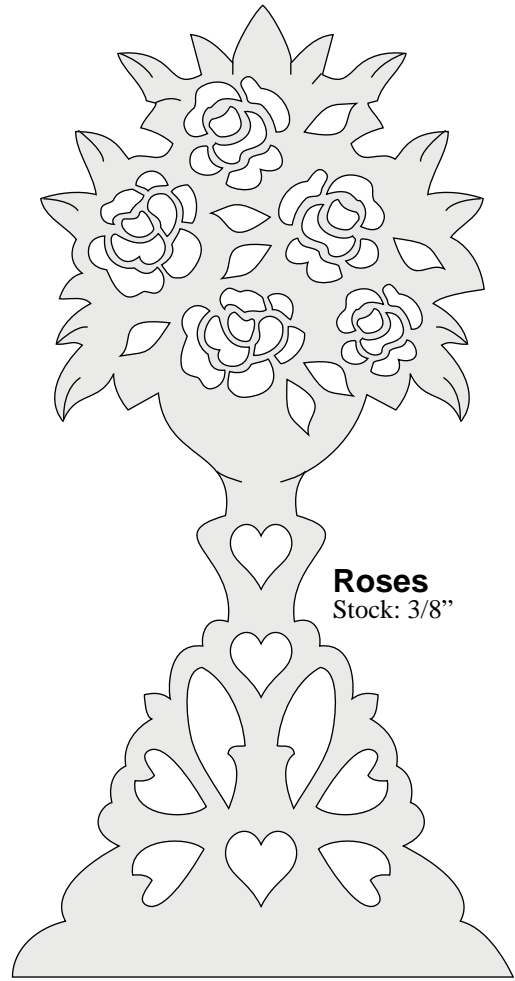


Roses
Stock: 3/8"

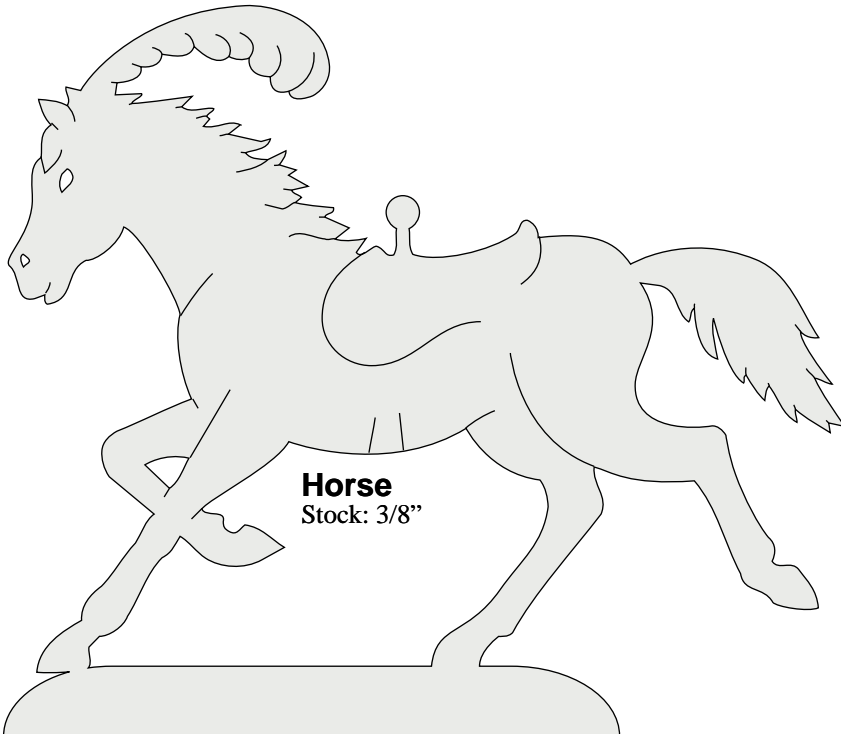 


Horse
Stock: 3/8"

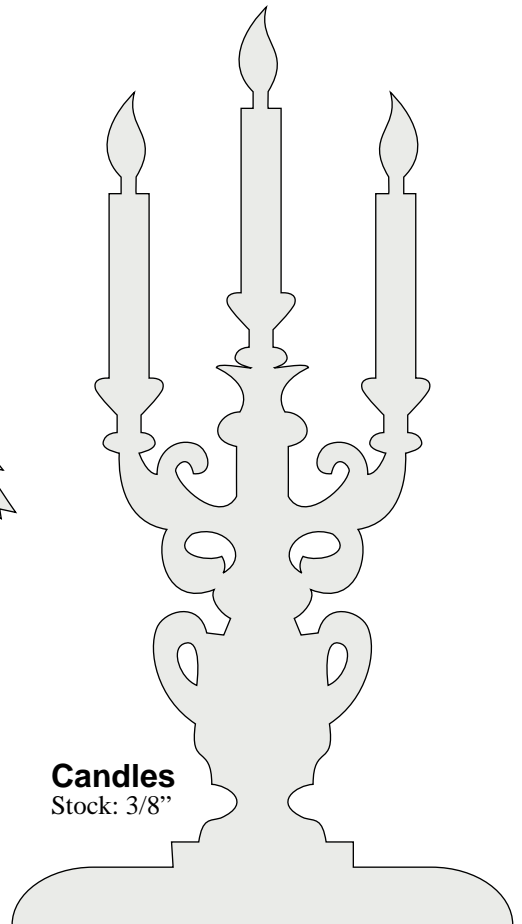 


Candles
Stock: 3/8"

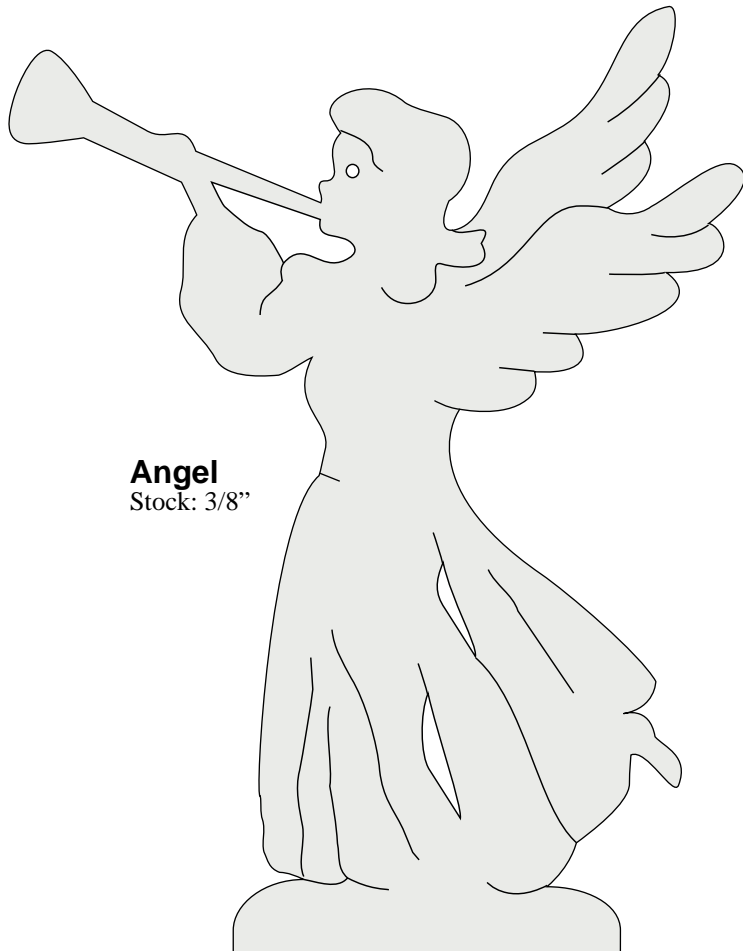 


Angel
Stock: 3/8"

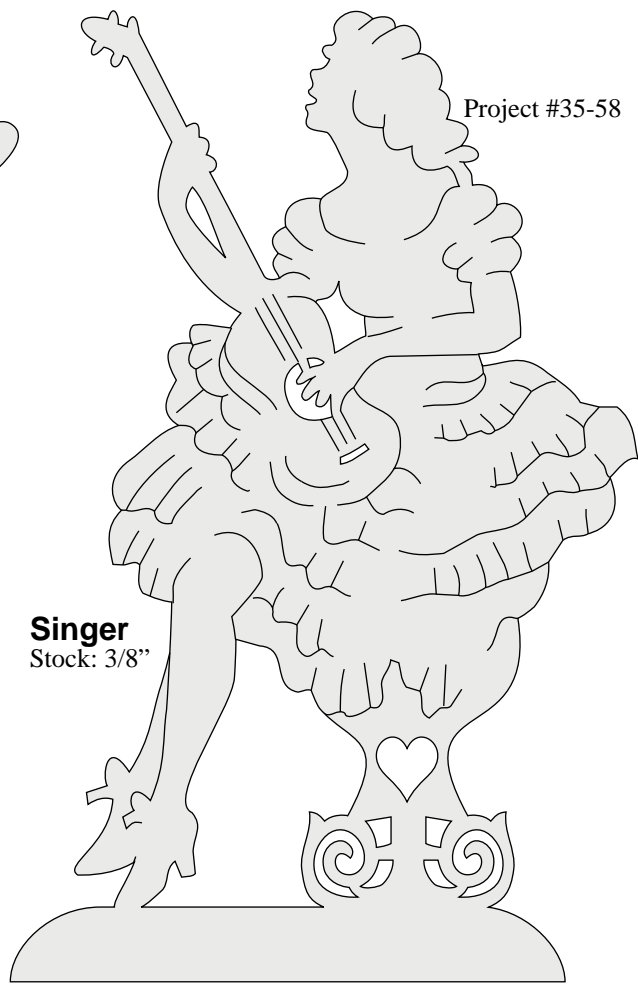 


Singer
Stock: 3/8"

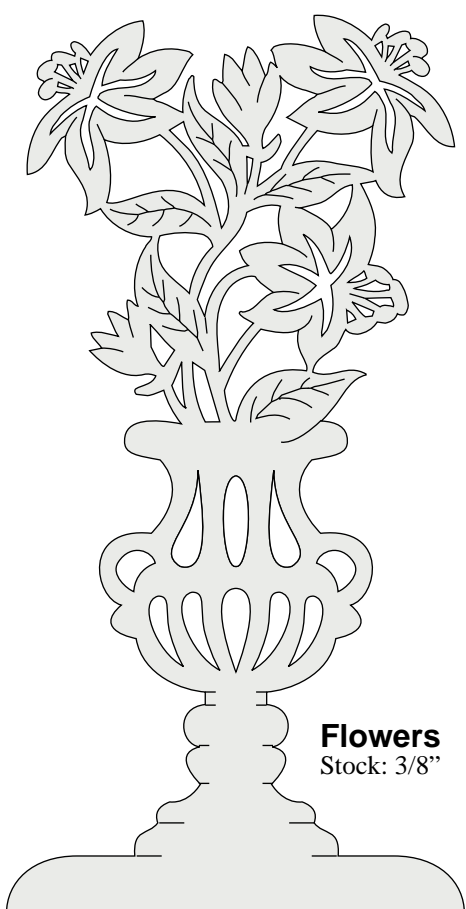 


Flowers
Stock: 3/8"

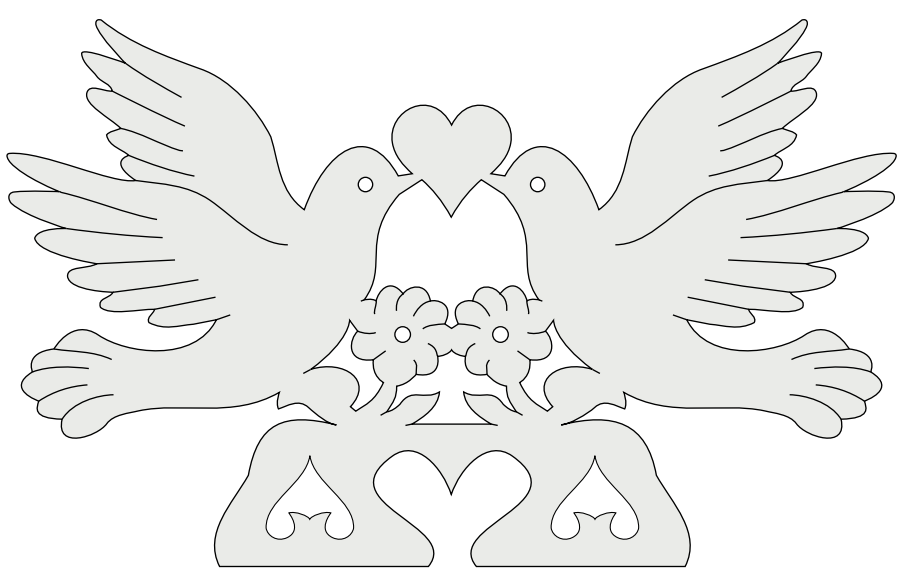 


Love Birds
Stock: 3/8"

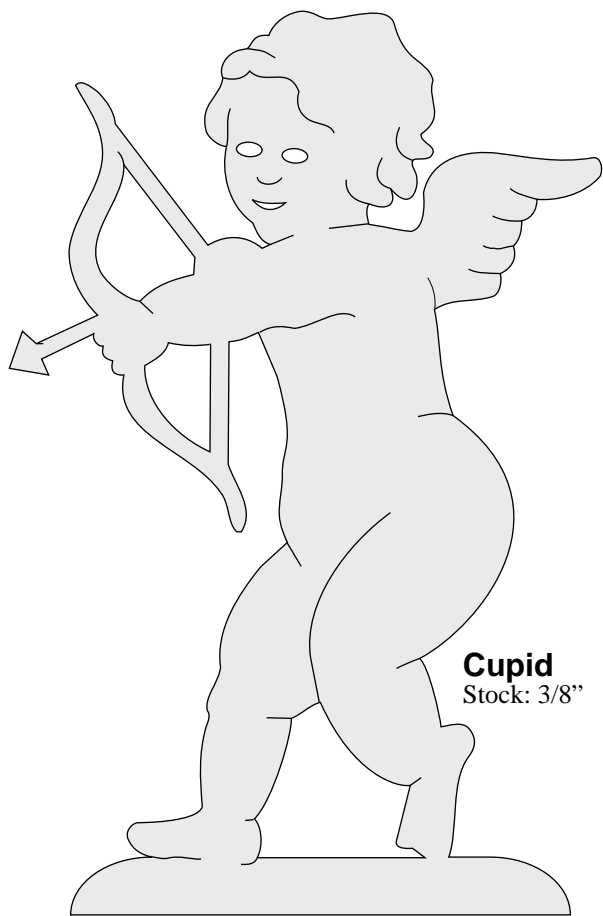 


Cupid
Stock: 3/8"

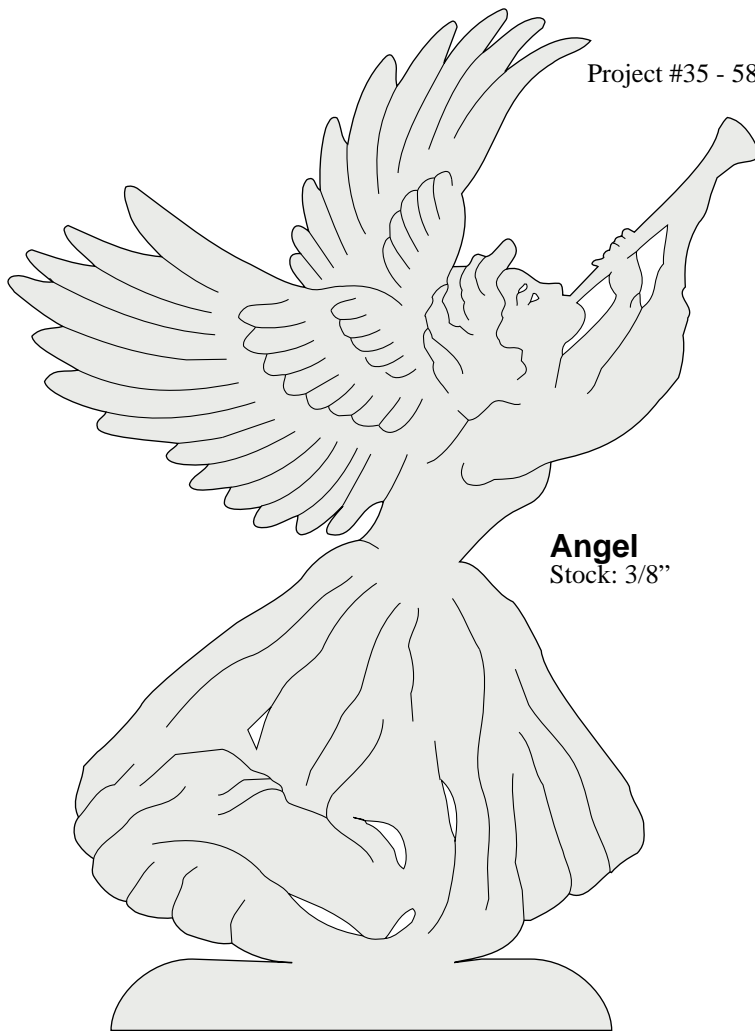 

Angel
Stock: 3/8"

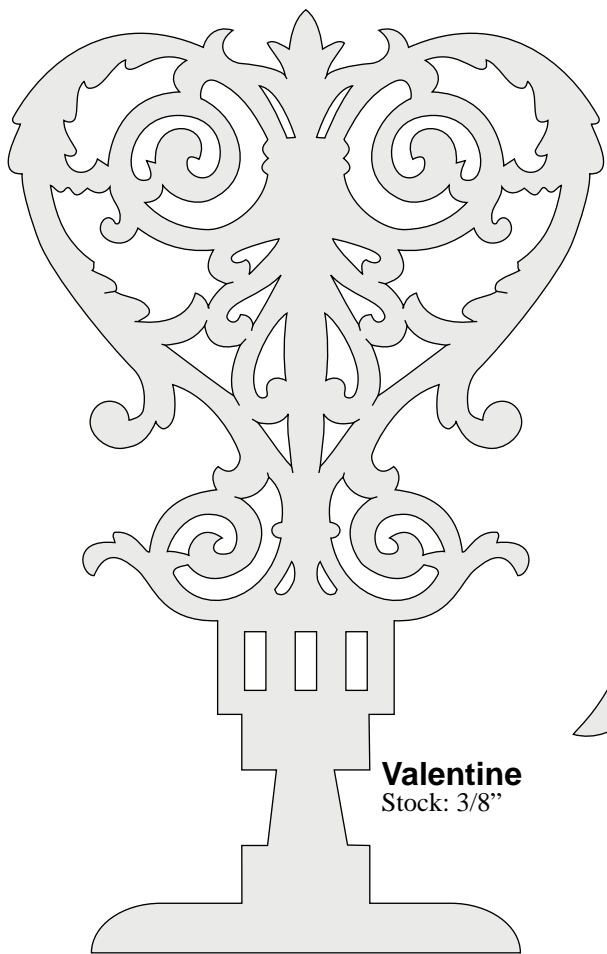 


Valentine
Stock: 3/8"

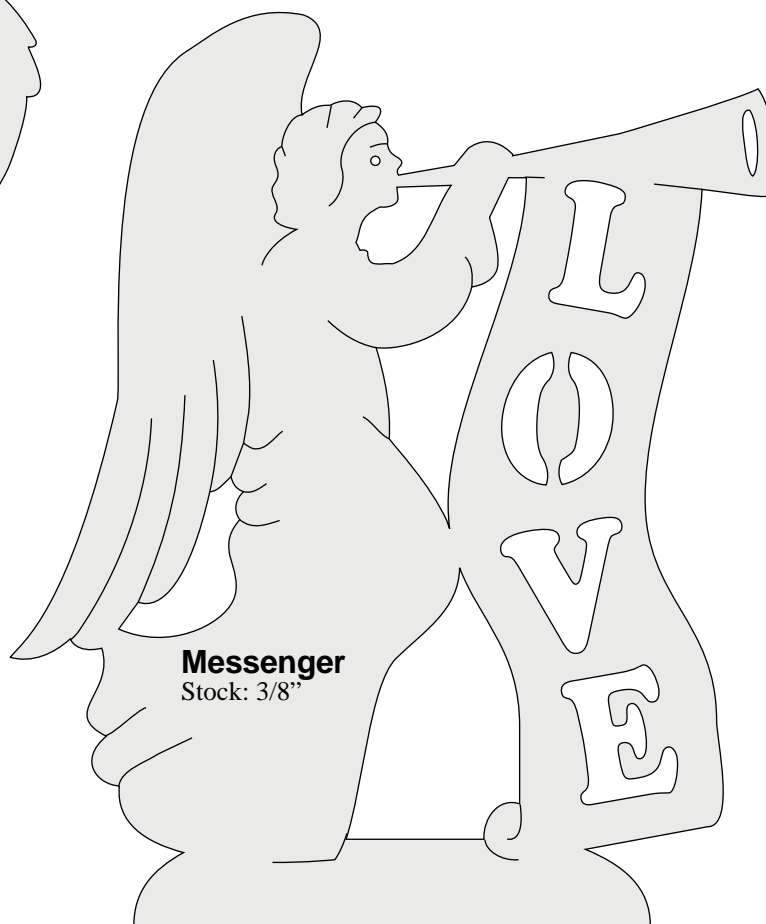 

Messenger
Stock: 3/8"

 
Project #35-58

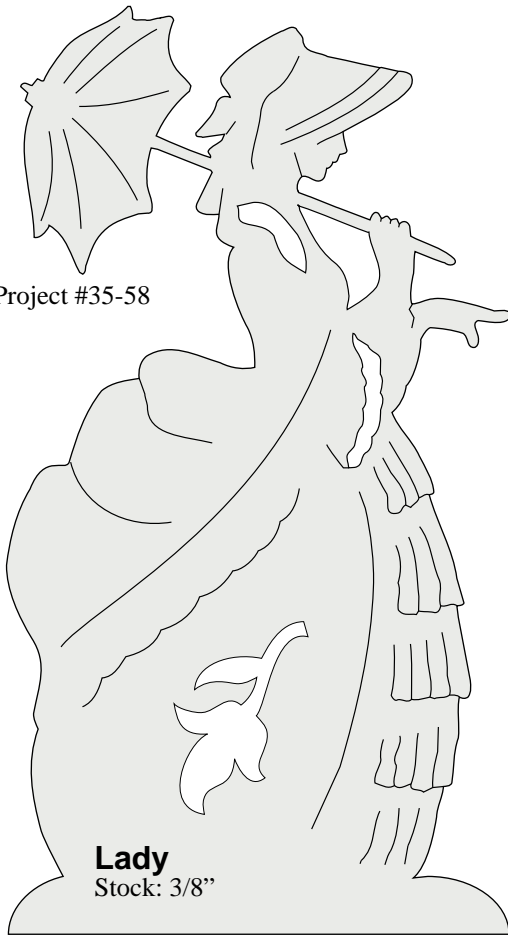


Lady
Stock: 3/8"



 Gentleman
Stock: 3/8"

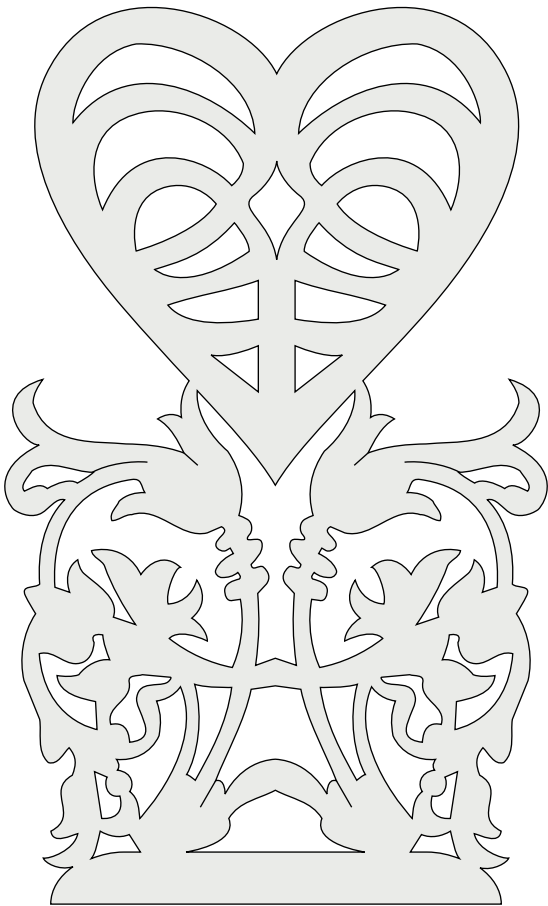

Flowerly Heart
Stock: 3/8"

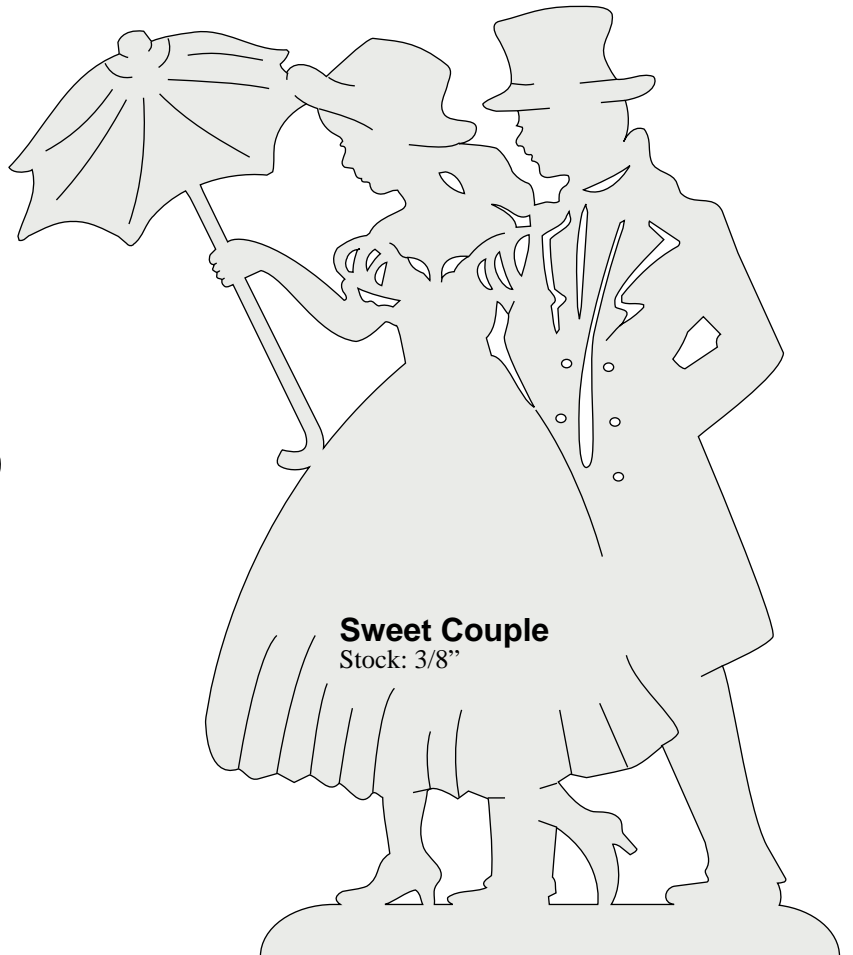 

Sweet Couple
Stock: 3/8"